

How to install the ULink/UStick drivers

1. **Download** the latest *Magic260 Uploader software* on www.americandj.eu
2. Very important to first **uninstall** preinstalled ULink/UStick drivers (using Magic 260 1.08 Software\driver\FTDIUNIN.EXE)
2. **Install** the new driver by right clicking ftd2xx.inf and select **INSTALL**, located in Magic 260 1.08 Software\Driver\
3. **Restart** computer
4. **Insert** ULink/UStick and **locate** the driver in the directory Magic 260 1.08 Software\Driver\

NOTE:

The Ulink black box side must be connected to the computer! Otherwise the computer will not recognize the Magic260

How to upload fixtures into the Magic260

(Can only be done by using the ULink cable)

Make sure Magic260 is connected with ULink cable and ULink drivers are installed properly.

1. Enter the menu of the magic260 - **Load Fixture File** -, press **Enter**, select **PC**
2. Select the fixtures (.mff), which needs to be uploaded with the *Magic260 Uploader software* (ULink Form).
3. Press **SAVE** to save the Fixture List (.wcn)
4. Press **Link Device**, *Magic Save* will open
5. Press **Select Ulink**, press **Send File**, open **filename.wcn**
6. When fixture list (.wcn) is ready with uploading, switch the magic260 **OFF** and **ON**

NOTE that you can only upload one fixture list, fixtures not in the uploaded list will be deleted from the magic260