

## DW PENDANT™

user manual

©2016 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

**ELATION PROFESSIONAL** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

**Elation Professional USA** | 6122 S. Eastern Ave. | Los Angeles, CA. 90040  
 323-582-3322 | 323-832-9142 fax | [www.elationlighting.com](http://www.elationlighting.com) | [info@elationlighting.com](mailto:info@elationlighting.com)

**Elation Professional B.V.** | Junostraat 2 | 6468 EW Kerkrade, The Netherlands  
 +31 45 546 85 66 | +31 45 546 85 96 fax | [www.elationlighting.eu](http://www.elationlighting.eu) | [info@elationlighting.eu](mailto:info@elationlighting.eu)



## DOCUMENT VERSION

**Due to additional product features and/or enhancements, an updated version of this document may be available online.**

**Please check [www.elationlighting.com](http://www.elationlighting.com) for the latest revision/update of this manual, before beginning installation and/or programming.**

Date	Document Version	Software Versions ≥	DMX Channel Modes	Notes
11/11/16	1	1.03	1CH, 2CH, 3CH, 4CH, 5CH, 6CH, 7CH	Initial release.
03/22/17	1	1.05	1CH, 2CH, 3CH, 4CH, 5CH, 6CH, 7CH	Updated Software - Changed default DMX mode, added Look to No DMX mode, added White Balance setting, updated Strobe DMX values.

## CONTENTS

General Information	4
Warranty	6
Safety Instructions and Guidelines	7
Overview	9
Installation	10
System Menu	13
E-FLY Wireless DMX Set Up	18
Wireless Installation Location Guidelines	19
DMX Channel Functions And Values	20
Cleaning and Maintenance	22
Technical Specifications	23
Optional Accessories	25

## GENERAL INFORMATION

### INTRODUCTION

Congratulations, you have just purchased one of the most innovative and reliable lighting fixtures on the market today! This fixture has been designed to perform reliably for years when the guidelines in this booklet are followed. Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this unit. These instructions contain important information regarding safety during use and maintenance.

### UNPACKING

Every fixture has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your unit for damage and be sure all accessories necessary to operate the unit have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this unit to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

### BOX CONTENTS

- powerCON Cable

## **CUSTOMER SUPPORT**

Elation Professional® provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at [www.elationlighting.com](http://www.elationlighting.com) for any comments or suggestions. For service related issue please contact Elation Professional®.

### **ELATION SERVICE USA - Monday - Friday 8:00am to 5:00pm PST**

**Voice: 323-582-3322**

**Fax: 323-832-9142**

E-mail: [support@elationlighting.com](mailto:support@elationlighting.com)

### **ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET**

**Voice: +31 45 546 85 30**

**Fax: +31 45 546 85 96**

E-mail: [support@elationlighting.eu](mailto:support@elationlighting.eu)

## **WARRANTY REGISTRATION**

Please complete and mail in the enclosed warranty card or register online: <http://www.elationlighting.com/Login.aspx> to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

## **IMPORTANT NOTICE!**

**There are no user serviceable parts inside this unit. Do not attempt any repairs yourself; doing so will void your manufactures warranty. Damages resulting from modifications to this fixture and/or the disregard of safety and general user instructions found in this user manual void the manufactures warranty and are not subject to any warranty claims and/or repairs.**

## LIMITED WARRANTY

A. Elation Professional® hereby warrants, to the original purchaser, Elation Professional® products to be free of manufacturing defects in material and workmanship for a period of two years (730 days), and Elation Professional® product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days), from the original date of purchase. This warranty excludes discharge lamps and all product accessories. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the Elation Professional® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional® will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional® shall have no liability what so ever for loss and/or or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional® factory unless prior written authorization was issued to purchaser by Elation Professional®; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.

D. This is not a service contract, and this warranty does not include any maintenance, cleaning or periodic check-up. During the periods as specified above, Elation Professional® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional®. All products covered by this warranty were manufactured after January 1, 1990, and bare identifying marks to that effect.

E. Elation Professional® reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional® be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.

G. This warranty is the only written warranty applicable to Elation Professional® products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

## SAFETY INSTRUCTIONS AND GUIDELINES

This fixture is an extremely sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. The manufacturer of this device is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging parts (omega brackets) included with this fixture should be used for installation. Any modifications to the fixture and/or the mounting hardware included will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.



**PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED**

**DO NOT PLUG FIXTURE INTO A DIMMER PACK!**



**NEVER OPEN THIS FIXTURE WHILE IN USE!**

**UNPLUG POWER BEFORE SERVICING FIXTURE!**

**NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT!**

**KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!**



**INDOOR / DRY LOCATIONS USE ONLY!**

**DO NOT EXPOSE FIXTURE TO RAIN AND MOISTURE!**



**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!**


**RETINA INJURY RISK - MAY INDUCE BLINDNESS!**

**SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!**

## SAFETY INSTRUCTIONS AND GUIDELINES

- **DO NOT TOUCH** the fixture housing during operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before serving.
- **DO NOT** shake fixture, avoid brute force when installing and/or operating fixture.
- **DO NOT** operate fixture if the power cord has become frayed, crimped and/or damaged. If the power cord is damaged, replace it immediately with a new one of similar power rating.
- **DO NOT** block any air ventilation slots. All fan and air inlets must remain clean and never blocked. Allow approx. 6" (15cm) between fixture and other devices or a wall for proper cooling.
- When installing fixture in a suspended environment, always use mounting hardware that is no less than M10 x 25 mm, and always install fixture with an appropriately rated safety cable.
- Always disconnect fixture from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end, never pull out the plug by tugging the wire portion of the cord.
- During the initial operation of this fixture, a light smoke or smell may emit from the interior of the fixture. This is a normal process and is caused by excess paint in the interior of the casing burning off from the heat associated with the lamp and will decrease gradually over time.
- Consistent operational breaks will ensure the fixture will function properly for many years to come.
- Use the original packaging and materials to transport the fixture in for service.

## OVERVIEW

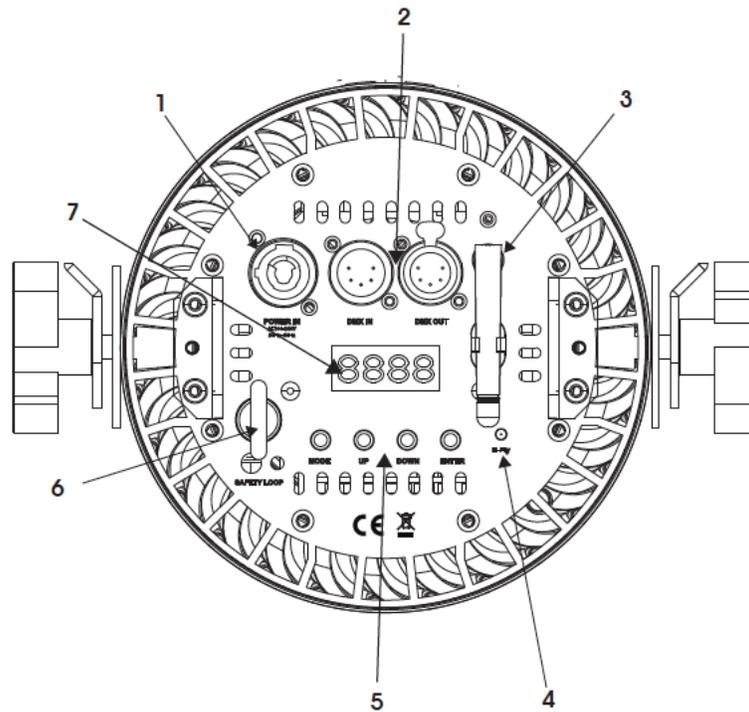

1. powerCON IN
2. 5pin DMX IN/OUT
3. E-FLY Wireless DMX Antenna
4. E-FLY Signal Indicator
5. MODE, UP, DOWN, ENTER Buttons
6. Safety Cable Attachment Point
7. LCD MENU Control Display

## INSTALLATION



### **FLAMMABLE MATERIAL WARNING**

Keep fixture at least 5.0 ft (1.5m) away from any flammable materials, decorations, pyrotechnics, etc.



### **ELECTRICAL CONNECTIONS**


A qualified electrician should be used for all electrical connections and/or installations.

## CAUTIONS


- For added protection, mount the fixture in areas outside walking paths, seating areas, or in areas where unauthorized personnel might reach the fixture.
- Ambient operating temperature range for this fixture is **5° to 113°F. (-15° to 45°C)**  
Do not use the fixture under or above this temperature.
- Before mounting the fixture to any surface, make sure the installation area can hold a minimum point load of 10 times the weight of the fixture.
- Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.
- Never stand directly below the device when mounting, removing or servicing.

## CLAMP INSTALLATION

The fixture provides a removable adjustable yoke rigging bracket and a removable pendant style hanging rigging bracket. (See the illustration below). When mounting this fixture to truss be sure to secure an appropriately rated clamp to the fixture using an M10 screw fitted through the center hole of the yoke or pendant style hanging brackets. Regardless of how the fixture is installed, be sure to attach an appropriate **Safety Cable** (not included) to the fixture using the safety cable rigging point integrated on the rear of the fixture.



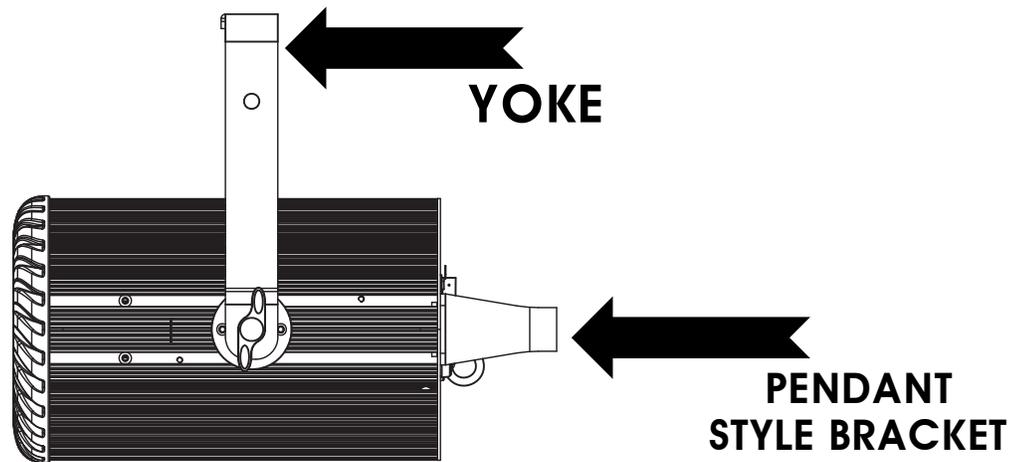


## SAFETY CABLE RIGGING POINT

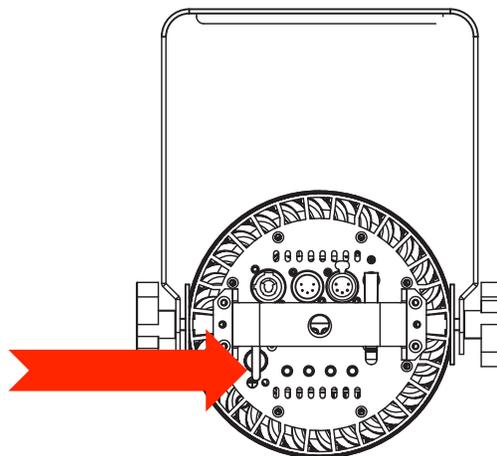

## RIGGING

Overhead rigging requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury. Fixture is fully operational in the specific mounting positions illustrated below.

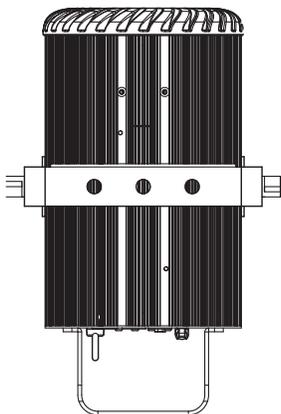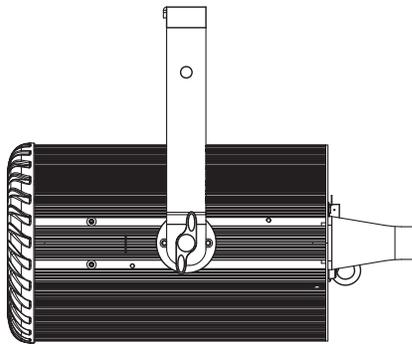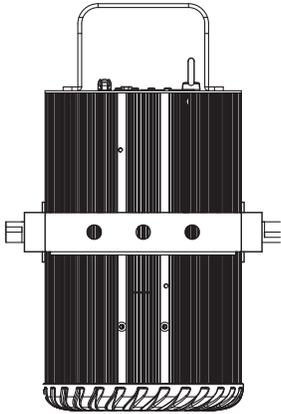


### **S A F E T Y C A B L E**

**ALWAYS ATTACH A SAFETY CABLE  
WHENEVER INSTALLING THIS FIXTURE  
IN A SUSPENDED ENVIRONMENT TO  
ENSURE THE FIXTURE WILL NOT DROP  
IF THERE THE RIGGING FAILS.**

## SYSTEM MENU

The fixture comes with an easy to navigate system menu. The control panel (see image below) located on the rear of the fixture allows you to access the main menu and make all necessary adjustments to the fixture. During normal operation, pressing **MODE** button once will access the fixture's main menu. Once in the main menu you can navigate through the different functions and access the sub-menus with the **UP**, and **DOWN** buttons. Once you reach a field that requires adjusting, press the **ENTER** button to activate that field and use the **UP** and **DOWN** buttons to adjust the field. Pressing the **ENTER** button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the **MODE** button.

- ▶ **NOTE:** The LCD Menu Control Display will shut OFF and lockout after 30 seconds of no use. Press and hold the **MODE** button for 10 seconds to unlock the LCD display.

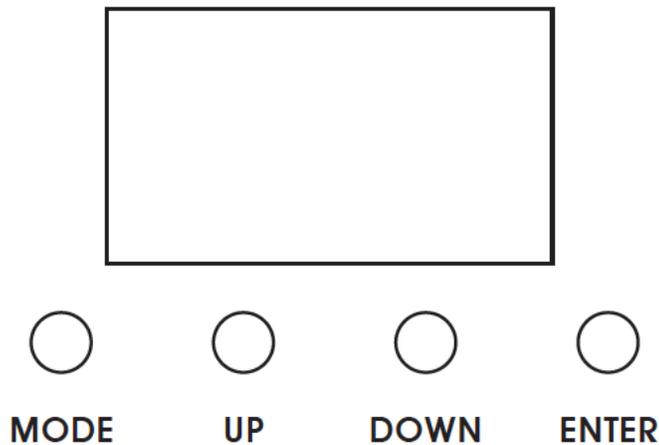

### INFORMATION DISPLAYED DURING INITIAL POWER ON

When the fixture is initially powered ON, the display shows the following information:



**ELATION® DW PENDANT™  
SYSTEM MENU**

Supports Software Versions: ≥ 1.03

MENU	OPTIONS / VALUES (Default Settings in BOLD)	DESCRIPTION
DMX MODE ADDR:xxx	ADDR: <b>001</b> - xxx	Set Fixture DMX Address.
CHANNEL	<b>1CH</b> , 2CH, 3CH, 4CH, 5CH, 6CH, 7CH	Set desired DMX Channel Mode.
SLAVE M O D E		Set unit to Slave Mode.
Look Store :xx	Store: <b>01</b> -23	Select Internal Macro. See INTERNAL MACRO MENU for more details.
Frequenc xxxxHz	<b>1200Hz</b> , 2400Hz, 4800Hz, 9600Hz	Set LED Refresh Rate Frequency to eliminate camera flicker and glare.
Wireless CH:xx	CH: <b>00</b> -14	Set E-FLY Wireless DMX Channel. <b>MUST BE SET TO SAME CHANNEL OF TRANSMITTER TO RECEIVE WIRELESS SIGNAL.</b>
Reset?	<b>No</b> , Yes	Reset fixture back to default settings.
Manual	CW:000- <b>255</b> WW:000- <b>255</b> S: <b>000</b> -255	Set RGBW and Strobe Values manually.
DimCurve	<b>Standard</b> , Stage, TV, Architec, Theatre	Set desired Dimming Curve Mode.
NO DMX	<b>Hold</b> , Blackout	Define how fixture reacts when NO DMX signal present.
TempUnit	<b>F</b> , C	Set the value the fixture temperature is displayed.
Temp Val	000° <b>F</b>	Internal LED temperature reading.
AutoLock	<b>OFF</b> , ON	Enable LCD display lockout feature which dims and locks the display after no use for 30 secs. When LCD display is locked, press and hold MODE button for 5 secs.
E-Fly	<b>OFF</b> , ON	Enable internal E-Fly Wireless DMX Transceiver.

### SYSTEM MENU CHANGE WITH SOFTWARE UPDATE VERSION 1.05


See highlighted menu items below which have been updated with this software update.

ELATION© DW PENDANT™ SYSTEM MENU		
Supports Software Versions: ≥ 1.05		
MENU	OPTIONS / VALUES (Default Settings in BOLD)	DESCRIPTION
DMX MODE ADDR:xxx	ADDR: <b>001</b> - xxx	Set Fixture DMX Address.
CHANNEL	1CH, 2CH, 3CH, <b>4CH</b> , 5CH, 6CH, 7CH	Set desired DMX Channel Mode.
SLAVE M O D E		Set unit to Slave Mode.
Look Store :xx	Store: <b>01</b> -23	Select Internal Macro. See INTERNAL MACRO MENU for more details.
Frequenc xxxxHz	<b>1200Hz</b> , 2400Hz, 4800Hz, 9600Hz	Set LED Refresh Rate Frequency to eliminate camera flicker and glare.
Wireless CH:xx	CH: <b>00</b> -14	Set E-FLY Wireless DMX Channel. <b>MUST BE SET TO SAME CHANNEL OF TRANSMITTER TO RECEIVE WIRELESS SIGNAL.</b>
Reset?	<b>No</b> , Yes	Reset fixture back to default settings.
Manual	CW:000- <b>255</b> WW:000- <b>255</b> S: <b>000</b> -255	Set RGBW and Strobe Values manually.
DimCurve	<b>Standard</b> , Stage, TV, Architec, Theatre	Set desired Dimming Curve Mode.
NO DMX	<b>Hold</b> , Look, Blackout	Define how fixture reacts when NO DMX signal present.
White BL	CW: <b>255</b> - 50 WW: <b>255</b> - 50	Set MAX intensity for CW and WW LEDs. <b>NOTE: Values do NOT get changed when fixture is Reset.</b>
TempUnit	<b>F</b> , C	Set the value the fixture temperature is displayed.
Temp Val	000° <b>F</b>	Internal LED temperature reading.
AutoLock	<b>OFF</b> , ON	Enable LCD display lockout feature which dims and locks the display after no use for 30 secs. When LCD display is locked, press and hold MODE button for 5 secs.
E-Fly	<b>OFF</b> , ON	Enable internal E-Fly Wireless DMX Transceiver.

ELATION© DW PENDANT™ INTERNAL MACRO MENU	
Specifications are subject to change without any prior written notice.	
MACRO	DESCRIPTION
Store 01	WW / CW Fade Fast Speed
Store 02	WW / CW Fade Medium Speed
Store 03	WW / CW Fade Slow Speed
Store 04	CW / WW Fade Fast Speed
Store 05	CW / WW Fade Medium Speed
Store 06	CW / WW Fade Slow Speed
Store 07	CW / WW Fast Speed (Fade is WW)
Store 08	CW / WW Medium Speed (Fade is WW)
Store 09	CW / WW Slow Speed (Fade is WW)
Store 10	CW=255; WW=0
Store 11	CW=235; WW=140
Store 12	CW=243; WW=80
Store 13	CW=200; WW=100
Store 14	CW=160; WW=200
Store 15	CW=250; WW=89
Store 16	CW=0; WW=250
Store 17	CW=0; WW=139
Store 18	CW=10; WW=255
Store 19	CW=92; WW=255
Store 20	CW=150; WW=150
Store 21	CW=0; WW=115
Store 22	CW=255; WW=50
Store 23	CW=50; WW=255

### Dim Curve

Select desired DIMMER CURVE MODE (**Standard**, Stage, TV, Architectural, Theatre).

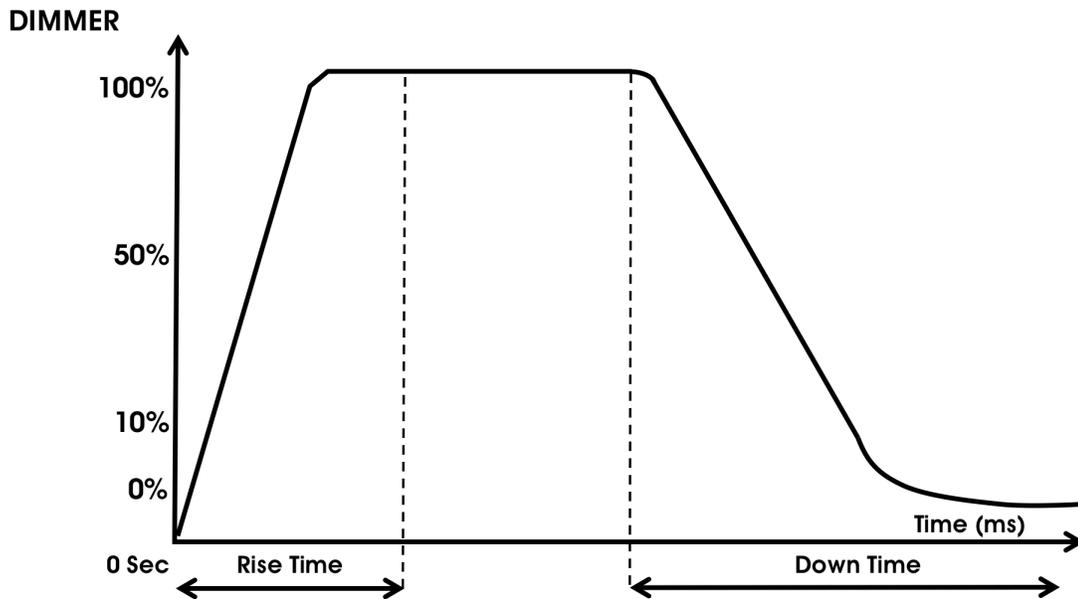

Dimming Curve Ramp Effect	0 sec Fade Time		1 sec Fade Time	
	Rise Time (ms)	Down Time (ms)	Rise Time (ms)	Down Time (ms)
Standard (default)	0	0	0	0
Stage	780	1100	1540	1660
TV	1180	1520	1860	1940
Architectural	1380	1730	2040	2120
Theatre	1580	1940	2230	2280

## E-FLY WIRELESS DMX SET UP



**BEFORE SETTING THE WIRELESS CHANNEL ON ANY E-FLY COMPATIBLE FIXTURE, MAKE SURE THE SOURCE E-FLY TRANSCEIVER DEVICE IS OFF.**

### TO RECEIVE WIRELESS E-FLY DMX SIGNAL

1. Make sure the source **E-FLY** wireless DMX Transceiver device is powered **OFF**.
2. Power the fixture **ON** and set the wireless channel (**0-14**) in the **Wireless Menu** to the same wireless channel of the source **E-FLY** DMX Transceiver network.
3. Turn wireless DMX to **ON** in the **Wifly Menu**.
4. Set the **DMX Channel Mode** in the **Channel Menu**.
5. Set fixture DMX address (**001-512**) in the **DMX Mode Menu**.

**FIXTURE MUST BE IN DMX MODE MENU TO RECEIVE THE E-FLY WIRELESS SIGNAL.**

6. If a wireless DMX connection has been made with the fixture, the **E-FLY™** signal Indicator on the fixture will illuminate.
7. Repeat this process for all **E-FLY** compatible fixtures in your **E-FLY** wireless network, making sure all fixtures are assigned the same wireless channel (**0-14**) and **DMX Channel Mode**, wireless DMX is set to **ON**, and are all in **DMX Mode Menu**.
8. After all fixtures in your **E-FLY** wireless network have been set and powered **ON**, then power **ON** the source **E-FLY** DMX Transceiver device.



**MAKE SURE NOT TO NAVIGATE TO ANY OTHER SYSTEM MENUS ON ANY OF THE FIXTURES IN YOUR E-FLY WIRELESS NETWORK ONCE YOU HAVE ESTABLISHED A WIRELESS CONNECTION. DOING SO WILL DISRUPT THE WIRELESS SIGNAL CONNECTION AND THE SOURCE E-FLY WIRELESS DMX TRANSCEIVER DEVICE WILL REQUIRE A POWER RESET.**

## WIRELESS INSTALLATION LOCATION GUIDELINES

There are many factors that affect and/or interrupt a wireless signal such as walls, glass, metal, objects, and people. Therefore it is highly recommended to:

- Install devices a minimum of 9.8 ft. (3m) above audiences and/or ground level
- Adjust the wireless antenna in a vertical upright position
- Position devices in direct line of sight of the controlling E-FLY device

Careful planning and testing of the selected installation location is critical to ensure optimum and reliable wireless operation.

**9.8 ft (3m)  
Above Ground**



# DMX CHANNEL FUNCTIONS AND VALUES

ELATION® DW PENDANT™							VALUE	FUNCTION
DMX Channel Values / Functions (7 DMX Channels)								
Supports Software Versions: ≥ 1.03								
Features are subject to change without any prior written notice.								
DMX CHANNEL MODE								
1CH	2CH	3CH	4CH	5CH	6CH	7CH		
	1	1	1	1	1	1	0	COOL WHITE Cool White (0=Black - 255=100%)
	2	2	2	2	2	2	0	WARM WHITE Warm White (0=Black - 255=100%)
1		3				3		COLOR TEMPERATURE
							0	OFF
							1-255	2,900K - 6,800K (1=2,900K - 255 = 6,800K)
					3	4		FLASH / STROBE
							0-31	OFF
							32-95	Variable Strobe SLOW to FAST
							96-127	Fade ON, Fade OFF SLOW to FAST
							128-159	Fade ON, Snap OFF SLOW to FAST
							160-191	Snap ON, Fade OFF SLOW to FAST
							192-223	Random Strobe SLOW to FAST
							224-255	ON
			3	3	4	5	0-255	MASTER DIMMER Intensity 0 to 100%
			4	4	5	6	0-255	MASTER DIMMER FINE (16 bit) 0 to 100%
				5	6	7		DIMMING CURVE MODES
							0-20	STANDARD
							21-40	STAGE
							41-60	TV
							61-80	ARCHITECTURAL
							81-100	THEATRE
							101-255	Default to Unit Setting

## SYSTEM MENU CHANGE WITH SOFTWARE UPDATE VERSION 1.05

See highlighted menu items below which have been updated with this software update.

ELATION© DW PENDANT™								
DMX Channel Values / Functions (7 DMX Channels)								
Supports Software Versions: ≥ 1.05								
Features are subject to change without any prior written notice.								
DMX CHANNEL MODE							VALUE	FUNCTION
1CH	2CH	3CH	4CH	5CH	6CH	7CH		
	1	1	1	1	1	1	0	COOL WHITE
								Cool White (0=Black - 255=100%)
	2	2	2	2	2	2	0	WARM WHITE
								Warm White (0=Black - 255=100%)
1		3				3	0	COLOR TEMPERATURE
								OFF
							1-255	2,900K - 6,800K (1=2,900K - 255 = 6,800K)
								FLASH / STROBE
							0-31	LED OFF
							32-63	LED ON
							64-95	Strobe SLOW to FAST
							96-127	LED ON
							128-159	Pulse Strobe SLOW to FAST
							160-191	LED ON
							192-223	Random Strobe SLOW to FAST
							224-255	LED ON
			3	3	4	5	0-255	MASTER DIMMER
								Intensity 0 to 100%
			4	4	5	6	0-255	MASTER DIMMER FINE (16 bit)
								0 to 100%
								DIMMING CURVE MODES
							0-20	STANDARD
							21-40	STAGE
							41-60	TV
							61-80	ARCHITECTURAL
							81-100	THEATRE
				5	6	7	101-255	Default to Unit Setting

## CLEANING AND MAINTENANCE



### C A U T I O N

**Disconnect power before cleaning or maintenance.**

#### **CLEANING**

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics.

- Clean the external lens surface at least every 20 days with a soft cloth to avoid dirt/debris accumulation.
- Never use alcohol, solvents, or ammonia based cleaners.

#### **MAINTENANCE**

Regular inspections are recommended to insure proper function and extended life. There are no user serviceable parts inside this fixture, please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electric check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments. Never remove the ground prong from the power cable.

## TECHNICAL SPECIFICATIONS

### SOURCE

(18) 3W Cool White LEDs + (18) 3W Warm White LEDs

50,000 Hour Average LED Life\*

\*May vary depending on several factors including but not limited to:  
Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control, and Dimming.

### COLOR

Cool White + Warm White

### EFFECTS

Tungsten (2,900K) to Daylight (6,800K) CT Control

Variable Dimming Curve Modes and Strobe Effects

Electronic Strobe, Dimming and Variable Dimming Curve Modes

### CONTROL / CONNECTIONS

7 DMX Channel Modes (11 Total Channels)

LED Refresh Rate Frequencies (1200Hz, 2400Hz, 4800Hz, 9600Hz)

4 Button Control Panel and LCD Menu Display

RDM (Remote Device Management)

E-Fly™ High-Powered Wireless DMX Transceiver

5pin DMX In/Out and powerCON In

### SIZE / WEIGHT

Length: 14.7" (374 mm)

Width: 9.9" (252.5 mm)

Horizontal Height: 12.0" (308.8 mm)

Weight: 14.0 lbs. (6.4 kg)

### ELECTRICAL / THERMAL

AC 100-240V - 50/60Hz

125W Max Power Consumption

-14°F to 113°F (-10°C to 45°C)

### APPROVALS / RATINGS




Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

### PHOTOMETRIC DATA

	<b>1 m</b>	<b>3.3 ft</b>	<b>2 m</b>	<b>6.6 ft</b>	<b>3 m</b>	<b>9.8 ft</b>	<b>4 m</b>	<b>13.1 ft</b>	<b>5 m</b>	<b>16.4 ft</b>
<b>41° Beam Diameter</b>	0.73	2.4	1.46	4.8	2.18	7.2	2.91	9.5	3.63	11.9
<b>66° Field Diameter</b>	1.27	4.2	2.55	8.4	3.82	12.5	5.1	16.7	6.37	20.9
	<b>lux</b>	<b>fc</b>	<b>lux</b>	<b>fc</b>	<b>lux</b>	<b>fc</b>	<b>lux</b>	<b>fc</b>	<b>lux</b>	<b>fc</b>
<b>COOL WHITE LEDs</b>	2,055	191	550	51	253	24	149	14	99	9
<b>WARM WHITE LEDs</b>	1,778	165	471	44	222	21	128	12	85	8
<b>FULL ON</b>	3,785	352	1,003	93	457	42	271	25	179	17

### DIMENSIONAL DRAWINGS

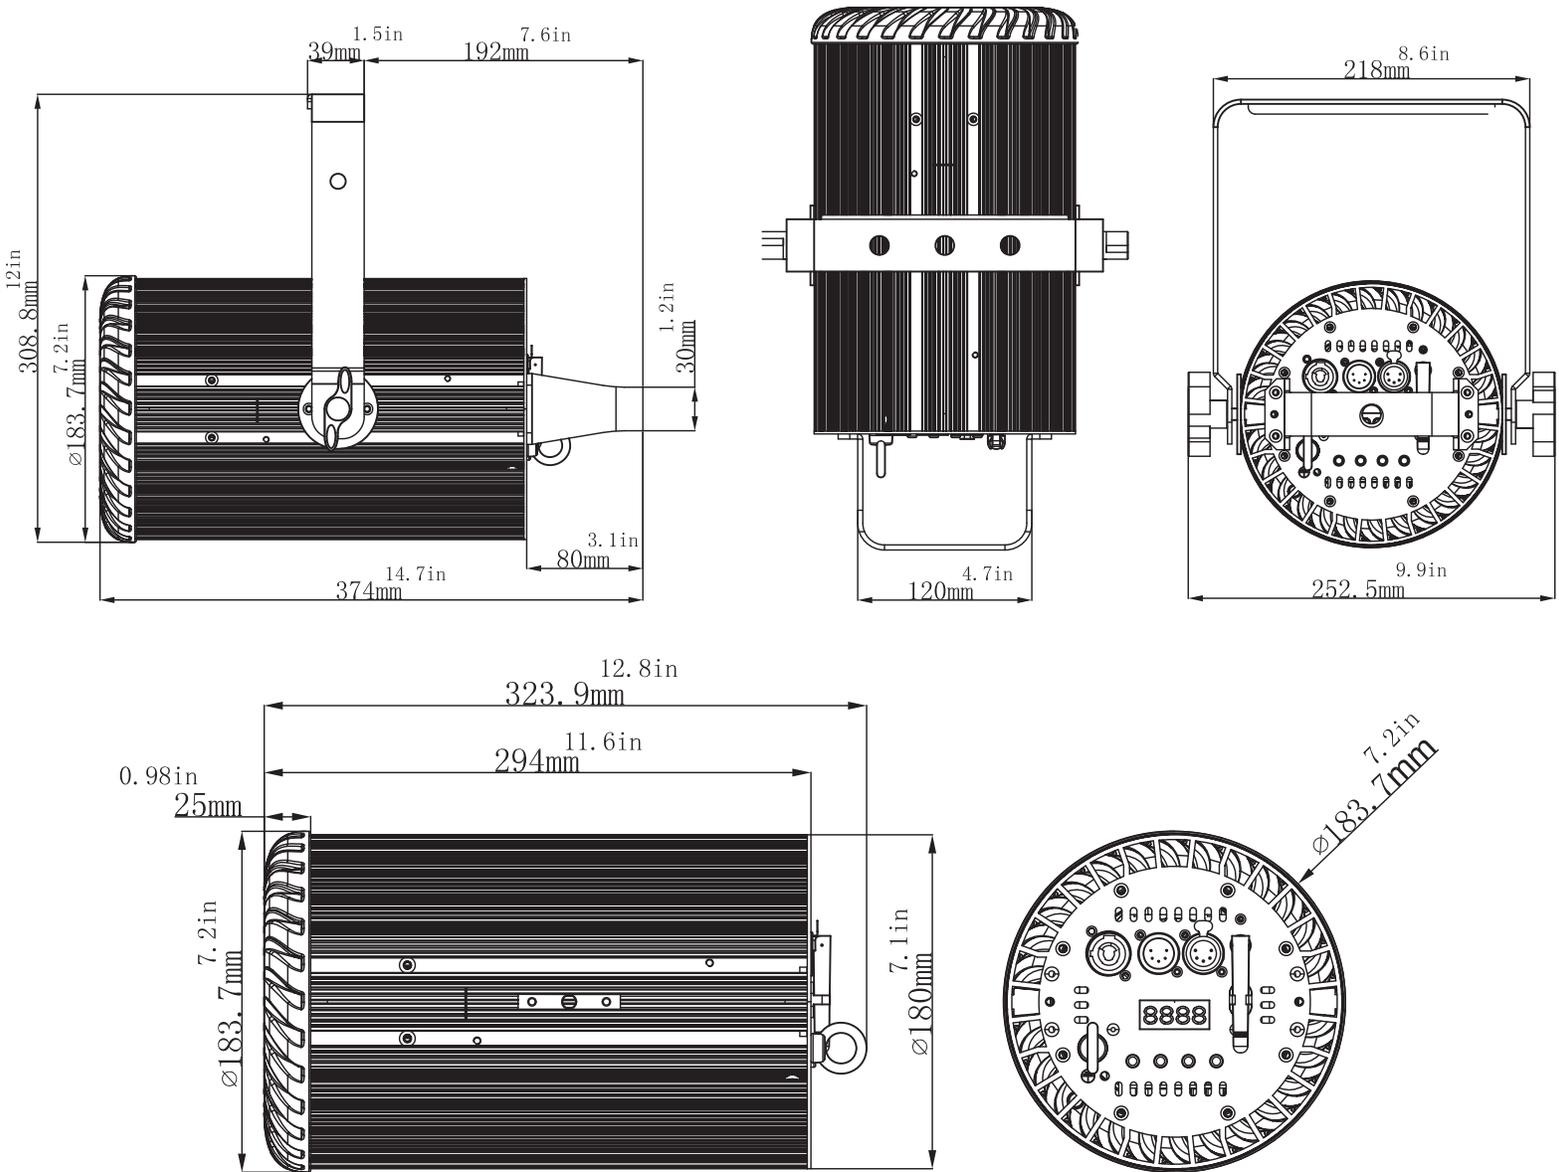

### OPTIONAL ACCESSORIES

ORDER CODE	ITEM
NARROW CLAMP	PRO Wrap Around Style Clamp
COL110/ESK	Exterior Shroud Kit - BLACK
COL123/ESK	Exterior Shroud Kit - WHITE
EFL001	E-FLY Wireless DMX Transceiver
SCABLE60	24" (610mm) 60 lbs. (27 kg) Rated Safety Cable
AC5PDMX5PRO	5 ft. (1.5m) 5pin PRO DMX Cable
	Additional Cable Lengths Available

