

ELATION[®]



LIMELIGHT

PAR L

User Manual

©2025 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

ELATION PROFESSIONAL and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Elation Professional USA | 6122 S. Eastern Ave. | Los Angeles, CA. 90040

323-582-3322 | www.elationlighting.com | info@elationlighting.com

Elation Professional B.V. | Junostraat 2 | 6468 EW Kerkrade, The Netherlands

+31 45 546 85 66 | www.elationlighting.eu | info@elationlighting.eu

Elation Professional Mexico | AV Santa Ana 30 | Parque Industrial Lerma, Lerma, Mexico 52000

+52 (728) 282-7070

DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online. Please scan the QR Code with your mobile device or visit www.elationlighting.com for the latest revision/update of this manual, before installation and/or programming.

Date	Document Version	Software Version	DMX Channel Mode	Notes
04/22/24	1.0	1.01	4 / 12 / 15 / 13 / 17 Ext / 17 Std Zones / 25 Ch	Initial Release
06/17/24	1.1	N/C	No Change	Updated Dimensional Drawings, Specifications
07/02/24	1.2	N/C	No Change	Updated Specifications
09/19/24	1.3	N/C	No Change	Corrected Color Temperature Table
09/27/24	1.4	N/C	No Change	Updated Specifications
03/12/25	1.5	1.03	No Change	Update System Menu, DMX Traits, & Specifications
07/24/25	1.6	N/C	No Change	Updated System Menu

CONTENTS

General Information	4
Limited Warranty (USA Only)	5
IP65 Rated	6
Safety Guidelines	7
Maintenance Guidelines	9
Overview	10
Installation Guidelines	11
Accessory Installation	15
Remote Device Management (RDM)	16
System Menu	17
Fan Modes	21
DMX Set Up	22
DMX Traits	24
Pixel Grouping	29
Virtual Color Table	30
Color Temperature Table	31
Dimmer Modes & Curves	32
Primary-Secondary Set Up	33
Multi Unit Power Linking Maintenance Guidelines	34
Torque Settings for Screws	35
IP Test Parameters	36
Dimensional Drawings	37
Specifications Ordering Information	39
Error Codes FCC Statement	40

GENERAL INFORMATION

INTRODUCTION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information. **This device is intended for use by trained personnel only, and is not suitable for private use.**

UNPACKING

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

BOX CONTENTS

Power Cable (x1)
Safety Cable (x1)

CUSTOMER SUPPORT

Contact ELATION Service for any product related service and support needs.
Also visit forums.elationlighting.com with questions, comments, or suggestions.

ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST
323-582-3322 | support@elationlighting.com

ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET
+31 45 546 85 63 | support@elationlighting.eu

REPLACEMENT PARTS please visit parts.elationlighting.com



IMPORTANT NOTICE!

THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF, AS DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.

LIMITED WARRANTY (USA ONLY)

- A. Elation Professional hereby warrants, to the original purchaser, Elation Professional products to be free of manufacturing defects in material and workmanship for a period of two years (730 days), and Elation Professional product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days), from the original date of purchase. This warranty excludes discharge lamps and all product accessories. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, send the product only to the Elation Professional factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional shall have no liability what so ever for loss and/or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional factory unless prior written authorization was issued to purchaser by Elation Professional; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.
- D. This is not a service contract, and this warranty does not include any maintenance, cleaning or periodic check-up. During the periods as specified above, Elation Professional will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional. All products covered by this warranty were manufactured after January 1, 1990, and bare identifying marks to that effect.
- E. Elation Professional reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.
- G. This warranty is the only written warranty applicable to Elation Professional products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

WARRANTY RETURNS

All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

IP65 RATED

The International Protection (IP) rating system is commonly expressed as “IP” (Ingress Protection) followed by two numbers (i.e. IP65), where the numbers define the degree of protection. The first digit (Foreign Bodies Protection) indicates the extent of protection against particles entering the fixture, and the second digit (Water Protection) indicates the extent of protection against water entering the fixture. An **IP65** rated lighting fixture is designed and tested to protect against the ingress of dust (**6**), and low-pressure water jets from any direction (**5**).

Maritime/Coastal Environment Installations: A coastal environment is seaside adjacent, and caustic to electronics through exposure to atomized salt-water and humidity, whereas maritime is anywhere within 5-miles of a coastal environment.

Maritime installations require additional preparation, and additional service intervals may be needed given the maritime use. In general, IP ratings presuppose freshwater conditions VS maritime conditions, which are typically more “caustic” to IP fixtures (both internally and externally). A duty-cycle may also be needed when units are not in use. During times of high humidity and colder temperatures, condensation may occur internally so the fixture may require a duty-cycle to bring it up to running temperature, allowing any accumulation of moisture to be expelled via the vent valve. Recommendations can change based on installation environmental circumstances.

NOTE: NOT ALL FEATURES LISTED ARE AVAILABLE ON ALL FIXTURES; THE FOLLOWING INSTRUCTIONS MAY NOT APPLY. CONTACT SUPPORT FOR ADDITIONAL DETAILS.

Exterior Maintenance: Inspect the exterior every 30-days. The unit must be powered off/disconnected. The chassis should be inspected for any signs of contaminants. Inspect optics to determine if the lens is obstructed, then clean optics and chassis accordingly. Based on initial finding, schedule maintenance accordingly, keeping in mind that exterior maintenance will be required. Even if the luminaires are NOT in use, maintenance will still be needed given its location (exterior use). The use of a durable type of wax on the chassis is recommended since it will help prevent contaminant build up. Inspect both power and data lines for any signs of contaminants or corrosion. Periodically reapplying di-electric grease, especially in coastal environments. If any signs of corrosion/contaminants are present, clean thoroughly, and/or replace connectors, then reapply di-electric grease. Typically, this should be done annually, or any time an opportunity presents itself. As a preventive measure, annual replacement of both vent valves is recommended. The vent valve membrane can become contaminated and/or clogged causing improper venting of humidity within the luminaire. Inspect all mounting hardware as a precaution.

Interior Maintenance: Inspect the interior every 30-days. The unit must be powered off/disconnected.

- Inspect zoom/focus mechanism, clean optics, lubricate linear bearings (Krytox oil) as needed, inspect belts for wear
- Inspect all rotating effect wheels, manually rotate them, note any resistance
- Inspect all remaining rotating belts for any wear
- Inspect all fans, clean as needed, check rotation, check connections
- Inspect CMY module, manually move flags and check for signs of resistance, and if needed, clean guide rods first, then reapply a thin layer of grease (moly lube)
- Clean interior with low-volume compressed air, then clean optics prior to reassembly of head covers

Although the base has limited moving parts, the pan belt should also be inspected for wear. Remember to always perform an IP test anytime a cover is removed.

There is no specific time frame regarding the routine replacement of parts such as belts/stepper motors, PCBs, or LEDs. These items should only be replaced on an as needed bases, except for cooling fans, which should be replaced once the luminaries reach 10,000-hours. This is a prophylactic measure intended to keep the unit running as cool as possible, insuring proper function of all internal components. A complete service breakdown is available, please contact service@elationlighting.com for any needed parts or manuals.

SAFETY GUIDELINES

This fixture is a sophisticated piece of electronic equipment. To guarantee smooth operation, it is important to follow all instructions and guidelines in this manual. Elation Professional is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging parts included with this fixture should be used for installation. Any modifications to the fixture and/or the included mounting hardware will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.




PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED.



THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF. DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS DEVICE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.



**DO NOT PLUG THIS UNIT INTO A DIMMER PACK
DO NOT REMOVE THE COVER PANELS FOR ANY REASON
NEVER OPERATE THIS UNIT WITH THE CASING REMOVED
UNPLUG FROM POWER DURING LONG PERIODS OF NON-USE
DISCONNECT POWER BEFORE PERFORMING MAINTENANCE**

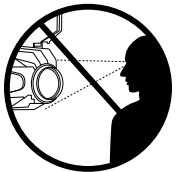

**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!
RETINA INJURY RISK - MAY INDUCE BLINDNESS!
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!
FIXTURE SHOULD BE PLACED A MINIMUM OF 1.0 FOOT (0.3 METERS) FROM ANY NEARBY OBJECTS OR SURFACES.**



**FIXTURE SHOULD BE PLACED A MINIMUM OF 1.6 FEET (0.5 METERS) FROM ANY FLAMMABLE MATERIALS.
MAXIMUM AMBIENT OPERATING TEMPERATURE IS 113°F (45°C)**

SAFETY GUIDELINES

For Your Own Personal Safety, Please Read and Understand This Manual Completely Before You Attempt To Install Or Operate This Unit!

- Do not touch the fixture housing during operation, as it may be hot.
- Do not shake the fixture, and avoid using brute force when installing and/or operating.
- Use only the original packaging and materials to transport or ship the fixture for service. Make sure to retain the original packaging for this purpose.
- Be sure that the local power outlet matches the required voltage for the device.
- Do not open up the device for any reason. There are no user serviceable parts inside.
- Disconnect the device's main power when left unused for long periods of time.
- Never connect this device to a dimmer pack.
- Do not attempt to operate this device if it has been damaged in any way.
- Never operate this device with the cover removed.
- Do not attempt to operate this device if the power cord has been frayed or broken.
- Never force a power cord connector into the fixture. If the power cord or any of its connectors are damaged, replace immediately with a new cord of the same power rating.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Only handle the power cord by the plug end. Never disconnect the plug by tugging on the wire portion of the power cord.
- Disconnect from main power before making any type of connection.
- Never block the air ventilation slots. Always be sure to mount this device in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Always mount this unit in a safe and stable matter.
- Please route your power cord out of the way of foot traffic. Power cords should be routed so they are not likely to be walked on or pinched by items placed upon or against them.
- Before performing any servicing, turn off and disconnect the device from power and allow at least 15 minutes for the device to cool.
- Consistent operational breaks will ensure that this fixture will function properly for many years.
- The device should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen on, or liquid has been spilled into, the device.
 - C. The device has been immersed in liquid.
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

Keep all flammable materials away from this fixture!

MAINTENANCE GUIDELINES



DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!

CLEANING

Frequent cleaning is recommended to ensure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean periodically with a soft cloth to avoid dirt/debris accumulation.

NEVER use alcohol, solvents, or ammonia-based cleaners.


MAINTENANCE

Regular inspections are recommended to insure proper function and extended life. There are no user serviceable parts inside this fixture. Please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from an authorized Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments.

OVERVIEW

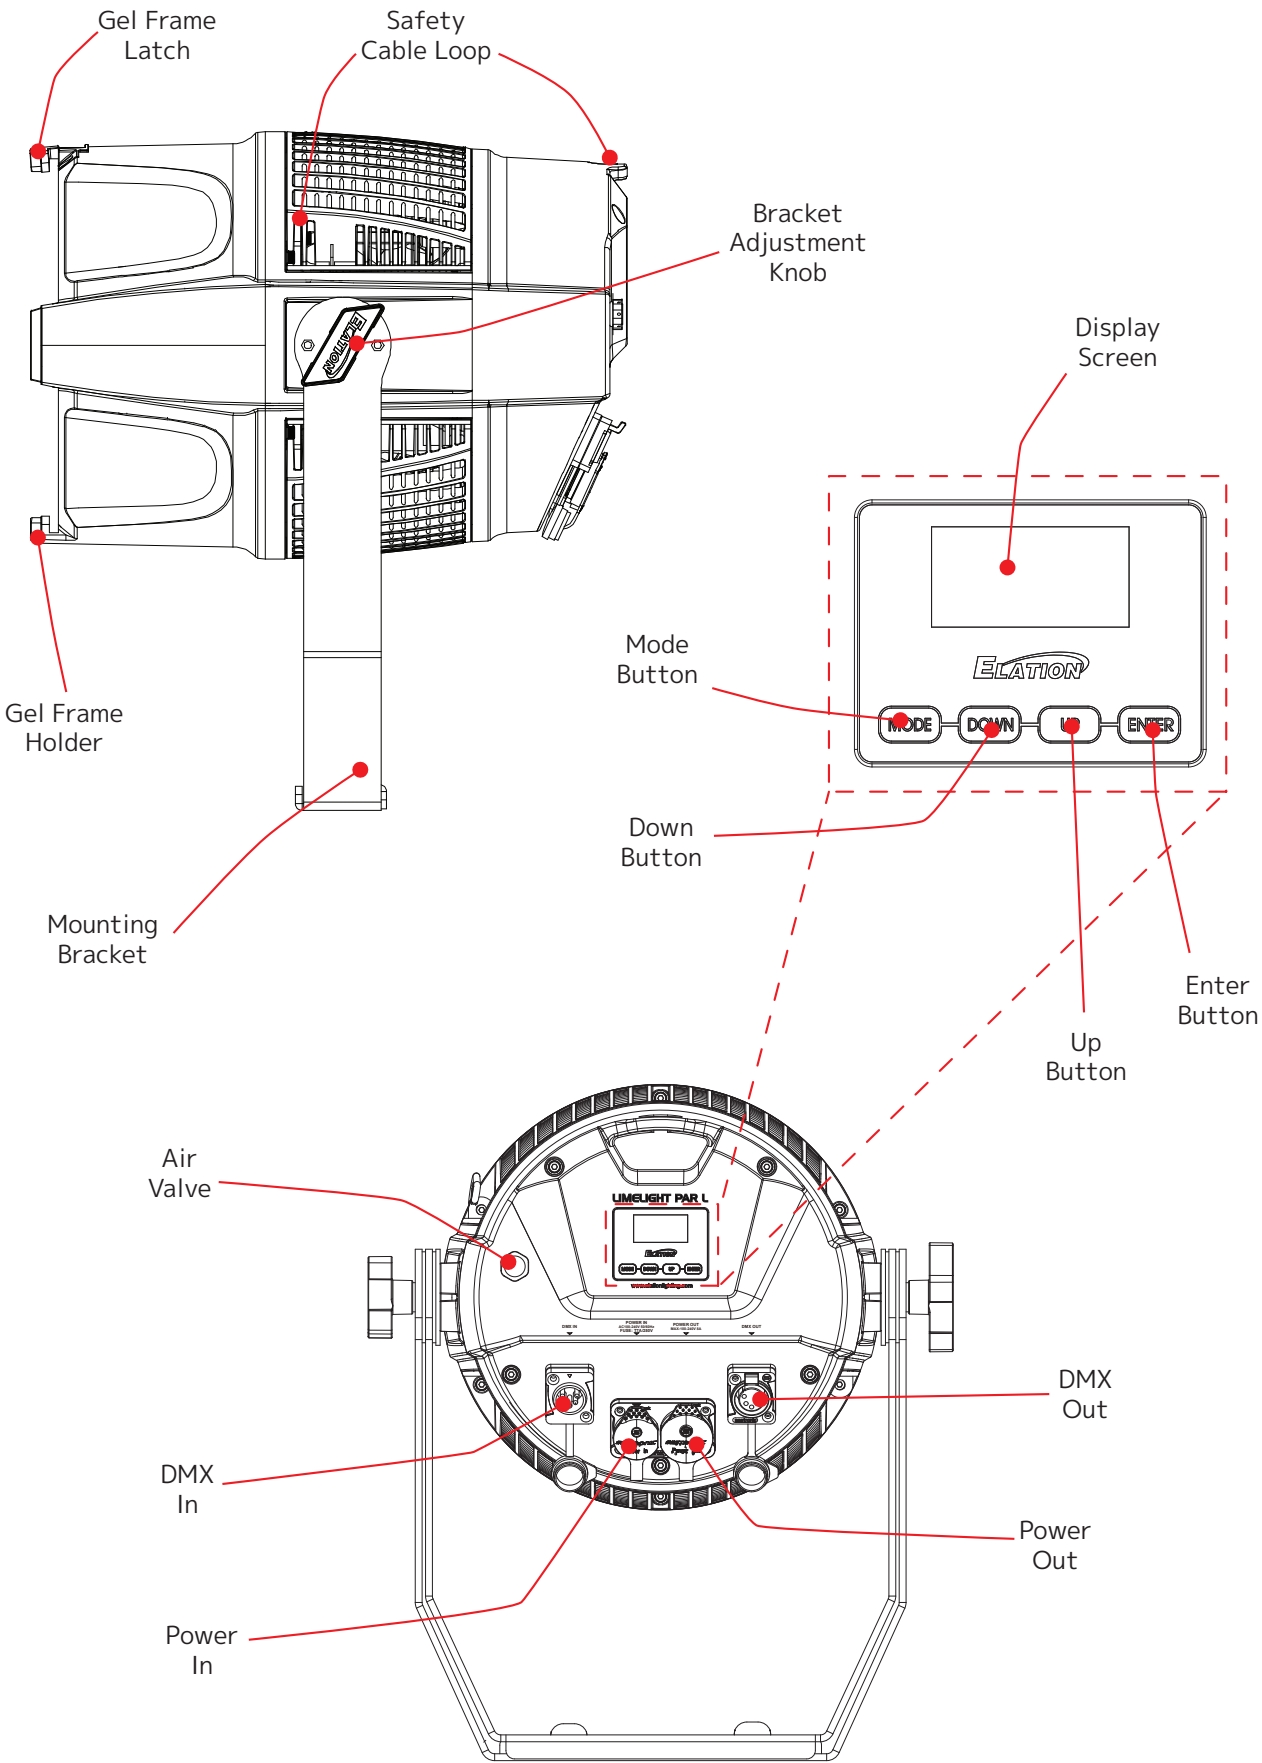

INSTALLATION GUIDELINES



FLAMMABLE MATERIAL WARNING

Keep fixture minimum 5.0 feet (1.5m) away from flammable materials and/or pyrotechnics.



ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



MINIMUM DISTANCE TO OBJECTS/SURFACES IS 1 FOOT (0.3 METERS)



MINIMUM DISTANCE OF FLAMMABLE MATERIALS FROM THE SURFACE IS 1.6 FEET (0.5 METER)



MAXIMUM AMBIENT TEMPERATURE 113° F (45°C)



DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!

Fixture **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before rigging/mounting a single fixture or multiple fixtures to any metal truss/structure or placing the fixture(s) on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture(s), clamps, cables, and accessories.

Fixture(s) should be installed away from walking paths, seating areas, or areas where unauthorized personnel might reach the fixture by hand.

IP RATING

Deep scratches on powder-coated metal can compromise the protective layer, exposing the underlying metal to environmental elements. Once the coating is damaged, moisture can infiltrate the surface, leading to corrosion. The scratch essentially creates a pathway for water and other corrosive agents to reach the metal, potentially causing rust and degradation over time. Regular inspection and maintenance of powder-coated surfaces are essential to prevent these issues and preserve the integrity of the metal.

RIGGING

Overhead rigging requires extensive experience, including calculating working load limits, knowledge of installation material being used, and periodic safety inspection of all installation material and the fixture, among other skills. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.


OPERATIONAL BREAKS

It is strongly recommended to power the fixture down completely when not in use. Doing so will reduce wear on the fixture due to sustained or extended operational periods, thereby maximizing the fixture's operational lifespan.

INSTALLATION GUIDELINES

OMEGA BRACKET WITH CLAMP INSTALLATION

When mounting the fixture to a truss, secure an appropriately rated professional grade rigging clamp to the Omega Bracket by inserting and appropriately sized bolt through both clamp and Omega bracket, then fasten them together using a matching bolt. Attach the Omega bracket to the fixture using the attachment points located on the top of the mounting bracket. Attach a safety cable of the appropriate weight rating to one of the provided attachment point: either on the rear panel of the fixture above the display screen, or at the base of the mounting bracket.

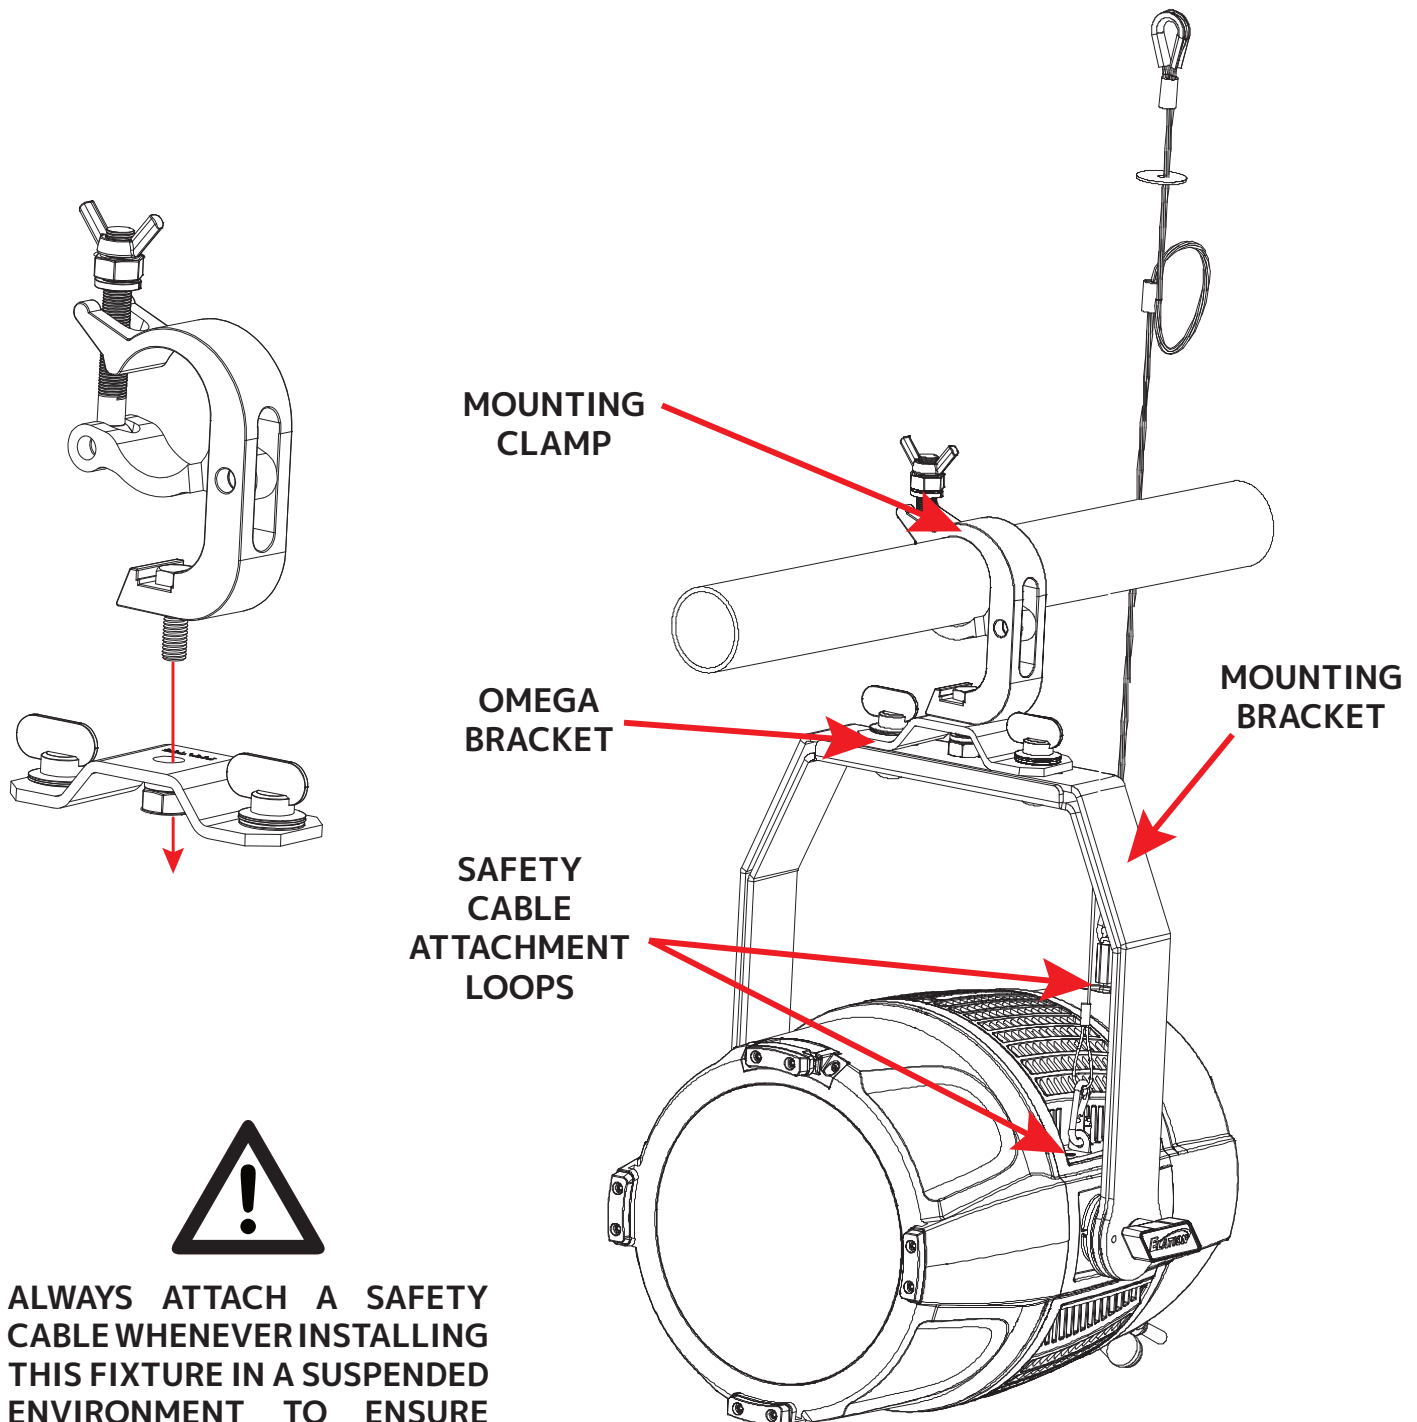


ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THAT THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.

INSTALLATION GUIDELINES

FIXTURE INSTALLATION

This fixture is fully operational in three different mounting positions: hanging upside-down, mounted sideways on trussing, or set on a flat level surface. Be sure this fixture is kept well away from any flammable materials (decoration etc.). Always use and install a safety cable of the proper rating as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

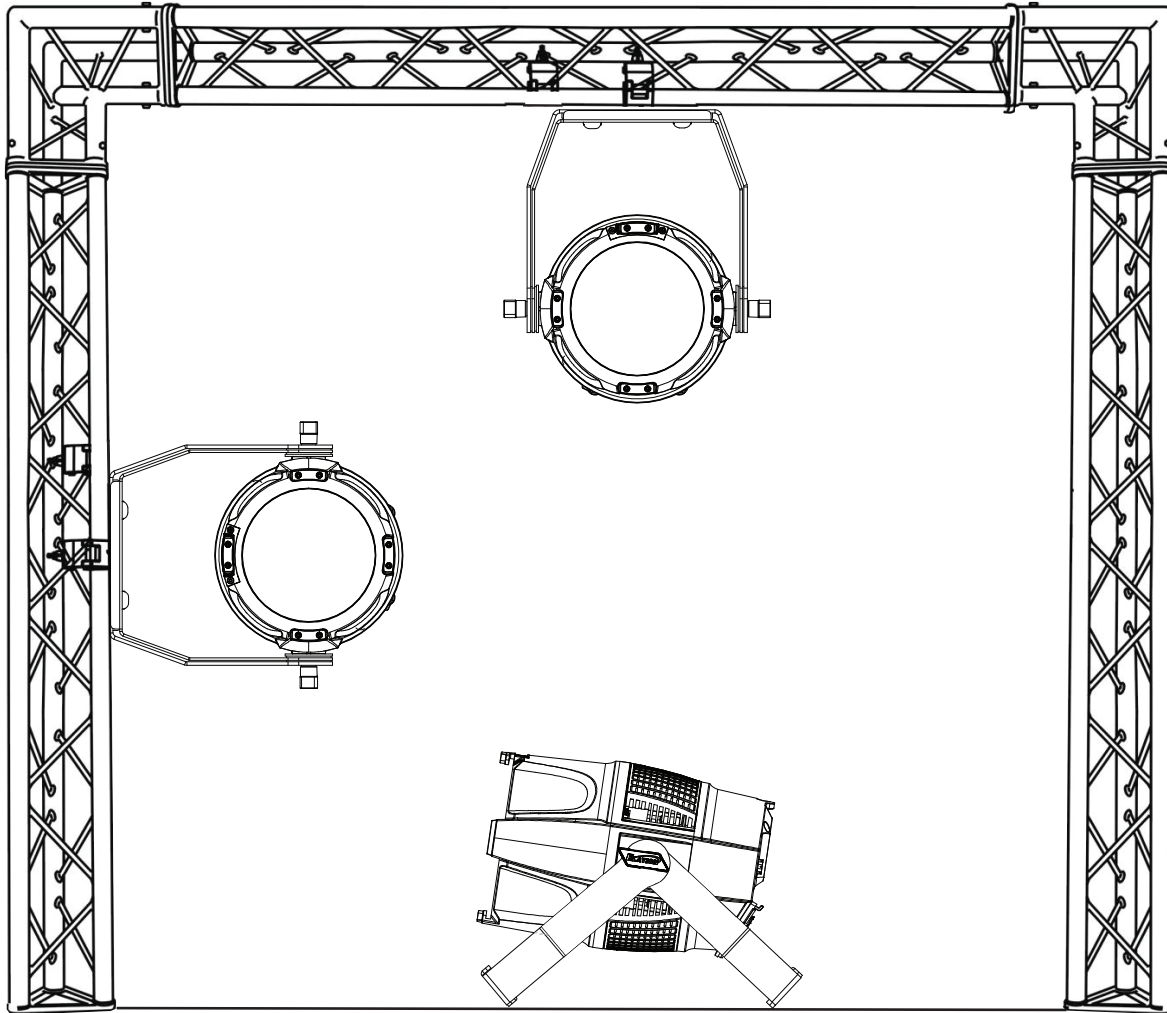

FALLING FIXTURES CAN CAUSE SEVERE INJURY OR SERIOUS EQUIPMENT DAMAGE! FOR THIS REASON, FIXTURES SHOULD BE INSTALLED AND INSPECTED ONLY BY QUALIFIED PERSONNEL. DO NOT INSTALL THE UNIT IF YOU LACK THE QUALIFICATIONS TO DO SO, OR IF YOU HAVE DOUBTS ABOUT THE SAFETY AND SECURITY OF THE INSTALLATION SETUP OR LOCATION!



ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.



IF FIXTURE IS INSTALLED WITH ACCESSORIES FITTED, THE FIXTURE SHOULD ALWAYS BE INSTALLED WITH THE GEL FRAME LATCH ORIENTED UPWARDS, IN ORDER TO ENSURE THAT THE ACCESSORIES WILL NOT FALL IN THE EVENT THAT THE LATCH FAILS


INSTALLATION GUIDELINES

POTENTIAL INTERNAL FIXTURE DAMAGE FROM EXTERNAL SOURCES OF LIGHT BEAMS

External sources of light beams from direct sunlight, lighting moving head fixtures, and lasers, which are focused directly towards the exterior housing and/or penetrate the front lens opening of ELATION lighting fixtures, can cause severe internal damage including burning to optics, dichroic color filters, glass and metal gobos, prisms, animation wheels, frost filters, iris, shutters, motors, belts, wiring, discharge lamps, and LEDs.

This issue is not specific only to ELATION lighting fixtures, it is a common issue with lighting fixtures from all manufacturers. Although there is no true way to fully prevent this issue from happening, the guidelines below can prevent any potential damage from occurring if followed. Contact ELATION Service for more details.

DO NOT EXPOSE THE FIXTURE AND/OR FRONT LENS OPENING TO LIGHT BEAMS FROM DIRECT SUNLIGHT, OTHER LIGHTING MOVING HEAD FIXTURES, AND LASERS WHILE UNPACKING, INSTALLATION, USE, AND EXTENDED IDLE TIMES OUTDOORS. DO NOT FOCUS A LIGHT BEAM FROM ONE LIGHTING FIXTURE DIRECTLY TOWARDS ANOTHER.


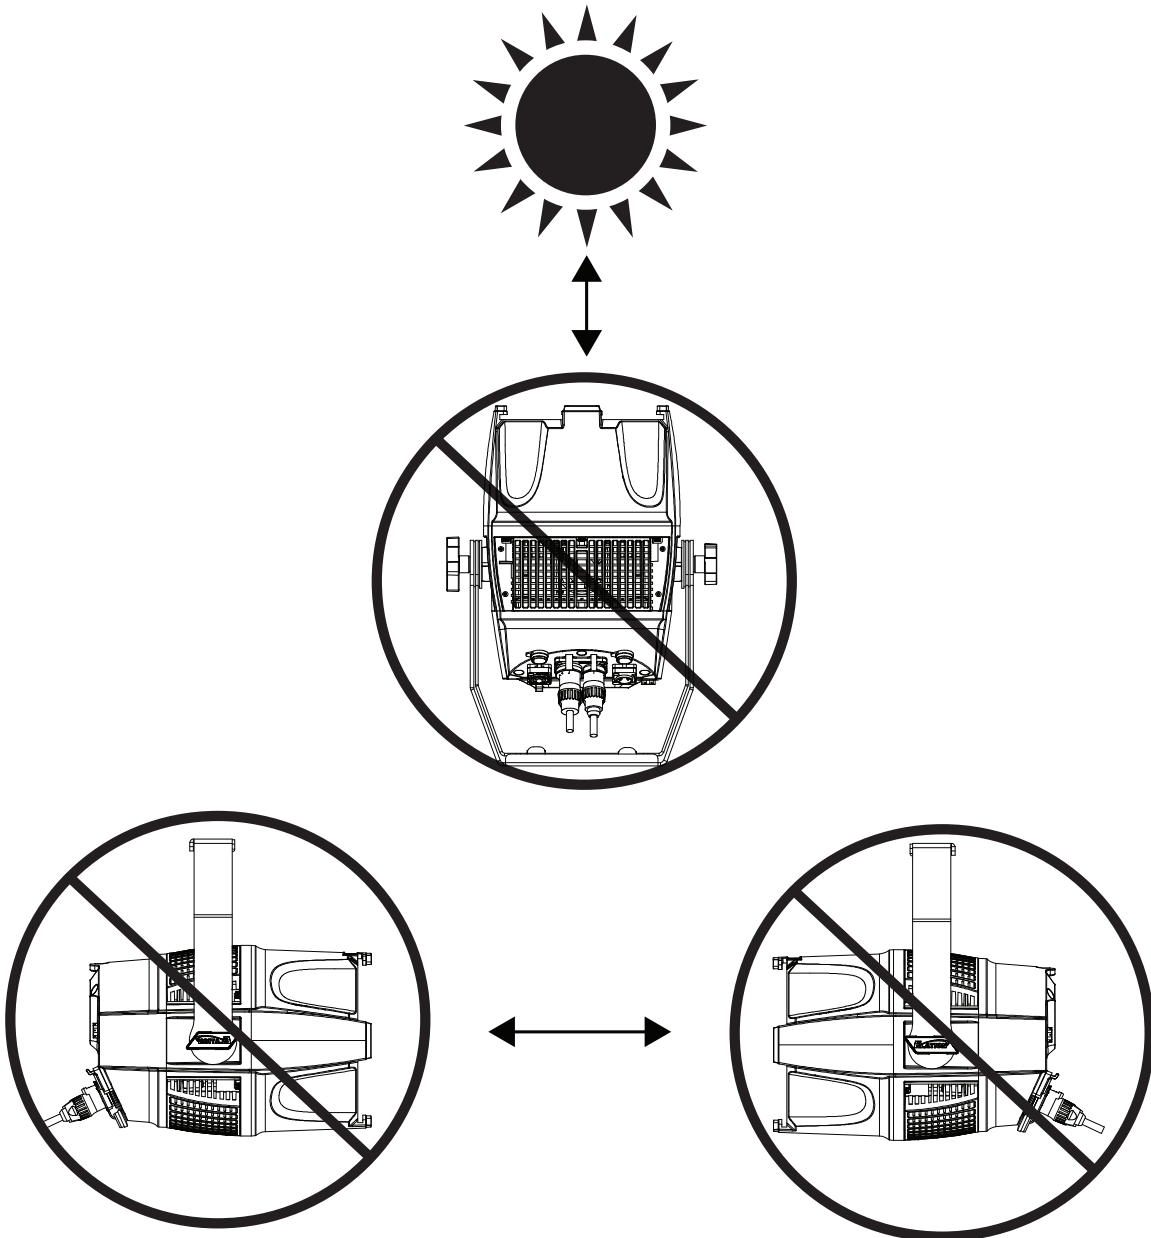


ACCESSORY INSTALLATION


GEL FRAME AND BARNDOORS

This fixture can be fitted with an optional gel frame and an optional set of barndoors. Follow the instructions below to install these accessories.

1. Open the gel frame latch and slide the gel frame into place in front of the fixture's lens.
2. Slide the barndoors into place in front of the gel frame. Close the gel frame latch to secure the accessories in place.

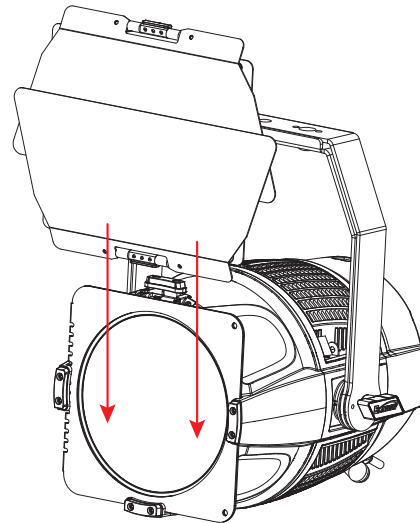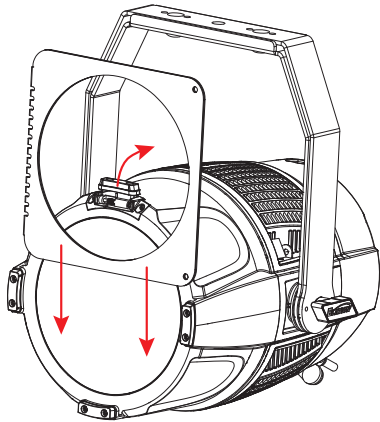

3. If the fixture is being installed in an overhead location, such as hanging from a truss, the barndoors must be secured with their own independent safety cable. The safety cable attachment points can be found at the base of the barndoor unit near where it comes into contact with the fixture. Additionally, always orient the unit with the gel frame latch facing upwards, so that the accessories will not fall in the event that the latch fails.

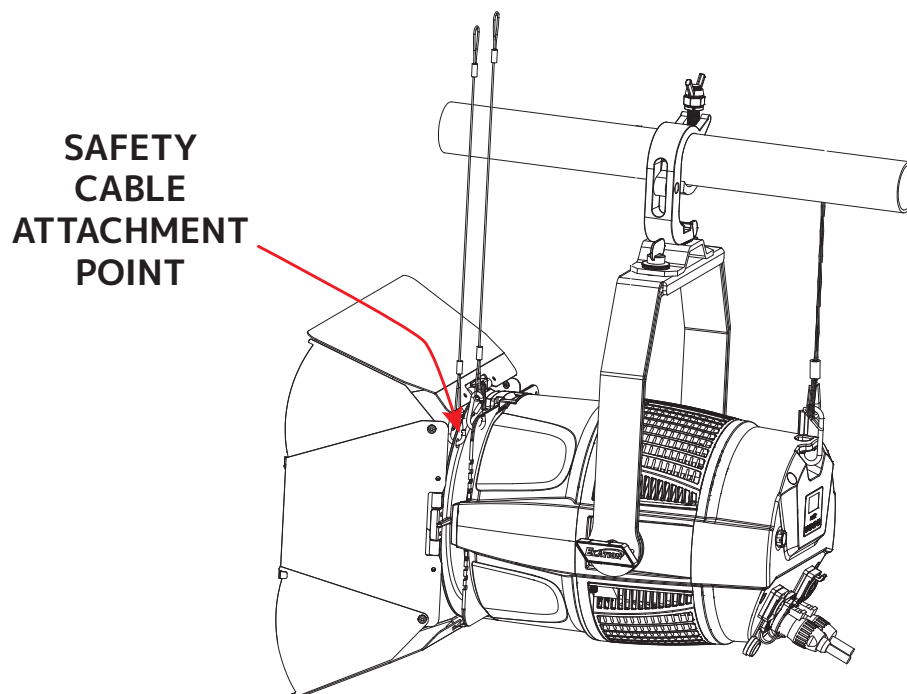

REMOTE DEVICE MANAGEMENT (RDM)

NOTE: In order for RDM to work properly, RDM enabled equipment must be used throughout the entire system, including DMX data splitters and wireless systems.

Remote Device Management (RDM) is a protocol that sits on top of the DMX512 data standard for lighting, and allows the DMX systems of the fixtures to be modified and monitored remotely. This protocol is ideal for instances in which a unit is installed in a location that is not easily accessible.

With RDM, the DMX512 system becomes bi-directional, allowing a compatible RDM enabled controller to send out a signal to devices on the wire, as well as allowing the fixture to respond (known as a GET command). The controller can then use its SET command to modify settings that would typically have to be changed or viewed directly via the unit's display screen, including the DMX Address, DMX Channel Mode, and Temperature Sensors.

FIXTURE RDM INFORMATION:

Device ID	Device Model ID	RDM Code	Personality ID
0x0053 XXXX	0x0053	0x22A6	4CH, 12CH, 15CH, 13CH, 17CH, 17CH, 25CH

Please be aware that **not all RDM devices support all RDM features**, and therefore it is important to check beforehand to ensure that the equipment that you are considering includes all of the features that you require.


The following parameters are accessible in RDM on this device:

0x1031 Preset Playback	0x00E0 DMX Personality
0x0122 Default Slot Value	0x00E1 DMX Personality Description
0x00C2 Boot Software Version Label	0x0400 Device Hours
0x00C1 Boot Software Version ID	0x0015 Comms Status
0x0070 Product Detail ID List	0x0031 Status ID Description
0x0030 Status Messages	0x0032 Clear Status ID
0x0011 Proxied Device Count	0x0405 Device Power Cycles
0x0200 Sensor Definition	0x0500 Display Invert
0x0201 Sensor Value	0x0501 Display Level
0x0080 Device Model Description	0x0603 Realtime Clock
0x0081 Manufacturer Label	0x1010 Power State
0x0082 Device Label	0x0020 Queued Message

SYSTEM MENU

The fixture includes an easy to navigate system menu. The control panel display is located on the rear panel of the fixture (see image below) and provides access to the main system menu, where all necessary system adjustments are made to the fixture. During normal operation, you can navigate through the different menu options with the DOWN and UP buttons. To select the option shown on the screen, press the ENTER button, then use the DOWN and UP buttons to adjust the field. Pressing the ENTER button once more will confirm the setting. Exit the main menu at any time without making any adjustments by pressing the MENU button.

In default setting, the screen will remain on as long as that device is connected to power. However, it can be configured to lock after a certain period of inactivity by navigating to Settings > Display > Screen Lock in the System Menu. To unlock the device, press UP, DOWN, UP, DOWN, ENTER.

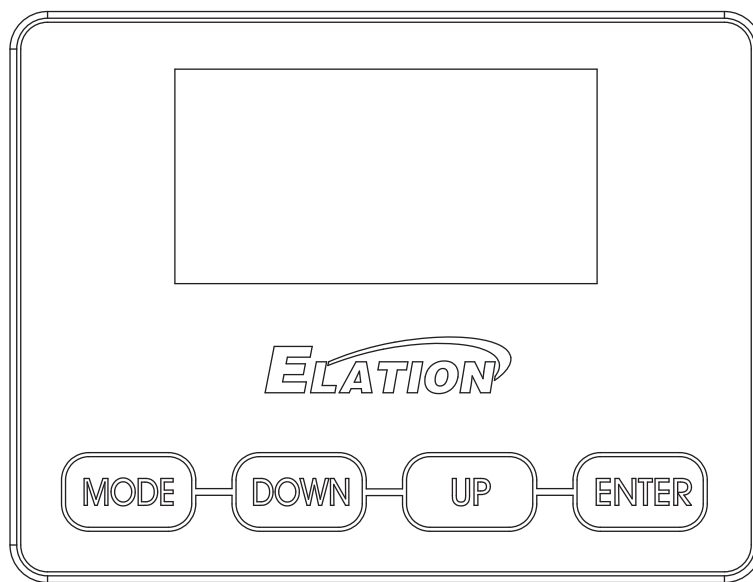

PLEASE NOTE: For units installed in an outdoor setting, the display screen and control panel may interpret a raindrop as a command input and change the fixture's setting (phantom touch) if the display screen is not locked. **The default setting for this unit is to have the display screen unlocked (Settings > Display > Screen Lock > Off).** Therefore, to avoid unintentional command inputs, the Screen Lock setting should be configured so that the screen and control will lock after the selected period of inactivity.

SOFTWARE UPDATE: AN ELATION C-LOADER II CAN BE USED TO UPDATE THE FIXTURE TO THE LATEST SOFTWARE. To order this device, please contact Elation Support for further details.

ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST
323-582-3322 | support@elationlighting.com

ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET
+31 45 546 85 63 | support@elationlighting.eu

SYSTEM MENU

ELATION LIMELIGHT PAR L				
DMX	DMX Address	001 - 512		Set DMX address
	DMX Mode	4Ch RGB		Select DMX channel mode
		12Ch CMY		
		15Ch CMY Extended		
		13Ch Standard		
		17Ch Extended		
		17Ch Standard Zones		
		25Ch Extended Zones		
	No DMX Status	Hold Last		Fixture holds last settings received if DMX signal is lost or interrupted
		Fade to Black		Fixture takes all channels to 0 if DMX signal is lost or interrupted
		Standalone		Fixture defaults to standalone mode if DMX signal is lost or interrupted
Protocol	Select Signal	DMX	Select signal protocol	
		Aria In - DMX Out DMX In - Aria Out		
Aria	Aria Channel	0 - 14	Select Aria channel	
CONTROL	Manual Control	Dimmer	000% - 100%	Manually configure each parameter
		Red	0 - 255	
		Green	0 - 255	
		Blue	0 - 255	
		Lime	0 - 255	
		CCT	2400K - 8500K Default = 6000K	
		Green Shift	-100% ~ +100% Default = 0	
		Virtual Color	see Color Macros Table section	
		Zoom	000% - 100% Default = 50%	
	Primary	On / Off		Set unit as primary
	Secondary	On / Off		Set unit as secondary
	Zoom Speed	Fast / Smooth		Set zoom speed
	Reset Zoom	Yes / No		Reset zoom position
	Self Test	All		Run the selected self test
		Dimmer		
		Color		
		Zoom		

SYSTEM MENU

ELATION LIMELIGHT PAR L				
SETTINGS	Dim Modes	Standard		Select dim mode
		Stage		
		TV		
		Architectural		
		Theatre		
		Stage 2		
		Dim Speed		0s - 10s Default = 0.1s
	Dim Curves	Linear		Select dim curve
		Square		
		Square Inverse		
		S-Curve		
	LED Refresh Rate	900Hz - 1500Hz, 2500Hz, 4000Hz, 5000Hz, 6000Hz, 10KHz, 15KHz, 20KHz, 25KHz Default = 1200Hz		Set LED refresh rate
	LED Power Limit	50%		Set LED power output limitation
		60%		
		70%		
		80%		
		90%		
		100%		
	Fans Mode	Auto		Set fan mode
		High		
		Silent		
		Mute		
Display	Screen Delay	10s - 5min Default = 1min	Screen goes into standby mode after selected period of inactivity	
	Screen Lock	Off , 10s - 5min, Key Lock	Screen and controls lock after selected period of inactivity	
	Rotate Display	Yes	Select display orientation	
		No		
		Auto		
Reset Defaults	Yes / No			Return unit to factory default settings

SYSTEM MENU

ELATION LIMELIGHT PAR L					
INFORMATION	Time	Current Run Time		Display current fixture run time	
		Total Run Time		Display total lifetime fixture run time	
		Last Run Time		Display fixture run times since last reset	
	Temperature	Current		Current fixture temperature	
		Max Resettable		Max recorded fixture temperature since last reset	
	Humidity	xx% RH		Display currently measured humidity	
	DMX Values	Red		Display current DMX value of selected parameter	
		Green			
		...			
	Product IDs	RDM UID		Display RDM UID	
	Error Logs	Fixture Errors		Display recorded fixture errors one by one	
Software Version	Vx.x		Display current software version		
SERVICE Passcode = 050	Aria Activation	On / Off		Activate or deactivate Aria	
	Calibration	Red	000 - 255		Calibrate each parameter
		Green	000 - 255		
		Blue	000 - 255		
		Lime	000 - 255		
		Red2	000 - 255		
		Green2	000 - 255		
		Blue2	000 - 255		
		Lime2	000 - 255		
		Zoom	000 - 255		
	Reset Last Run	Yes / No		Reset Last Run Time and Max Resettable Temperature	
	Reset Error Logs	Yes / No		Clear Error Logs	

FAN MODES

The Limelight Par L is a high-performance fixture suited for multiple applications. For noise critical environments such as Theater, Opera, or Orchestral Halls, it offers various fan operation modes which remove unwanted noise distractions for the audience and performers. Fan Modes can be changed remotely via the DMX control channel, allowing the fixture to offer high output or whisper-silent operation at a moment's notice. All Fan Modes smoothly transition over a brief time, preventing unwanted attraction to the fixture.

Auto (Default) – Fans only run at the speeds needed to keep the LED engine within a safe temperature range, and ensures optimal performance of the fixture. They will turn off if possible; for example, when the fixture is dimmed to a low intensity. Fans sense the ambient and fixture temperature and will, at all times, try to keep noise levels at a minimum. The fixture output will only be reduced when the LED engine cannot be cooled to its safe operating range due to a high ambient temperature.

NOTE: This mode is recommended for daily operation.

Silent – Fan speeds are reduced throughout the fixture for a lower noise profile. The fixture output is also reduced to approximately 80%. This mode should be sufficient for most uses where lower noise is required.

High – Fan speeds are increased throughout the fixture for the most efficient cooling. This mode will increase wear on the fans and should only be utilized in exceptional circumstances. Fans will always run, even if the fixture is dimmed. Fixture output is kept at 100% unless the LED engine temperature reaches an unsafe temperature, at which point the fixture will reduce power carefully to ensure continued safe operation. This mode is only required in very high ambient temperatures when automatic fan speed adjustments are not desired.


DMX SETUP

DMX-512: DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a DATA "OUT" terminal).

DMX Linking: DMX is a language allowing all makes and models of different manufacturers to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, try to use the shortest cable path possible when linking several DMX fixtures. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example, a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line: at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.


Data Cable (DMX Cable) Requirements (For DMX Operation): This unit can be controlled via DMX-512 protocol. The DMX address is set on the rear panel of the unit. Your unit and your DMX controller require a standard 5-pin XLR connector for data input and data output. We recommend Accu-Cable DMX cables. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all pro lighting stores). Your cables should be made with a male XLR connector at one end and a female XLR connector at the other. Also remember that DMX cable must be daisy chained and cannot be split.

Notice: Be sure to follow the illustration below when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behavior.

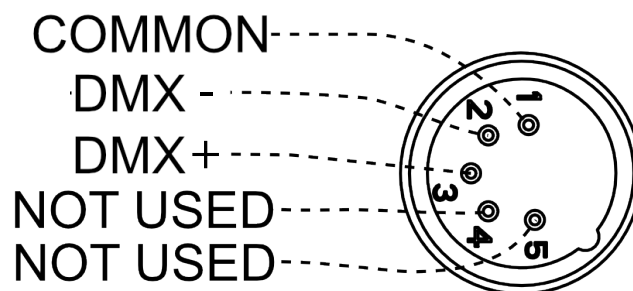

DMX SETUP

Special Note: Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will reduce the risk of erratic behavior.

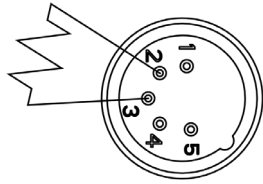

A DMX512 terminator reduces signal errors, avoiding most signal reflection interference. Connect PIN 2 (DMX-) and PIN 3 (DMX+) of the last fixture in series with a 120 Ohm, 1/4 W Resistor to terminate the DMX512.

DMX ADDRESSING.

All fixtures should be given a DMX starting address when using a DMX controller, so the correct fixture responds to the correct control signal. This digital starting address is the channel number from which the fixture starts to “listen” to the digital control signal sent out from the DMX controller. The assignment of this starting DMX address is achieved by setting the correct DMX address on the digital control display on the fixture.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each individual fixture. Setting all fixtures to the same DMX address will cause all fixtures to react in the same way. In other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will start to “listen” to the channel number you have set, based on the quantity of DMX channels of each fixture. That means changing the settings of one channel will only affect the selected fixture.

For example, when this unit is operating in 4 channel mode, you should set the starting DMX address of the first unit to 1, the second unit to 5 (1 + 4), the third unit to 9 (1 + 4 + 4), and so on. See the chart below for more details.

CHANNEL MODE	UNIT 1 ADDRESS	UNIT 2 ADDRESS	UNIT 3 ADDRESS	UNIT 4 ADDRESS
4Ch	1	5	9	13
12Ch	1	13	25	37
15Ch	1	16	31	46
13Ch	1	14	27	40
17Ch (Extended & Standard Zones)	1	18	35	52
25Ch	1	26	51	76

DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function	Snap	Def Value
	1	1	1	1	1	1		Dimmer		0
							0 - 255	Intensity 0 → 100%		
	2	2	2	2	2	2		Dimmer Fine		0
							0 - 255	Fine Adjustment		
	3	3	3	3	3	3		Shutter / Strobe		50
							0 - 31	Shutter closed		
							32 - 63	No function (shutter open)		
							64 - 95	Strobe effect, slow to fast		
							96 - 127	No function (shutter open)		
							128 - 159	Pulse effect in sequences		
							160 - 191	No function (shutter open)		
							192 - 223	Random strobe effect, slow to fast		
							224 - 255	No function (shutter open)		
1			4	4	4	4		Red		0
							0 - 255	0 → 100%		
				5		5		Red Fine		0
							0 - 255	Fine Adjustment		
2			5	6	5	6		Green		0
							0 - 255	0 → 100%		
				7		7		Green Fine		0
							0 - 255	Fine Adjustment		
3			6	8	6	8		Blue		0
							0 - 255	0 → 100%		
				9		9		Blue Fine		0
							0 - 255	Fine Adjustment		
			7	10	7	10		Lime		0
							0 - 255	0 → 100%		
				11		11		Lime Fine		0
							0 - 255	Fine Adjustment		
					8	12		Red 2		0
							0 - 255	0 → 100%		
						13		Red Fine 2		0
							0 - 255	Fine Adjustment		
					9	14		Green 2		0
							0 - 255	0 → 100%		
						15		Green Fine 2		0
							0 - 255	Fine Adjustment		
					10	16		Blue 2		0
							0 - 255	0 → 100%		
						17		Blue Fine 2		0
							0 - 255	Fine Adjustment		

DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function	Snap	Def Value
					11	18		Lime 2		0
							0 - 255	0 → 100%		
						19		Lime Fine 2		0
							0 - 255	Fine Adjustment		
	4	4						Cyan		0
							0 - 255	0 → 100%		
		5						Cyan Fine		0
							0 - 255	Fine Adjustment		
	5	6						Magenta		0
							0 - 255	0 → 100%		
		7						Magenta Fine		0
							0 - 255	Fine Adjustment		
	6	8						Yellow		0
							0 - 255	0 → 100%		
		9						Yellow Fine		0
							0 - 255	Fine Adjustment		
4	7	10	8	12	12	20		Zoom		0
							0 - 255	Narrow → Wide		
	8	11	9	13	13	21		Zoom Fine		0
							0 - 255	Fine Adjustment		
								Variable CCT		0
							0 - 23	Open		
	9	12	10	14	14	22	24 - 85	2400K → 8500K, see Color Temperature Table section		
							86 - 255	8500K		
								Color		0
							0	Open		
							1 - 179	Virtual Swatch Book, see Virtual Colors Table section		
								Color Scroll		
							180 - 201	Clockwise, fast → slow		
							202 - 207	Stop		
							208 - 229	Counter-clockwise, slow → fast		
							230 - 234	Open		
								Random Slots		
							235 - 239	Fast		
							240 - 244	Medium		
							245 - 249	Slow		
							250 - 255	Open		

DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function	Snap	Def Value
11	14	12	16	16	24		Dim Modes		X	0
						0 - 20	Standard			
						21 - 40	Stage			
						41 - 60	TV			
						61 - 80	Architectural			
						81 - 100	Theatre			
						101 - 120	Stage 2			
							Dimmer Delay Time			
						121	0s			
						122	0.1s			
						123	0.2s			
						124	0.3s			
						125	0.4s			
						126	0.5s			
						127	0.6s			
						128	0.7s			
						129	0.8s			
						130	0.9s			
						131	1.0s			
						132	1.5s			
						133	2.0s			
						134	3.0s			
						135	4.0s			
						136	5.0s			
						137	6.0s			
						138	7.0s			
						139	8.0s			
						140	9.0s			
						141	10s			
						142 - 255	Idle			
12	15	13	17	17	25		Control		X	0
						0-9	Idle			
						10-19	Fan Mode: Auto (Default)			
						20-29	Fan Mode: Mute			
						30-39	Fan Mode: Silent			
						40-49	Fan Mode: High			
						50-59	Reset Zoom			
						60-69	Zoom Speed: Fast (Default)			
						70-79	Zoom Speed: Smooth			
						80-99	Idle			


DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function	Snap	Def Value
	12	15	13	17	17	25		Refresh Rate (Hz)	X	0
							100	900		
							101	910		
							102	920		
							103	930		
							104	940		
							105	950		
							106	960		
							107	970		
							108	980		
							109	990		
							110	1000		
							111	1010		
							112	1020		
							113	1030		
							114	1040		
							115	1050		
							116	1060		
							117	1070		
							118	1080		
							119	1090		
							120	1100		
							121	1110		
							122	1120		
							123	1130		
							124	1140		
							125	1150		
							126	1160		
							127	1170		
							128	1180		
							129	1190		
							130	1200		
							131	1210		
							132	1220		
							133	1230		
							134	1240		
							135	1250		
							136	1260		
							137	1270		
							138	1280		
							139	1290		
							140	1300		
							141	1310		

DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function	Snap	Def Value
12	15	13	17	17	25		Refresh Rate (Hz)	X	0	
						142	1320			
						143	1330			
						144	1340			
						145	1350			
						146	1360			
						147	1370			
						148	1380			
						149	1390			
						150	1400			
						151	1410			
						152	1420			
						153	1430			
						154	1440			
						155	1450			
						156	1460			
						157	1470			
						158	1480			
						159	1490			
						160	1500			
						161	2500			
						162	4000			
						163	5000			
						164	6000			
						165	10000			
						166	15000			
						167	20000			
						168	25000			
						169 - 200	No function			
							Dimmer Curves			
						201 - 210	Linear (Default)			
						211 - 220	Square			
						221 - 230	Inverse Square			
						231 - 240	S-Curve			
						241 - 255	Idle			

PIXEL GROUPING

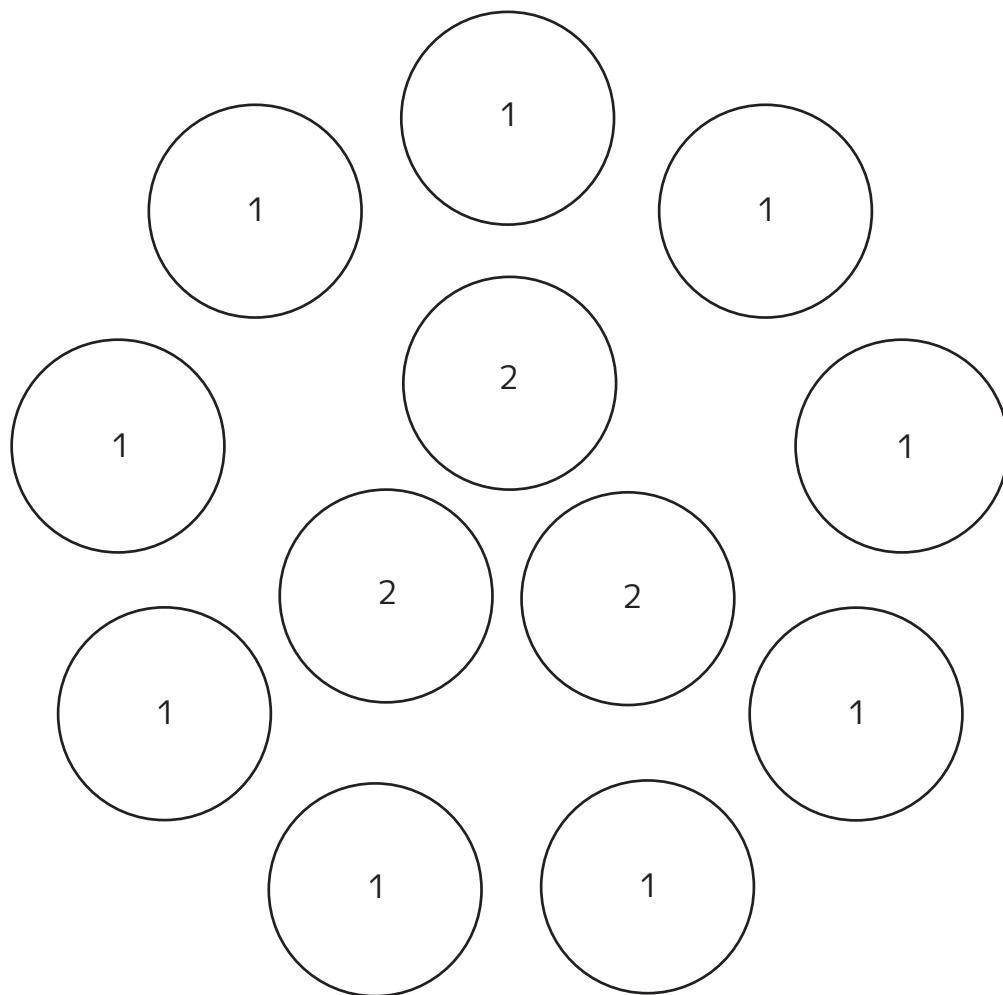

VIRTUAL COLOR TABLE


VALUE	FILTER #	COLOR	VALUE	FILTER #	COLOR
1	7	Pale Yellow	32	49	Medium Purple
2	103	Straw	33	58	Lavender
3	151	Gold Tint	34	199	Palace Blue
4	100	Spring Yellow	35	119	Dark Blue
5	10	Medium Yellow	36	132	Medium Blue
6	101	Yellow	37	120	Deep Blue
7	104	Deep Amber	38	165	Daylight Blue
8	15	Deep Straw	39	161	Slate Blue
9	179	Loving Amber	40	118	Light Blue
10	21	Gold Amber	41	68	Sky Blue
11	105	Orange	42	143	Pale Navy Blue
12	158	Deep Orange	43	131	Marine Blue
13	22	Dark Amber	44	115	Peacock Blue
14	778	Millennium Gold	45	172	Lagoon Blue
15	135	Deep Golden Amber	46	116	Medium Blue Green
16	24	Scarlet	47	90	Dark Yellow Green
17	106	Primary Red	48	139	Primary Green
18	26	Bright Red	49	122	Fern Green
19	27	Medium Red	50	89	Moss Green
20	19	Fire	51	124	Dark Green
21	157	Pink	52	88	Lime Green
22	36	Medium Pink	53	138	Pale Green
23	111	Dark Pink	54	203	Quarter CT Blue
24	128	Bright Pink	55	202	Half CT Blue
25	148	Bright Rose	56	201	FULL CT Blue
26	332	Special Rose Pink	57	200	Double CT Blue
27	793	Vanity Fair	58	206	Quarter CT Orange
28	113	Magenta	59	205	Half CT Orange
29	46	Dark Magenta	60	204	FULL CT Orange
30	48	Rose Purple	61-179		No Function
31	126	Mauve			

COLOR TEMPERATURE





Colors shown are an approximate representation. <https://www.luxalight.eu/en/cie-converto>

DMX VALUE	COLOR TEMPERATURE (K)	DMX VALUE	COLOR TEMPERATURE (K)
24	2400	55	5500
25	2500	56	5600
26	2600	57	5700
27	2700	58	5800
28	2800	59	5900
29	2900	60	6000
30	3000	61	6100
31	3100	62	6200
32	3200	63	6300
33	3300	64	6400
34	3400	65	6500
35	3500	66	6600
36	3600	67	6700
37	3700	68	6800
38	3800	69	6900
39	3900	70	7000
40	4000	71	7100
41	4100	72	7200
42	4200	73	7300
43	4300	74	7400
44	4400	75	7500
45	4500	76	7600
46	4600	77	7700
47	4700	78	7800
48	4800	79	7900
49	4900	80	8000
50	5000	81	8100
51	5100	82	8200
52	5200	83	8300
53	5300	84	8400
54	5400	85	8500

DIMMER MODES & CURVES

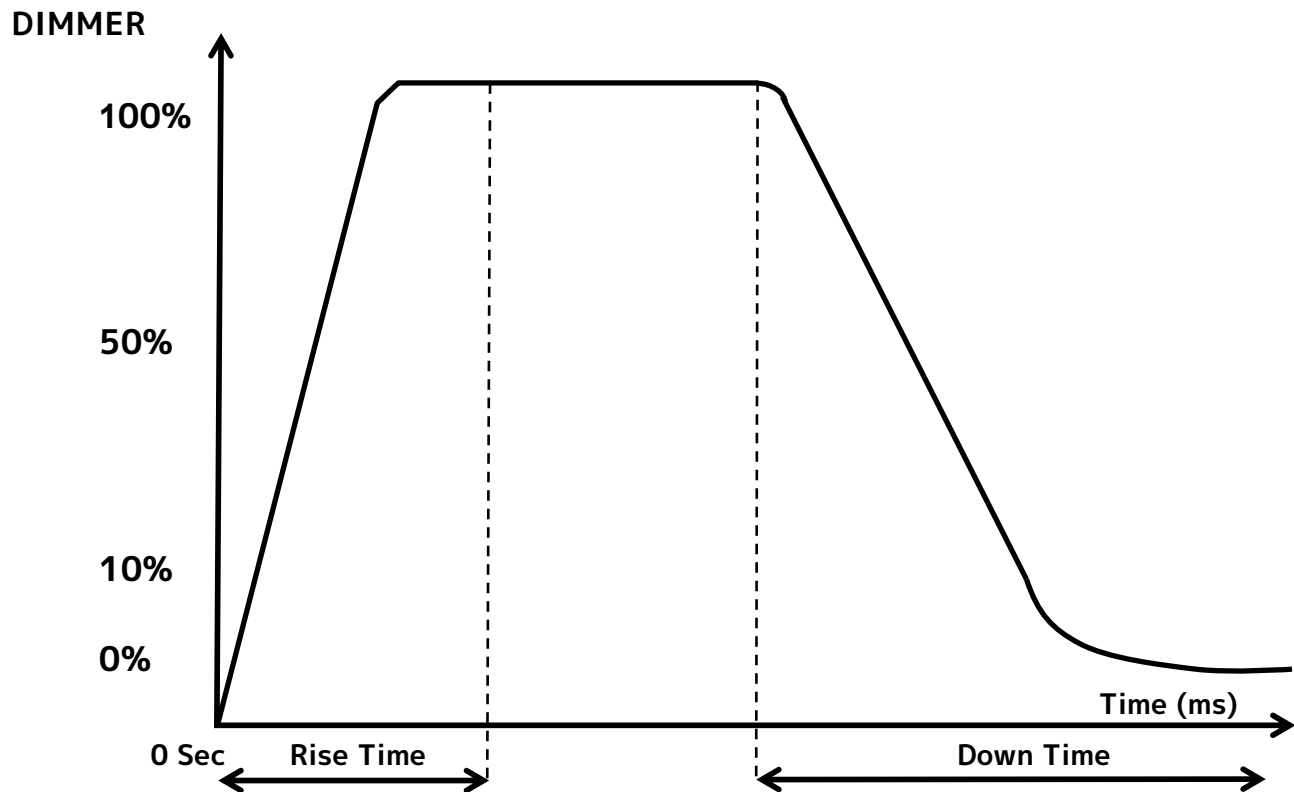

Dimming Curve Ramp Effect	0 sec Fade Time		1 sec Fade Time	
	Rise Time (ms)	Down Time (ms)	Rise Time (ms)	Down Time (ms)
Standard (default)	0	0	0	0
Stage	780	1100	1540	1660
TV	1180	1520	1860	1940
Architectural	1380	1730	2040	2120
Theatre	1580	1940	2230	2280
Stage 2	0	1100	0	1660

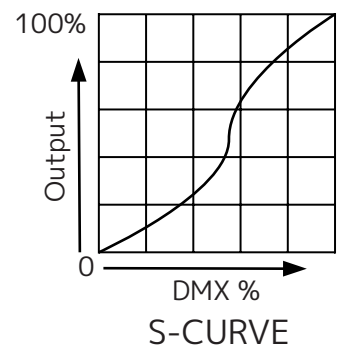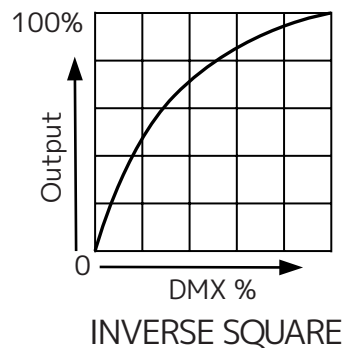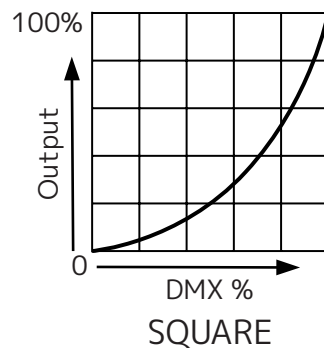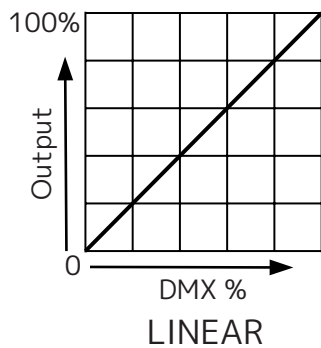

PRIMARY-SECONDARY SETUP

This function allows you to link units together to run in a Primary-Secondary set-up, in which one unit will act as the controlling unit and the others will react to the controlling unit's built-in programs. Any unit can be configured to act as a Primary or as a Secondary, but only one unit in a given system can be programmed to act as the Primary.

Primary-Secondary Connections and Settings:

1. Daisy chain your units via the XLR connectors on the bottom of each unit. Use standard XLR data cables to link your units together. Remember that the male XLR connector is the input and the female XLR connector is the output. The first unit in the chain (primary) will use the female XLR connector only. The last unit in the chain will use the male XLR connector only.
2. On the unit that you want to designate as the primary, use the display screen and control panel to navigate to **Control > Primary**, then press the ENTER button to confirm. Configure the operation of the device as desired.
3. On the units that you want to designate as secondaries, use the display screen and control panel to navigate to **Control > Secondary**, then press the ENTER button to confirm. The secondary units will now follow the operation of the primary unit.

NOTES:

- Only one unit should be configured as the primary, while all the other units should be configured as secondaries.
- All units should be set to the same DMX channel mode.
- If fixtures fail to sync, verify that all settings mentioned above are the same, then power all devices off, then switch them on again to re-establish the link.

MULTI-UNIT POWER LINKING

This feature allows you to connect the fixtures to one another using the power cable input and output sockets.

The maximum number of units that can be linked in this manner is as follows:

- **2 units when running on 120V power.**
- **6 units when running on 230V power.**

DO NOT EXCEED THIS MAXIMUM NUMBER WHEN POWER LINKING UNITS!

All linked units must be of the same make and model type. Do not mix and match units!

MAINTENANCE GUIDELINES



DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE

CLEANING

Frequent cleaning is recommended to ensure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky, or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean the external lens surface regularly with a soft cloth to avoid dirt/debris accumulation.

NEVER use alcohol, solvents, or ammonia-based cleaners.

MAINTENANCE

Regular inspections are recommended to ensure proper function and extended life. There are no user serviceable parts inside this fixture. Please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware, and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue, or sediments.

NEVER remove the ground prong from the power cable.

TORQUE SETTINGS FOR SCREWS

IN ORDER TO MAINTAIN THE IP65 RATING ON THE LIGHTING FIXTURES, ALL SCREWS MUST BE TIGHTENED TO THE FOLLOWING TORQUE SPECIFICATION USING A TORQUE DRIVER.

Refer to the table and diagram below for torque specifications.


TORQUE DRIVERS (Recommended): UTICA TS-30 (shown)

ALTERNATE DRIVERS:

- Proto J6107A
- Wiha 28887




CAUTION! DO NOT OVER TORQUE SCREWS, AS THIS CAN CAUSE LEAKAGE ISSUES!

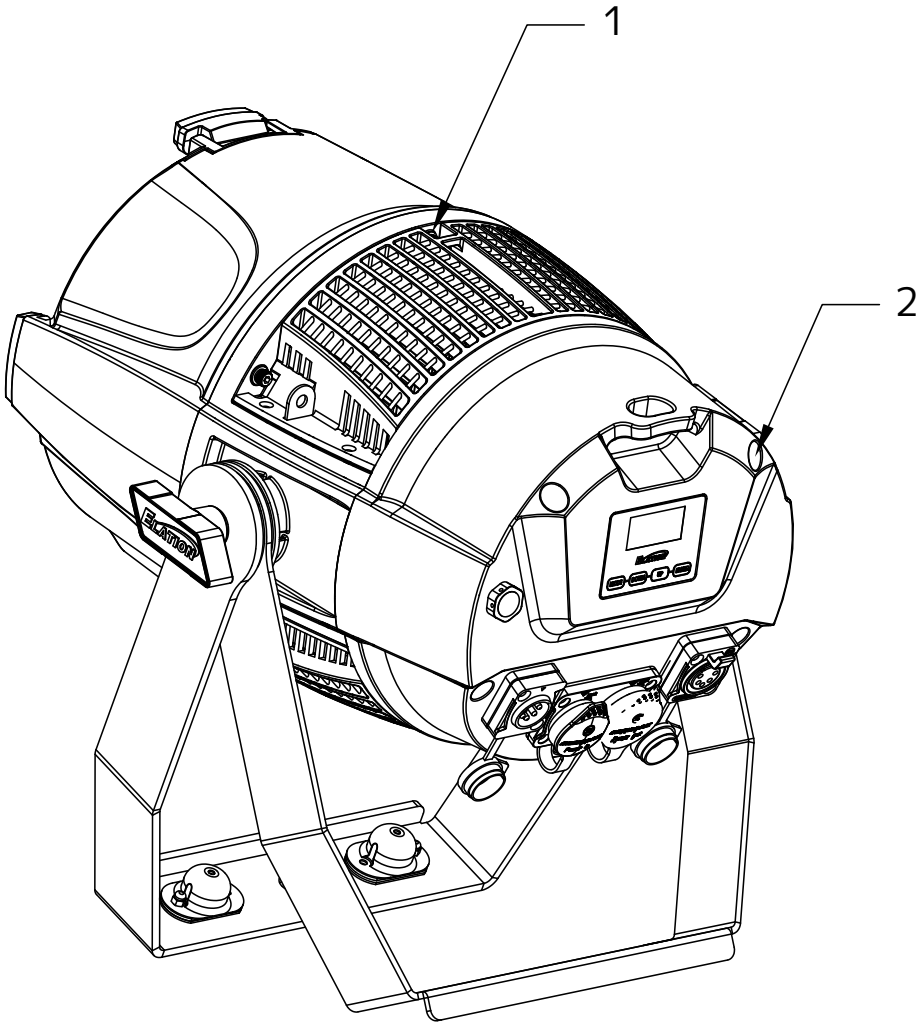

NO.	LOCATION	QUANTITY	TORQUE
1	Fixed Front Cover	6	11.3 ± 0.4 lb-in (13.0 ± 0.5 kg-cm)
2	Fixed Rear Cover	5	11.3 ± 0.4 lb-in (13.0 ± 0.5 kg-cm)

IP TEST PARAMETERS

Following any repair or maintenance procedure that requires disassembly of the fixture, use Elation's IP Tester to confirm the IP integrity of the fixture. The air valve is located on the back panel next to the display screen, as shown in the diagram below. Please contact Elation Service for information regarding the Elation IP Tester, or visit the product information page online at: <https://www.elationlighting.com/ip-tester>

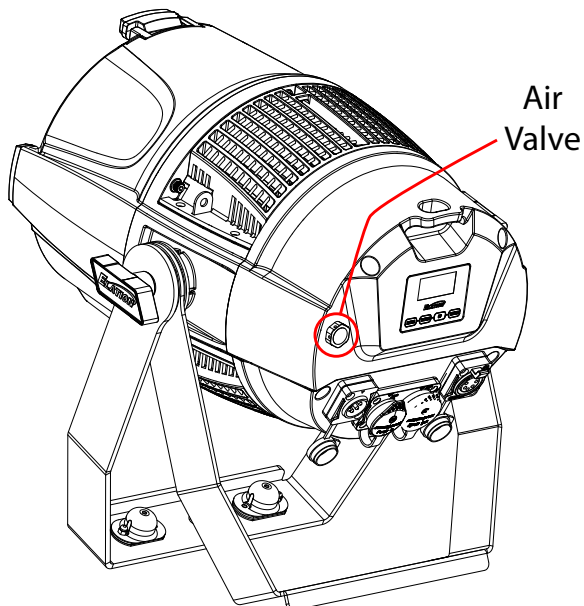

CAUTION! THE USE OF PROTECTIVE GLOVES AND SAFETY GOGGLES IS STRONGLY RECOMMENDED WHILE PERFORMING THE IP PRESSURE TEST! AVOID PLACING YOUR FACE, EYES, HANDS, ETC IN CLOSE PROXIMITY TO THE FIXTURE'S LENS WHILE PERFORMING THE TEST!

DE-HUMIDIFICATION: IP65 fixtures operating in high-humidity environments may experience residual fogging or condensation. Such fogging will not damage the fixture, and can be removed using the following procedure: position the unit with the air valve pointing upwards, then open the air valve and run the unit for 1-2 hours after reaching operating temperature. Then, while the fixture is still hot, re-install the air valve and allow the unit to cool down. Please note that this procedure should be performed in a dry, air-conditioned environment. Avoid additional fogging by drying the fixture completely before placing into a road case.



IP PRESSURE TESTING PARAMETERS					
Low Pressure Limit	High Pressure Limit	Inflation Time	Equilibrium Time	Detection Time	Max Leakage
2.901 psi (20.0 KPa)	3.336 psi (23 KPa)	30 sec	15 sec	15 sec	0.014 psi (100 Pa)

ERROR CODES

Error Codes subject to change without notice	
ERROR CODES	DESCRIPTION
FAN	Cooling Fan Error
TEMP	Temperature Error
ZOOM	Zoom Motor Error

SPECIFICATIONS

SOURCE

(12) 60W RGBL LEDs
30,000 Hour Average LED Life*

*May vary depending on several factors including but not limited to: Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control and Dimming.

PHOTOMETRIC DATA

Total Lumen Output
8,213 (Integrating Sphere)
7,922 (Goniometer)
CRI - 83.4
TLCI - 67
Zoom Range 5° - 40°
Beam Angle: 5° - 40°
Field Angle: 8.5° - 56.5°

EFFECTS

Dual Zone LED Control
Electronic Dimmer and Strobe
Variable 16-bit Dimming Modes and Curves

COLOR

RGBL Color Array
CMY Emulation
Variable CCT 2400K - 8500K
Virtual Gel Swatch Book

CONTROL / CONNECTIONS

7 DMX Channel Modes (4ch/12ch/15ch/13ch/
17ch/17ch/25ch)
Manual and DMX Controlled Dimmer and Color
4 Button Control Panel, LED Display
Aria x2 Wireless Device Management
RDM (Remote Device Management)
5pin DMX and IP65 Locking Power Cable In/
Out

SIZE / WEIGHT

Length: 13.4" (341mm)
Width: 9.8" (248mm)
Vertical Height: 17.8" (451mm)
Weight: 21.8 lbs. (9.9kg)

ELECTRICAL / THERMAL

AC 100-240V - 50/60Hz
570W Max Power Consumption
Power Thru Capacity: 8A (1 unit @110V; 3
units @240V)
5°F to 113°F (-15°C to 45°C)
BTU/hr (+/- 10%) 1943.7

INCLUDED ITEMS

IP65 Locking Power Cable
Safety Cable

OPTIONAL ITEMS

Gel Frame
Black Barndoor (LLP332)
8050000053 - Omega Bracket





APPROVALS / RATINGS

CE | cETLus | IP65 | FCC | UKCA




DIMENSIONAL DRAWINGS

FIXTURE

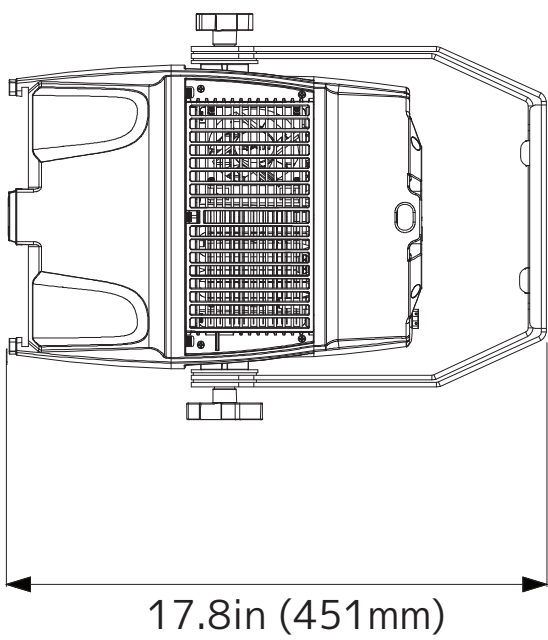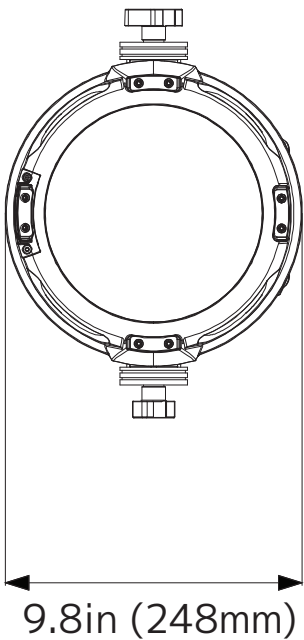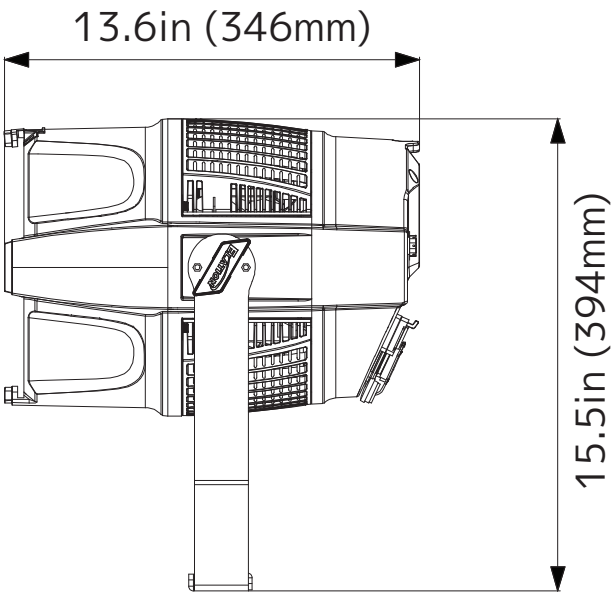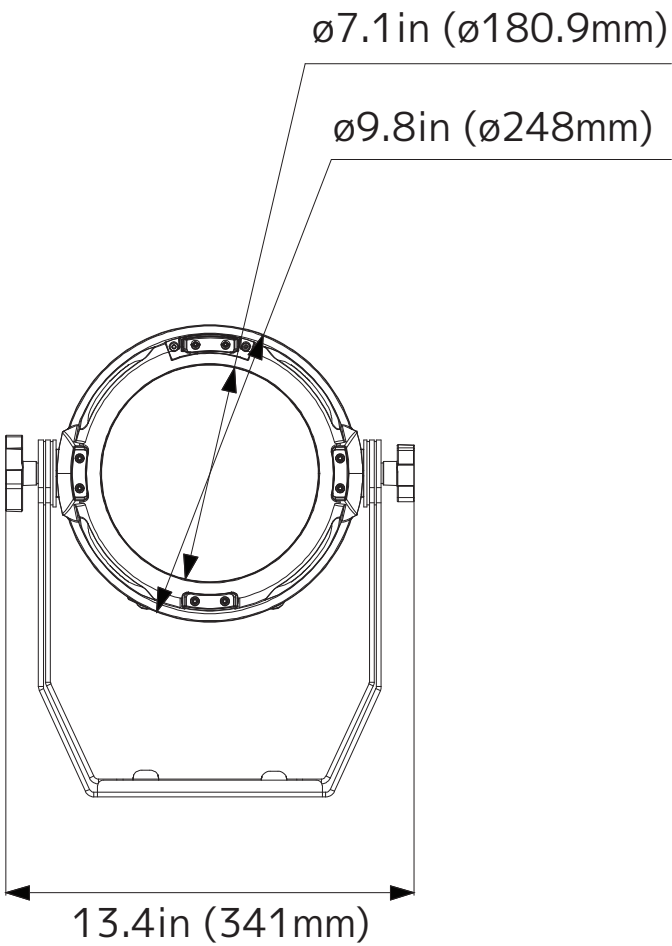


DIMENSIONAL DRAWINGS

BARNDOOR

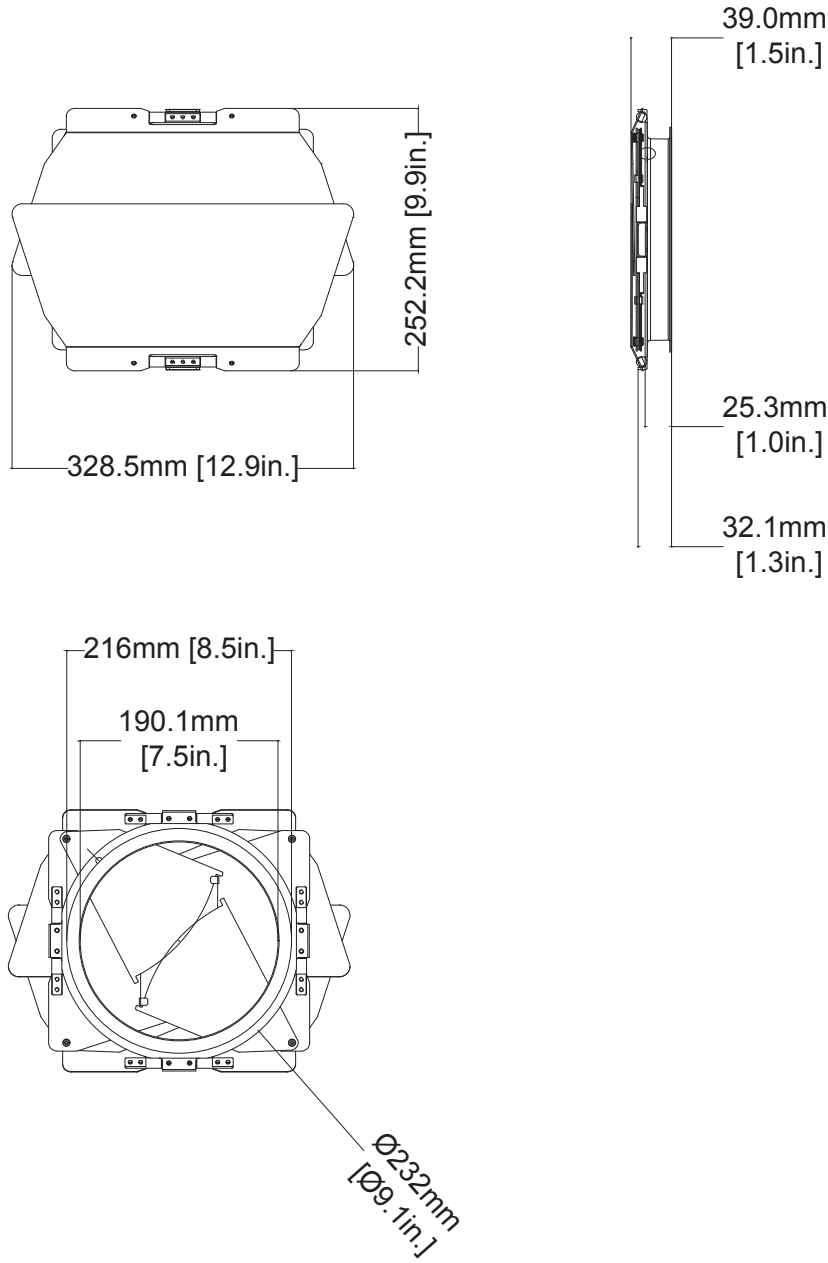

GEL FRAME

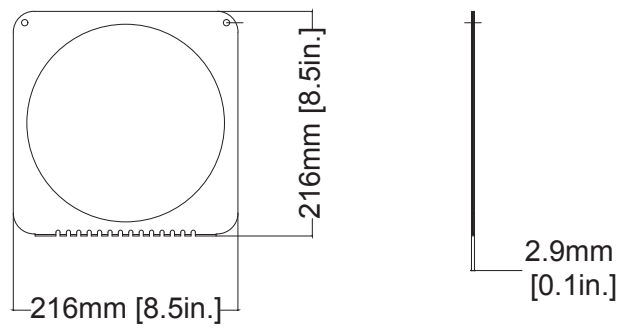

ORDERING INFORMATION

SKU (US)	SKU (EU)	ITEM DESCRIPTION
LLP312	1237000278	Elation Limelight Par L
PENDING	PENDING	Black Barndoor
PENDING	PENDING	Gel Frame
8050000053	PENDING	Omega Bracket



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RADIO FREQUENCY INTERFERENCE WARNINGS & INSTRUCTIONS

This product has been tested and found to comply with the limits as per Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device uses and can radiate radio frequency energy and, if not installed and used in accordance with the included instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the device.
- Increase the separation between the device and the receiver.
- Connect the device to an electrical outlet on a circuit different from which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you

