


# ***ELATION***®

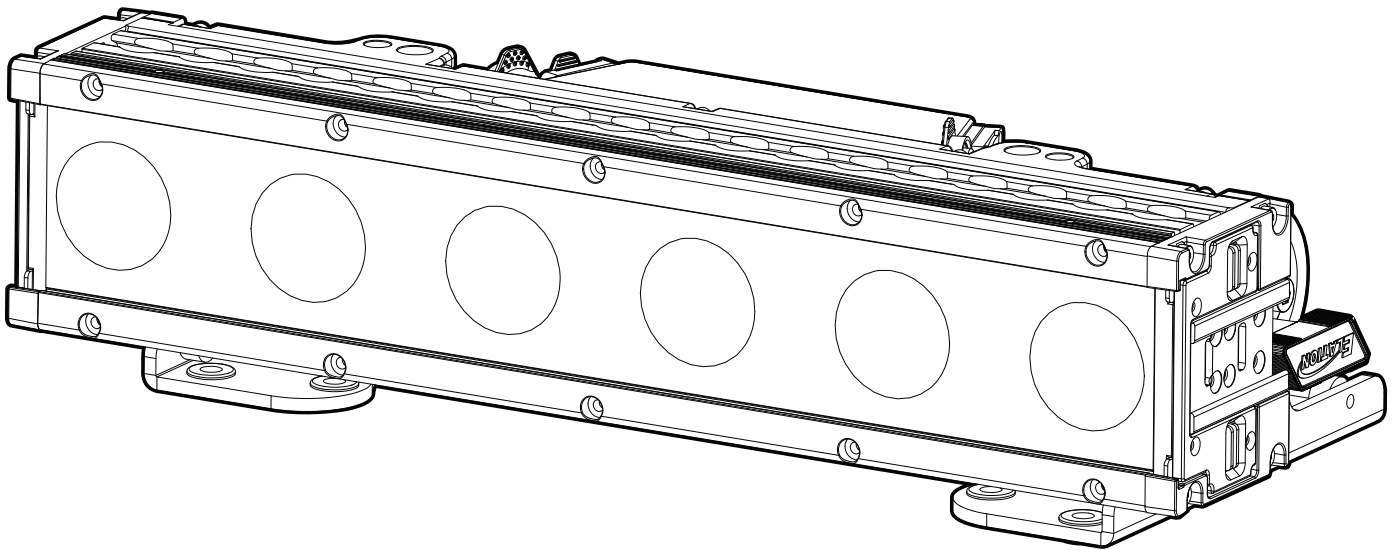

## **SIX+ BAR S** User Manual

©2025 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

**ELATION PROFESSIONAL** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

**Elation Professional USA | 6122 S. Eastern Ave. | Los Angeles, CA. 90040**

323-582-3322 | [www.elationlighting.com](http://www.elationlighting.com) | [info@elationlighting.com](mailto:info@elationlighting.com)

**Elation Professional B.V. | Junostraat 2 | 6468 EW Kerkrade, The Netherlands**

+31 45 546 85 66 | +31 45 546 85 96 fax | [www.elationlighting.eu](http://www.elationlighting.eu) | [info@elationlighting.eu](mailto:info@elationlighting.eu)

**Elation Professional Mexico | AV Santa Ana 30 | Parque Industrial Lerma, Lerma, Mexico 52000**

+52 (728) 282-7070

## DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online. Please scan the QR Code with your mobile device or visit [www.elationlighting.com](http://www.elationlighting.com) for the latest revision/update of this manual, before installation and/or programming.

Date	Document Version	Software Version	DMX Channel Mode	Notes
09/23/24	1.0	1.01	1/3/6/9/13/16/16/22/22/34/46/82/36	Initial Release
10/14/24	1.1	N/C	No change	Corrected DMX Traits
03/07/25	1.2	N/C	No change	Updated Emulation DMX Traits, Specifications
04/17/25	1.3	N/C	No Change	Updated IP65 Rated, Installation Guidelines, Safety Guidelines, System Menu

# CONTENTS

General Information	4
IP65 Rated	5
Warranty Returns (USA Only)	6
Safety Guidelines	7
Overview	9
Torque Settings for Screws	10
IP Test Parameters	11
Installation Guidelines	12
Accessory Installation	20
Remote Device Management (RDM)	22
System Menu/Software Updates	23
Dimmer Modes & Curves	26
DMX Traits	27
Emulation DMX Traits for SixBar 500	33
Pixel Grouping & Flip Diagram	36
Color Temperature	37
Virtual Colors	38
Error Codes	39
Maintenance Guidelines	40
Specifications	41
Ordering Information   Error Codes	43

# GENERAL INFORMATION

## INTRODUCTION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information. **This device is intended for use by trained personnel only, and is not suitable for private use.**

## UNPACKING

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

## BOX CONTENTS

- Safety Cable
- IP65 Locking Power Cable
- Frost Filter
- Glare Shield
- Fixture Interconnect Slice

## CUSTOMER SUPPORT

Contact ELATION Service for any product related service and support needs. Also visit [forums.elationlighting.com](https://forums.elationlighting.com) with questions, comments, or suggestions.

**ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST**  
**323-582-3322 | Fax 323-832-9142 | [support@elationlighting.com](mailto:support@elationlighting.com)**

**ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET**  
**+31 45 546 85 63 | Fax +31 45 546 85 96 | [support@elationlighting.eu](mailto:support@elationlighting.eu)**

**REPLACEMENT PARTS** please visit [parts.elationlighting.com](https://parts.elationlighting.com)



## IMPORTANT NOTICE!

**THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.**

# IP65 RATED

**The International Protection (IP)** rating system is commonly expressed as “IP” (Ingress Protection) followed by two numbers (i.e. IP65), where the numbers define the degree of protection. The first digit (Foreign Bodies Protection) indicates the extent of protection against particles entering the fixture, and the second digit (Water Protection) indicates the extent of protection against water entering the fixture. An **IP65** rated lighting fixture is designed and tested to protect against the ingress of dust (**6**), and low-pressure water jets from any direction (**5**).

**Maritime/Seaside Environment Installations:** A maritime/seaside environment is adjacent to the sea and caustic to electronics through exposure to atomized salt water and humidity, whereas a coastal environment extends 5 miles inland.

Maritime installations require additional preparation, and additional service intervals may be needed given the maritime use. In general, IP ratings presuppose freshwater conditions VS maritime conditions, which are typically more “caustic” to IP fixtures (both internally and externally). A duty-cycle may also be needed when units are not in use. During times of high humidity and colder temperatures, condensation may occur internally so the fixture may require a duty-cycle to bring it up to running temperature, allowing any accumulation of moisture to be expelled via the vent valve. Recommendations can change based on installation environmental circumstances.

**NOTE: NOT ALL FEATURES LISTED ARE AVAILABLE ON ALL FIXTURES; THE FOLLOWING INSTRUCTIONS MAY NOT APPLY. CONTACT SUPPORT FOR ADDITIONAL DETAILS.**

**Exterior Maintenance:** Inspect the exterior every 30-days. The unit must be powered off/disconnected. The chassis should be inspected for any signs of contaminants. Inspect optics to determine if the lens is obstructed, then clean optics and chassis accordingly. Based on initial finding, schedule maintenance accordingly, keeping in mind that exterior maintenance will be required. Even if the luminaires are NOT in use, maintenance will still be needed given its location (exterior use). The use of a durable type of wax on the chassis is recommended since it will help prevent contaminant build up. Inspect both power and data lines for any signs of contaminants or corrosion. Periodically reapplying di-electric grease, especially in coastal environments. If any signs of corrosion/contaminants are present, clean thoroughly, and/or replace connectors, then reapply di-electric grease. Typically, this should be done annually, or any time an opportunity presents itself. As a preventive measure, annual replacement of both vent valves is recommended. The vent valve membrane can become contaminated and/or clogged causing improper venting of humidity within the luminaire. Inspect all mounting hardware as a precaution.

**Interior Maintenance:** Inspect the interior every 30-days. The unit must be powered off/disconnected.

- Inspect zoom/focus mechanism, clean optics, lubricate linear bearings (Krytox oil) as needed, inspect belts for wear
- Inspect all rotating effect wheels, manually rotate them, note any resistance
- Inspect all remaining rotating belts for any wear
- Inspect all fans, clean as needed, check rotation, check connections
- Inspect CMY module, manually move flags and check for signs of resistance, and if needed, clean guide rods first, then reapply a thin layer of grease (moly lube)
- Clean interior with low-volume compressed air, then clean optics prior to reassembly of head covers

Although the base has limited moving parts, the pan belt should also be inspected for wear. Remember to always perform an IP test anytime a cover is removed.

There is no specific time frame regarding the routine replacement of parts such as belts/stepper motors, PCBs, or LEDs. These items should only be replaced on an as needed bases, except for cooling fans, which should be replaced once the luminaries reach 10,000-hours. This is a prophylactic measure intended to keep the unit running as cool as possible, insuring proper function of all internal components. A complete service breakdown is available, please contact [service@elationlighting.com](mailto:service@elationlighting.com) for any needed parts or manuals.

## LIMITED WARRANTY (USA ONLY)

- A. Elation Professional hereby warrants, to the original purchaser, Elation Professional products to be free of manufacturing defects in material and workmanship for a period of two years (730 days), and Elation Professional product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days), from the original date of purchase. This warranty excludes discharge lamps and all product accessories. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, send the product only to the Elation Professional factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional shall have no liability what so ever for loss and/or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional factory unless prior written authorization was issued to purchaser by Elation Professional; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.
- D. This is not a service contract, and this warranty does not include any maintenance, cleaning or periodic check-up. During the periods as specified above, Elation Professional will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional. All products covered by this warranty were manufactured after January 1, 1990, and bare identifying marks to that effect.
- E. Elation Professional reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.
- G. This warranty is the only written warranty applicable to Elation Professional products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

### WARRANTY RETURNS

All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

# SAFETY GUIDELINES

This fixture is a sophisticated piece of electronic equipment. To guarantee smooth operation, it is important to follow all instructions and guidelines in this manual. Elation Professional is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging parts included with this fixture should be used for installation. Any modifications to the fixture and/or the included mounting hardware will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.




**PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED.**



**THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF. DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS DEVICE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.**



**DO NOT PLUG THIS UNIT INTO A DIMMER PACK  
DO NOT REMOVE THE COVER UNDER ANY CONDITIONS  
NEVER OPERATE THIS UNIT WITH THE CASING REMOVED  
UNPLUG FROM POWER DURING LONG PERIODS OF NON-USE  
DISCONNECT POWER BEFORE PERFORMING MAINTENANCE**

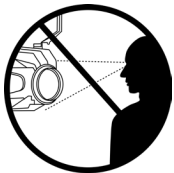

**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!  
RETINA INJURY RISK - MAY INDUCE BLINDNESS!  
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!**



**FIXTURE SHOULD BE PLACED A MINIMUM OF 1.0 FOOT (0.3 METERS) FROM ANY NEARLY OBJECTS OR SURFACES.  
FIXTURE SHOULD BE PLACED A MINIMUM OF 1.6 FEET (0.5 METERS) FROM ANY FLAMMABLE MATERIALS.  
MAXIMUM AMBIENT OPERATING TEMPERATURE IS 113°F (45°C)**



# SAFETY GUIDELINES

## **CAUTION**

### **HIGH INTENSITY ULTRAVIOLET LIGHT**






**AVOID DIRECT EYE & SKIN EXPOSURE.  
WEAR PROPER EYE & SKIN PROTECTION.  
SEE MANUAL FOR SAFETY INSTRUCTIONS.**

**RISK GROUP 3 - RISK OF EXPOSURE TO ULTRAVIOLET UV RADIATION! FIXTURE EMITS HIGH INTENSITY WAVELENGTH OF ULTRAVIOLET UV LIGHT FROM THE UV COLOR FILTER. WEAR PROPER EYE AND SKIN PROTECTION. AVOID PROLONGED PERIODS OF EXPOSURE TO UV COLOR FILTER. AVOID WEARING WHITE COLOR CLOTHING AND/OR USING UV PAINTS ON SKIN. AVOID DIRECT EYE AND/OR SKIN EXPOSURE AT DISTANCES LESS THAN 10 feet (3m). DO NOT OPERATE FIXTURE WITH DAMAGED/MISSING EXTERNAL COVERS. DO NOT LOOK DIRECTLY INTO THE UV LIGHT AND/OR VIEW UV LIGHT DIRECTLY WITH OPTICAL INSTRUMENTS THAT MAY CONCENTRATE THE LIGHT/RADIATION OUTPUT. INDIVIDUALS SUFFERING FROM A RANGE OF EYE CONDITIONS, SUNLIGHT EXPOSURE DISORDERS, OR INDIVIDUALS USING PHOTSENSITIVE MEDICATION, MAY RECEIVE DISCOMFORT IF EXPOSED TO THE ULTRAVIOLET UV LIGHT EMITTED FROM THE UV LED.**


- **DO NOT TOUCH** the fixture housing during operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before serving.
- **DO NOT** shake fixture, avoid brute force when installing and/or operating fixture.
- **DO NOT** operate fixture if the power cord is frayed, crimped damaged and/or if any of the power cord connectors are damaged and do not insert into the fixture securely with ease.
- **NEVER** force a power cord connector into the fixture. If the power cord or any of its connectors are damaged, replace it immediately with a new one of similar power rating.
- Allow approx. 6" (15cm) between fixture and other devices or a wall for proper cooling.
- Always disconnect fixture from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end, never pull out the plug by tugging the wire portion of the cord.
- During the initial operation of this fixture, a light smoke or smell may emit from the interior of the fixture. This is a normal process and is caused by excess paint in the interior of the casing burning off from the heat associated with the lamp and will decrease gradually over time.
- Consistent operational breaks will ensure the fixture will function properly for many years.
- **ONLY** use the original packaging and materials to transport the fixture in for service.



# OVERVIEW

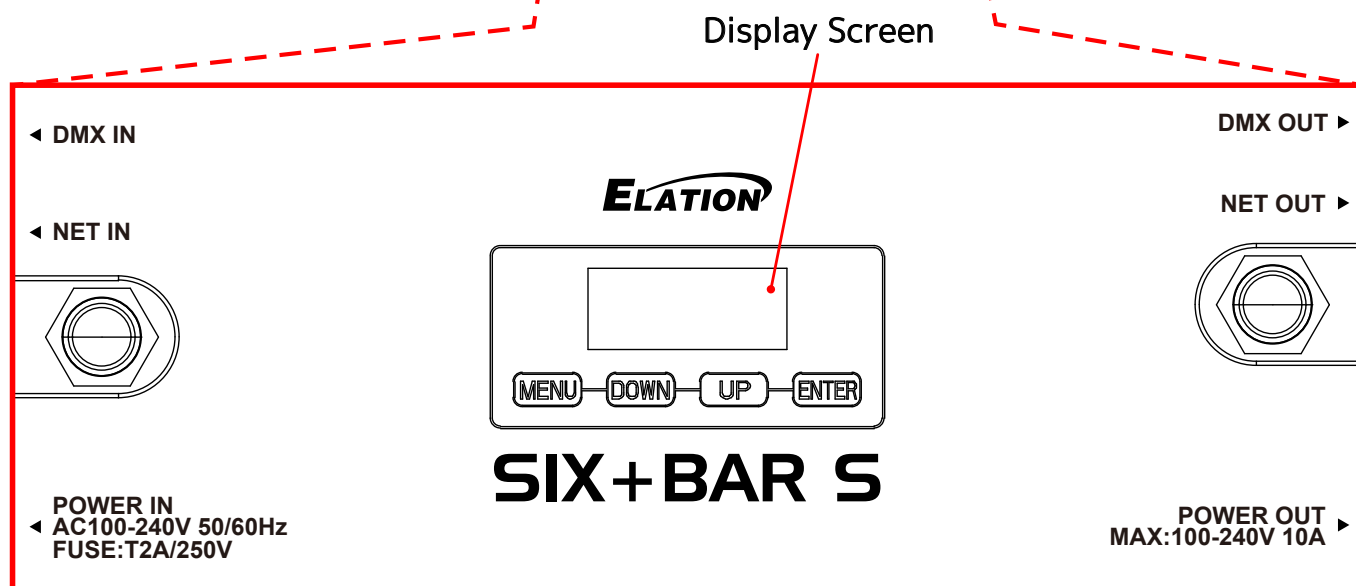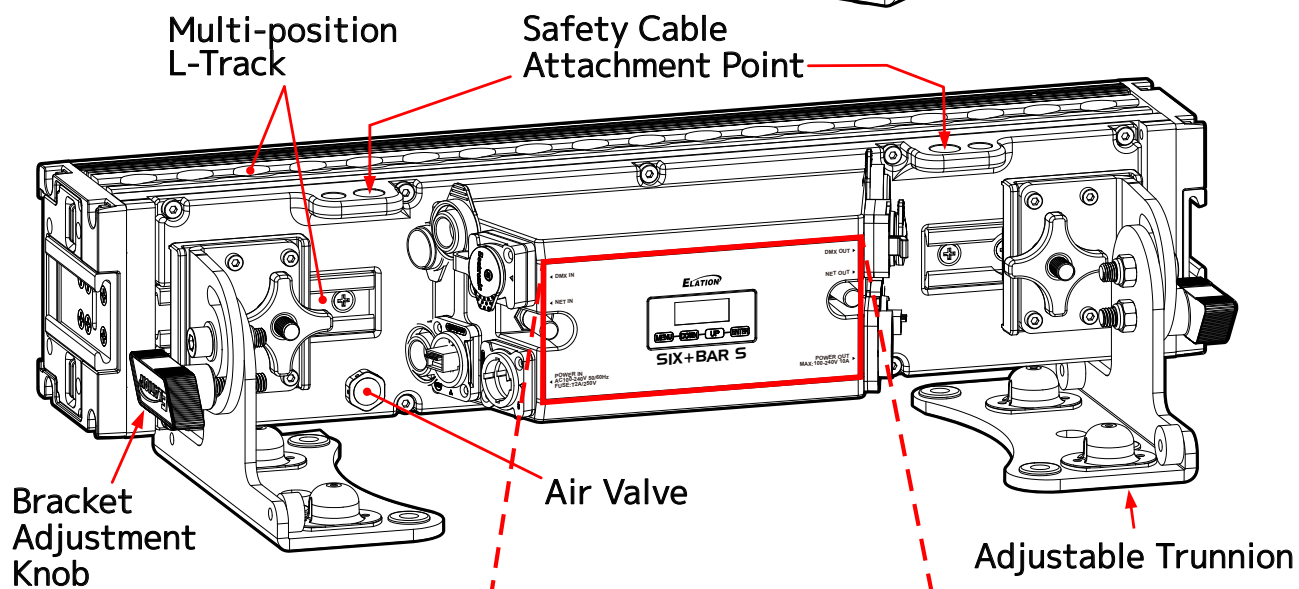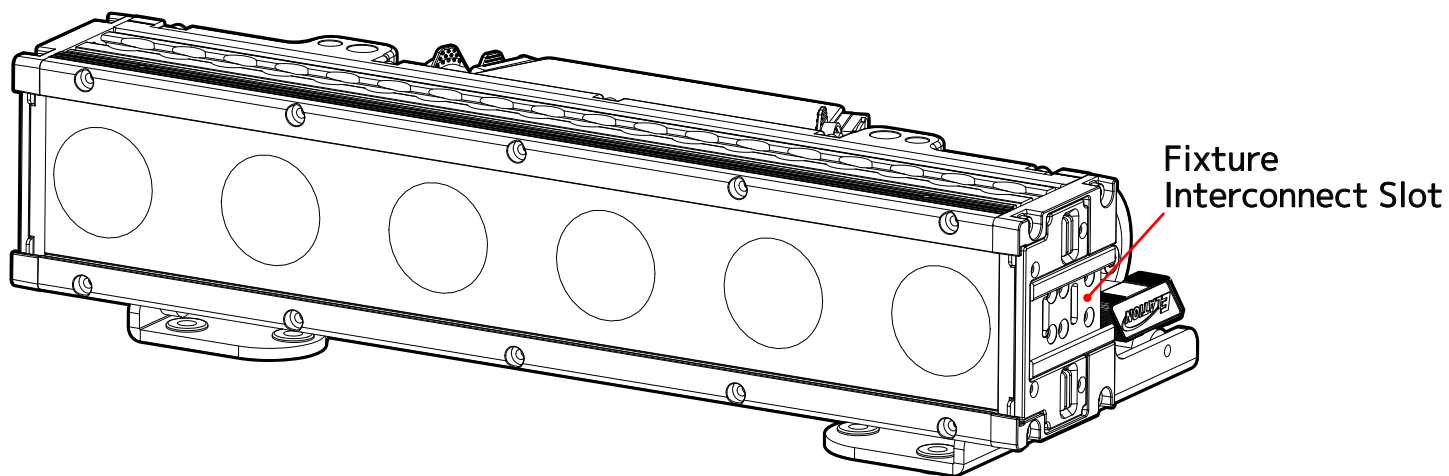

# TORQUE SETTINGS FOR SCREWS

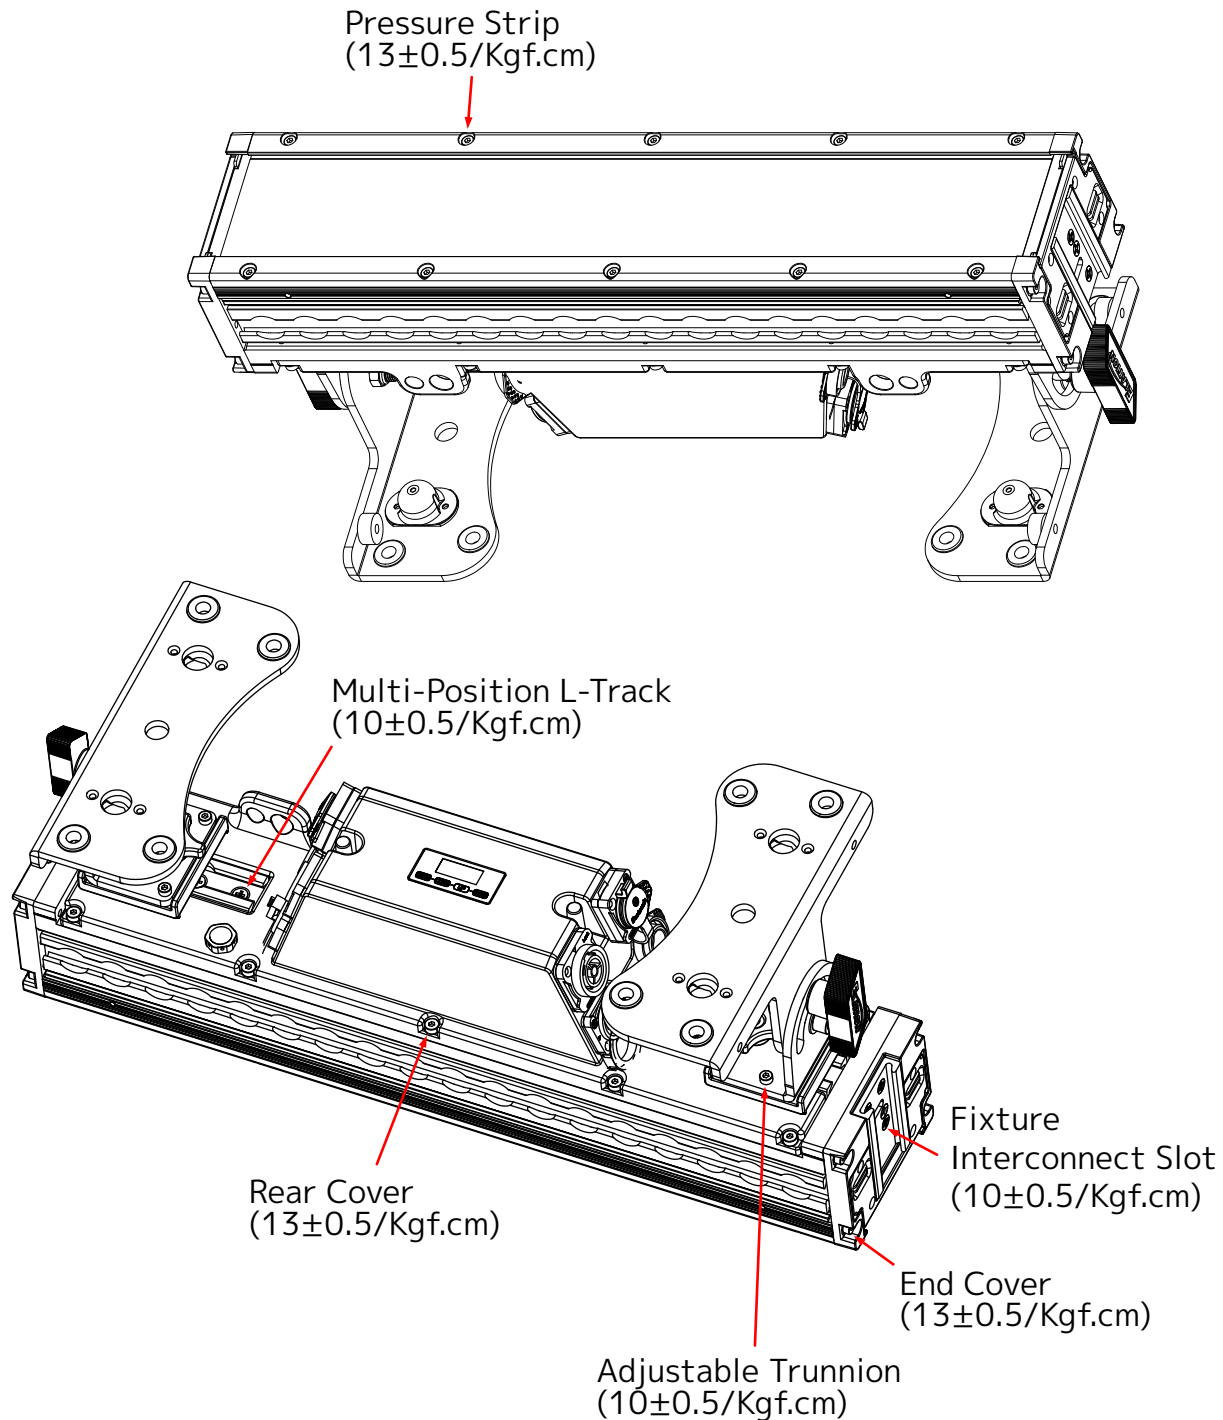

**CAUTION! DO NOT OVER TORQUE SCREWS AS THIS CAN CAUSE LEAKAGE ISSUES!  
TO CONFIRM THE IP65 INTEGRITY, TEST FIXTURE USING THE ELATION IP TESTER. CONTACT  
ELATION SERVICE FOR MORE DETAILS.**

# IP TEST PARAMETERS


Following any repair or maintenance procedure that requires disassembly of the fixture, use Elation's IP Tester to confirm the IP integrity of the fixture. The air valve is located on the back panel next to the display screen, as shown in the diagram below. Please contact Elation Service for information regarding the Elation IP Tester, or visit the product information page online at: <https://www.elationlighting.com/ip-tester>



**CAUTION! THE USE OF PROTECTIVE GLOVES AND SAFETY GOGGLES IS STRONGLY RECOMMENDED WHILE PERFORMING THE IP PRESSURE TEST! AVOID PLACING YOUR FACE, EYES, HANDS, ETC IN PROXIMITY TO THE LENS OF THE FIXTURE WHILE PERFORMING THE TEST!**

**DE-HUMIDIFICATION:** IP65 fixtures operating in high-humidity environments may experience residual fogging or condensation. Such fogging will not affect the fixture, and can be removed using the following procedure: position the unit with the air valve pointing upwards, then open the air valve and run the unit for 1-2 hours after reaching operating temperature. Then, while the fixture is still hot, re-install the air valve and allow the unit to cool down. Please note: this procedure should be performed in a dry, climate-controlled environment. Avoid additional fogging by drying the fixture completely before placing into a road case.

Elation Product	Minimum Value		Maximum Value		Inflation Time	Balance Time	Inspection Time	Leakage
	Kpa	Psi	Kpa	Psi	S	S	S	Pa
Elation SIX+ BAR S	20	3	23	3	30	15	15	>100

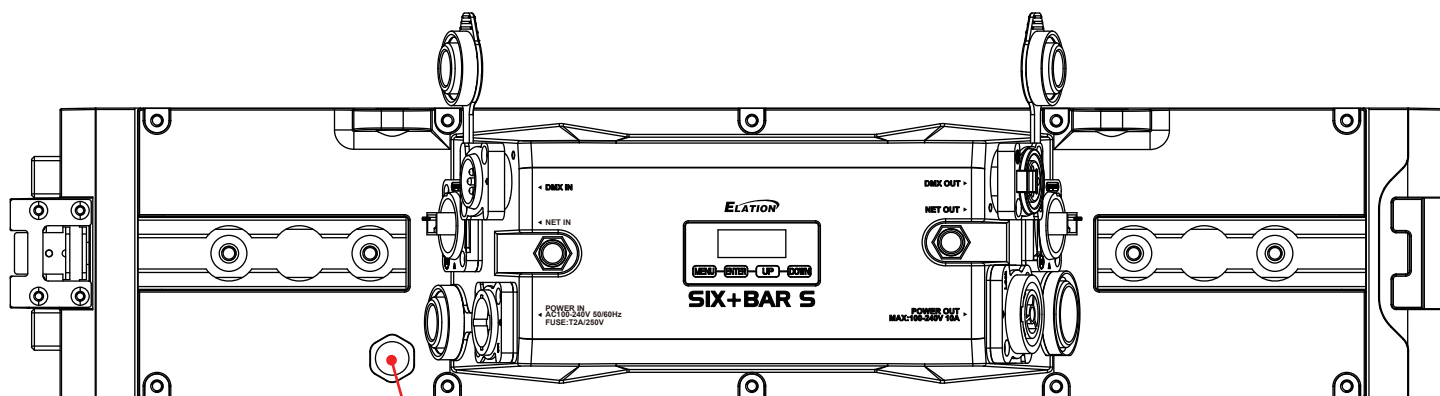

Air Valve



# INSTALLATION GUIDELINES



## FLAMMABLE MATERIAL WARNING

Keep fixture minimum 5.0 feet (1.5m) away from flammable materials and/or pyrotechnics.



## ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



**MINIMUM DISTANCE TO OBJECTS/SURFACES IS 1 FOOT (0.3 METERS)**



**MINIMUM DISTANCE OF FLAMMABLE MATERIALS FROM THE SURFACE IS 1.6 FEET (0.5 METER)**



**MAXIMUM AMBIENT TEMPERATURE 113° F (45°C)**



**DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!**

Fixture **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before rigging/mounting a single fixture or multiple fixtures to any metal truss/structure or placing the fixture(s) on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture(s), clamps, cables, and accessories.

Fixture(s) should be installed in areas outside walking paths, seating areas, or away from areas where unauthorized personnel might reach the fixture by hand.

**NEVER** stand directly below the fixture(s) when rigging, removing, or servicing.

Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable.

Allow approximately 15 minutes for the fixture to cool down before servicing.

**ATTENTION: WHEN INSTALLING MULTIPLE FIXTURES IN ANY CONFIGURATION—WHETHER VERTICAL, HORIZONTAL, OR CUSTOM-SHAPED—IT IS ESSENTIAL TO SECURE THEM ADEQUATELY. THEY MUST BE FIRMLY ANCHORED TO WITHSTAND LATERAL FORCES, INCLUDING WIND OR JARRING IMPACTS FROM PEOPLE OR OBJECTS, TO PREVENT ANY DISPLACEMENT.**


# INSTALLATION GUIDELINES

## CLAMP INSTALLATION

This device features a mounting clamp attachment point built into the Adjustable Trunnion, as well as a safety cable attachment point located on the bottom of the fixture.

## OMEGA BRACKETS WITH CLAMP INSTALLATION


Insert the Omega Brackets into the matching holes in the Adjustable Trunnion. Secure the Omega Brackets to the fixture by turning each quick-lock fastener  $\frac{1}{4}$  turn clockwise; making sure the fastener is completely locked.

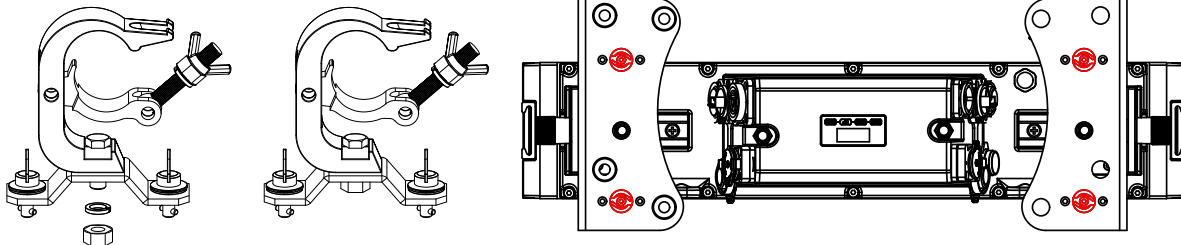

### SAFETY CABLE

**ALWAYS ATTACH AN APPROPRIATELY RATED SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.**

**IF THE FIXTURES ARE PART OF A LARGER ARRAY, ATTACH A SAFETY CABLE TO THE SAFETY CABLE ATTACHMENT POINT ON THE BACK OF EACH FIXTURE. FOR RIGGING PURPOSES, SECURE THE TOP SAFETY CABLE TO A FIXED POINT AND LOOP EACH SUBSEQUENT SAFETY CABLE THROUGH THE ONE ABOVE IT.**

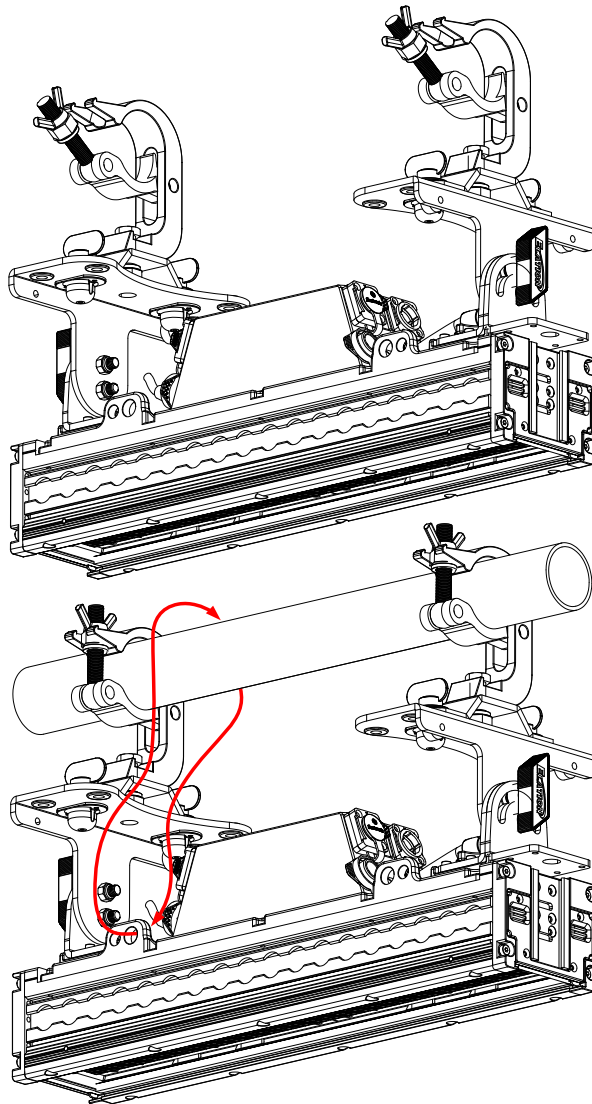

## MOUNTING THE FIXTURE ON A TRUSS USING CLAMPS WITH OMEGA BRACKETS

When mounting the fixture to a truss, be sure to secure an appropriately rated professional grade rigging clamp to the included **Omega Brackets** using an M10 or M12 screw fitted through the center hole of the **Omega Brackets**. The fixture provides a built-in rigging point for a **SAFETY CABLE** (not included). Be sure to use the designated rigging points for the safety cable.


# INSTALLATION GUIDELINES

## L-TRACK MOUNTING

The L-track mounting system enables the user to slide the mounting clamps along the tracks and secure them in the desired position. The L-tracks are situated on the rear, and along the sides of the fixture. Special L-track mounting clamps, which feature an L-track attachment rail instead of a mounting bolt hole, are available in both standard and extended lengths. Similarly, L-track adapters are also available, which can be fitted to any standard mounting clamp.

To attach an L-track clamp or adapter, simply insert the attachment rail into the matching track on the fixture, slide it to the desired location, and tighten the fastener knob on the attachment to ensure it is securely in place.

When utilizing the L-track for rigging, the maximum capacity is 12 fixtures, or 187 lbs (84.82 kg).

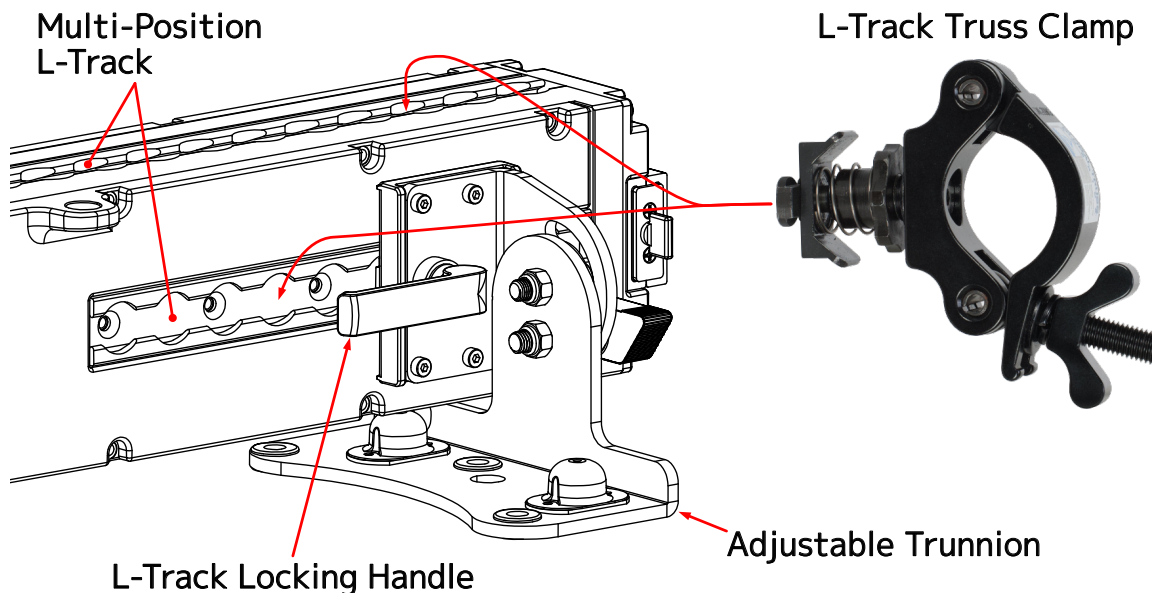




# INSTALLATION GUIDELINES

## FIXTURE INSTALLATION

The Elation SIX+ BAR S is fully operational in three different mounting positions, hanging upside-down, mounted sideways on trussing, or set on a flat level surface. Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

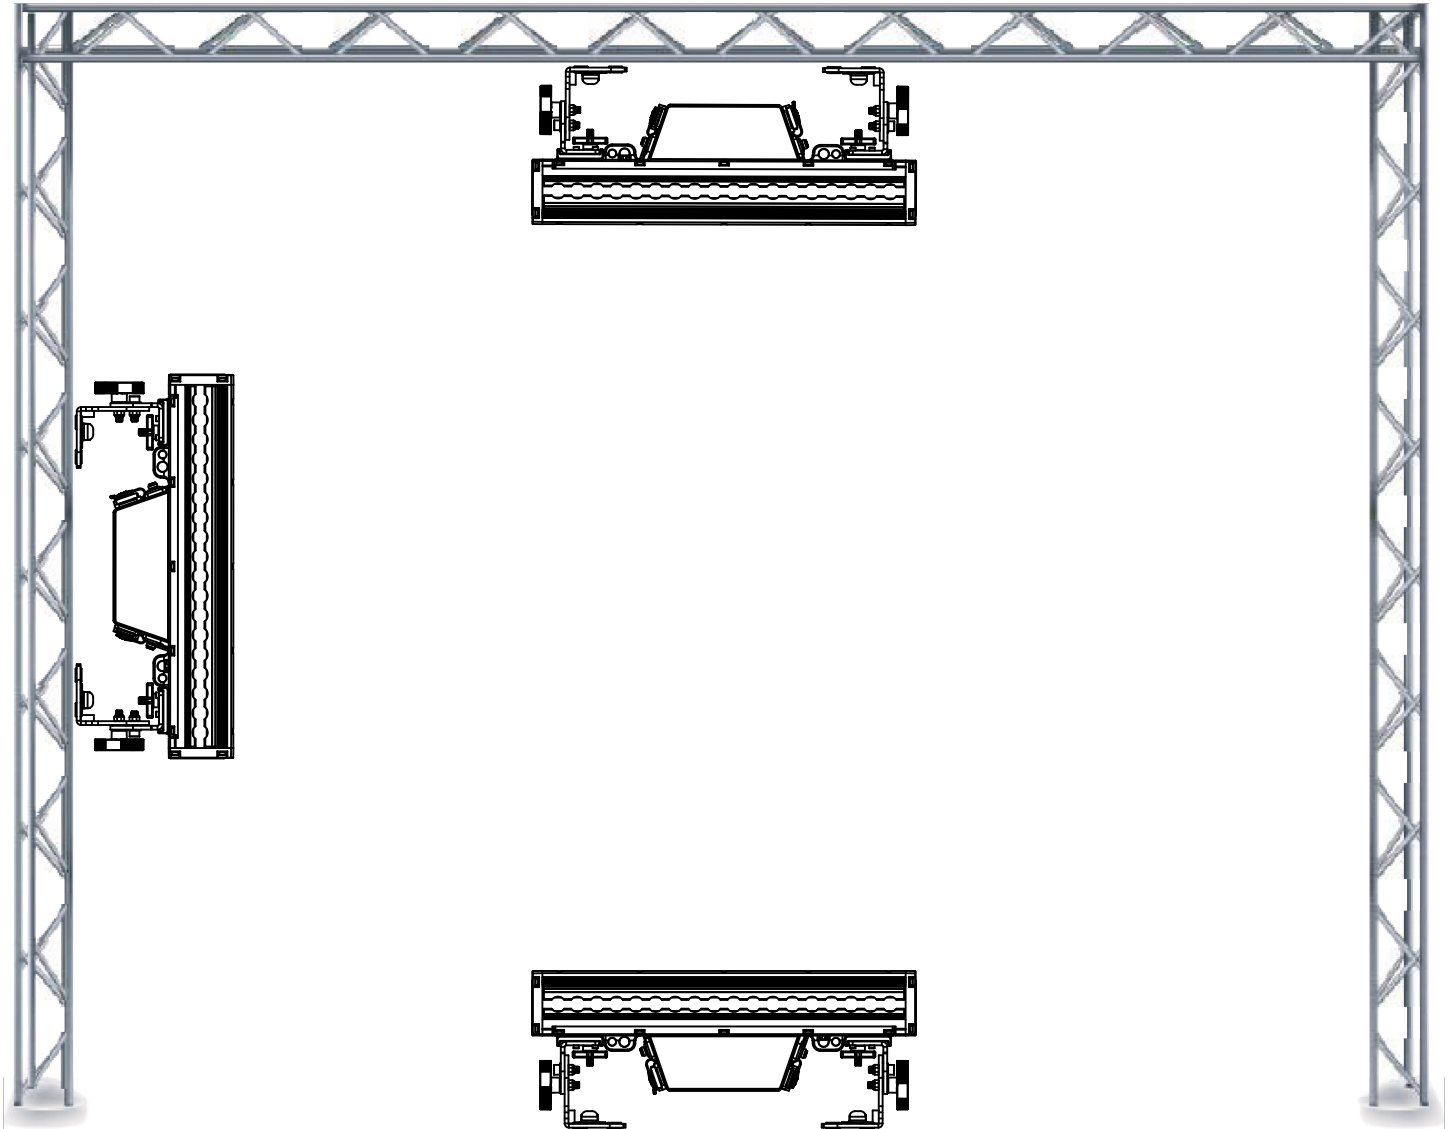

**FALLING FIXTURES CAN CAUSE SEVERE INJURY OR SERIOUS EQUIPMENT DAMAGE! FOR THIS REASON, FIXTURES SHOULD BE INSTALLED AND INSPECTED ONLY BY QUALIFIED PERSONNEL. DO NOT INSTALL THE UNIT IF YOU LACK THE QUALIFICATIONS TO DO SO, OR IF YOU HAVE DOUBTS ABOUT THE SAFETY AND SECURITY OF THE INSTALLATION SETUP OR LOCATION!**




**ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.**




# INSTALLATION GUIDELINES



## FIXTURE INTERCONNECTORS

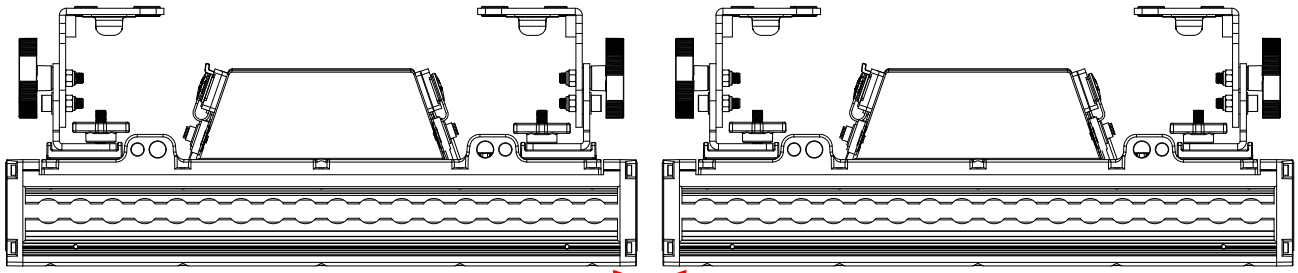

To connect the fixtures end-to-end, ensure that the interconnect slots are flush.

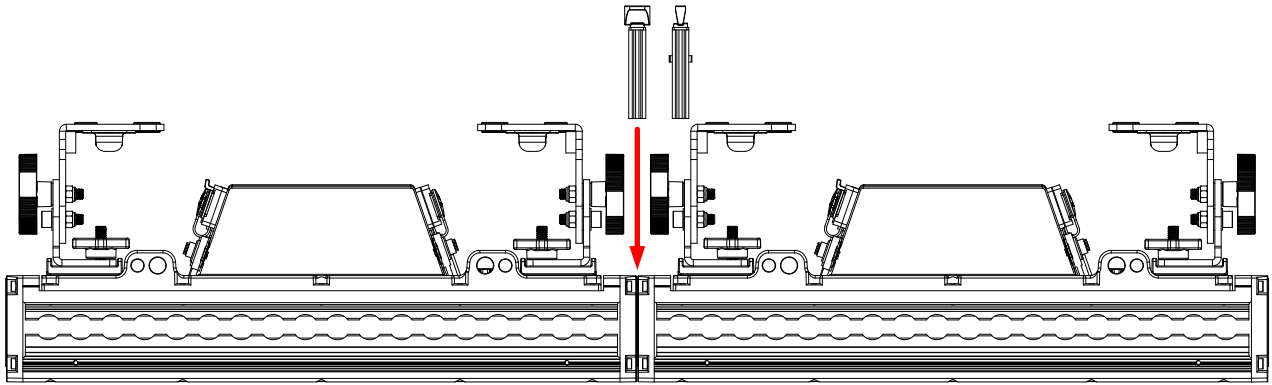

Fully insert the splice lock. Once the splice lock is fully seated, turn the lock tab to engage it, rotating the lock tab into the interconnect lock slot.

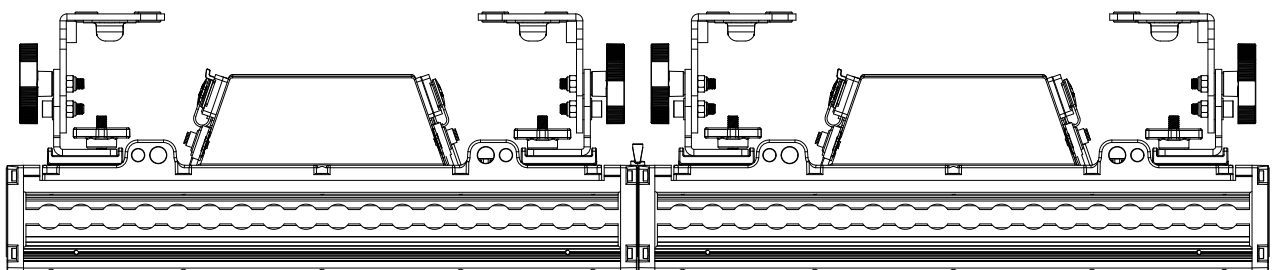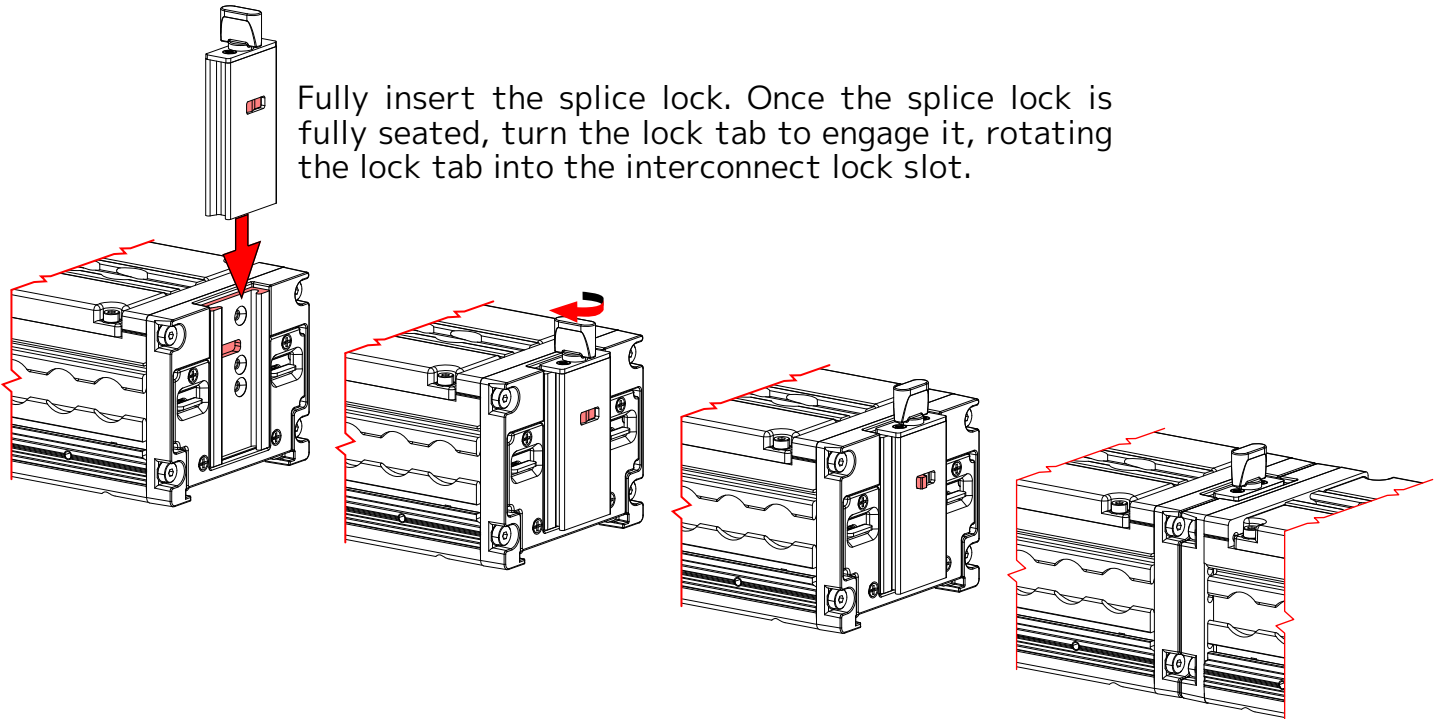


# INSTALLATION GUIDELINES

## RIGGING LIMIT


### HORIZONTAL SUSPENSION

When utilizing the provided Trunnions for rigging in a horizontal array orientation, the maximum capacity is 6 fixtures, or 96 lbs (43.54 kg). However, if employing the L-Track for rigging in the same orientation, the maximum capacity increases to 12 fixtures, or 187 lbs (84.82 kg).

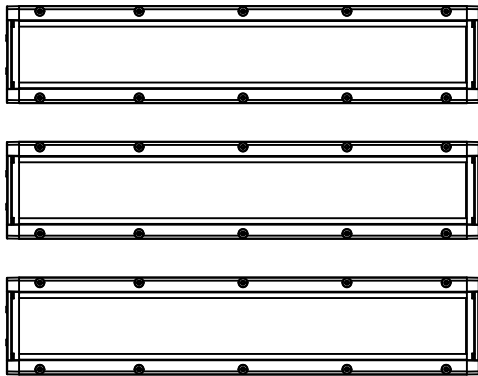

### VERTICAL SUSPENSION

When rigging vertically with Interconnect Splices to connect fixtures, the maximum capacity is 12 fixtures, or 187 lbs (84.82 kg).



# INSTALLATION GUIDELINES


## ART-NET | sACN CONNECTION

When connecting fixture to a network switch to control multiple devices, a Gigabit Ethernet Switch that supports IGMP (Internet Group Management Protocol) is required. Using a Gigabit Ethernet Switch that does not support IGMP can cause erratic behavior of all connected devices to the switch.

## POWER AND DATA CABLES



**REGARDLESS OF FIXTURE ORIENTATION, TO MAINTAIN THE IP65 RATING INTEGRITY OF THE FIXTURE, ALL CABLES MUST BE ROUTED TOWARDS THE GROUND TO PREVENT WATER ACCUMULATION AROUND THE CONNECTIONS.**

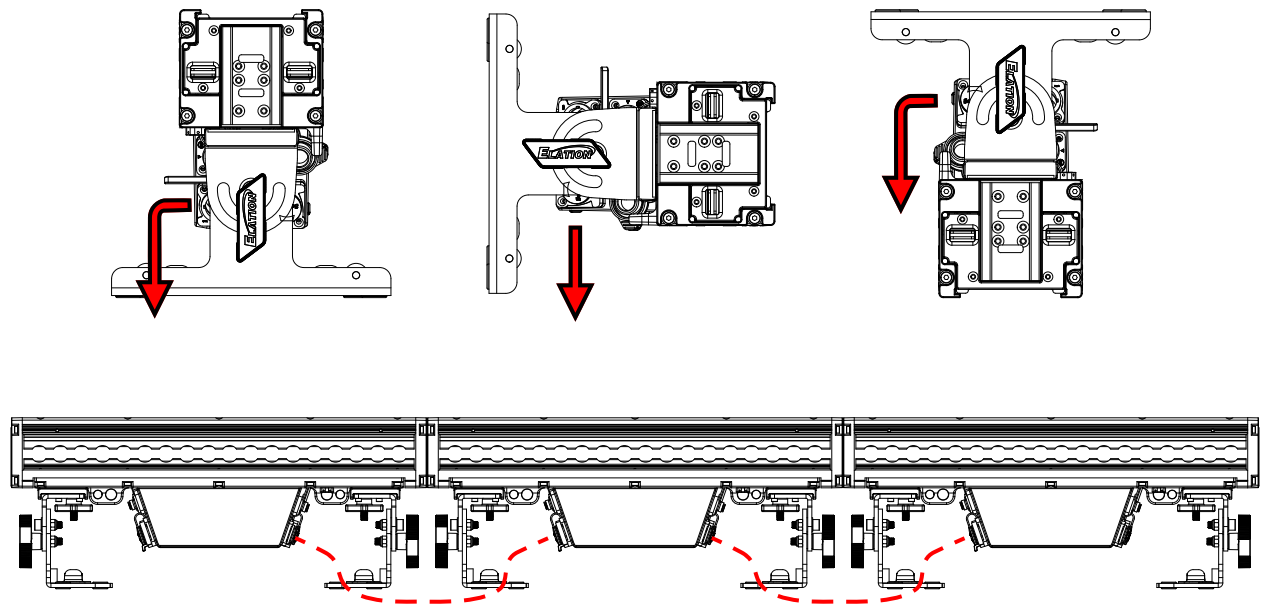


# INSTALLATION GUIDELINES

## POTENTIAL INTERNAL FIXTURE DAMAGE FROM EXTERNAL SOURCES OF LIGHT BEAMS

External sources of light beams from direct sunlight, lighting moving head fixtures, and lasers, which are focused directly towards the exterior housing and/or penetrate the front lens opening of ELATION lighting fixtures, can cause severe internal damage including burning to optics, dichroic color filters, glass and metal gobos, prisms, animation wheels, frost filters, iris, shutters, motors, belts, wiring, discharge lamps, and LEDs. **NOTE: NOT ALL FEATURES LISTED ARE AVAILABLE ON ALL FIXTURES.**


This issue is not specific only to ELATION lighting fixtures, it is a common issue with lighting fixtures from all manufacturers. Although there is no true way to fully prevent this issue from happening, the guidelines below can prevent any potential damage from occurring if followed. Contact ELATION Service for more details.

**DO NOT EXPOSE THE FIXTURE AND/OR FRONT LENS OPENING TO LIGHT BEAMS FROM DIRECT SUNLIGHT, OTHER LIGHTING MOVING HEAD FIXTURES, AND LASERS WHILE UNPACKING, INSTALLATION, USE, AND EXTENDED IDLE TIMES OUTDOORS. DO NOT FOCUS A LIGHT BEAM FROM ONE LIGHTING FIXTURE DIRECTLY TOWARDS ANOTHER.**

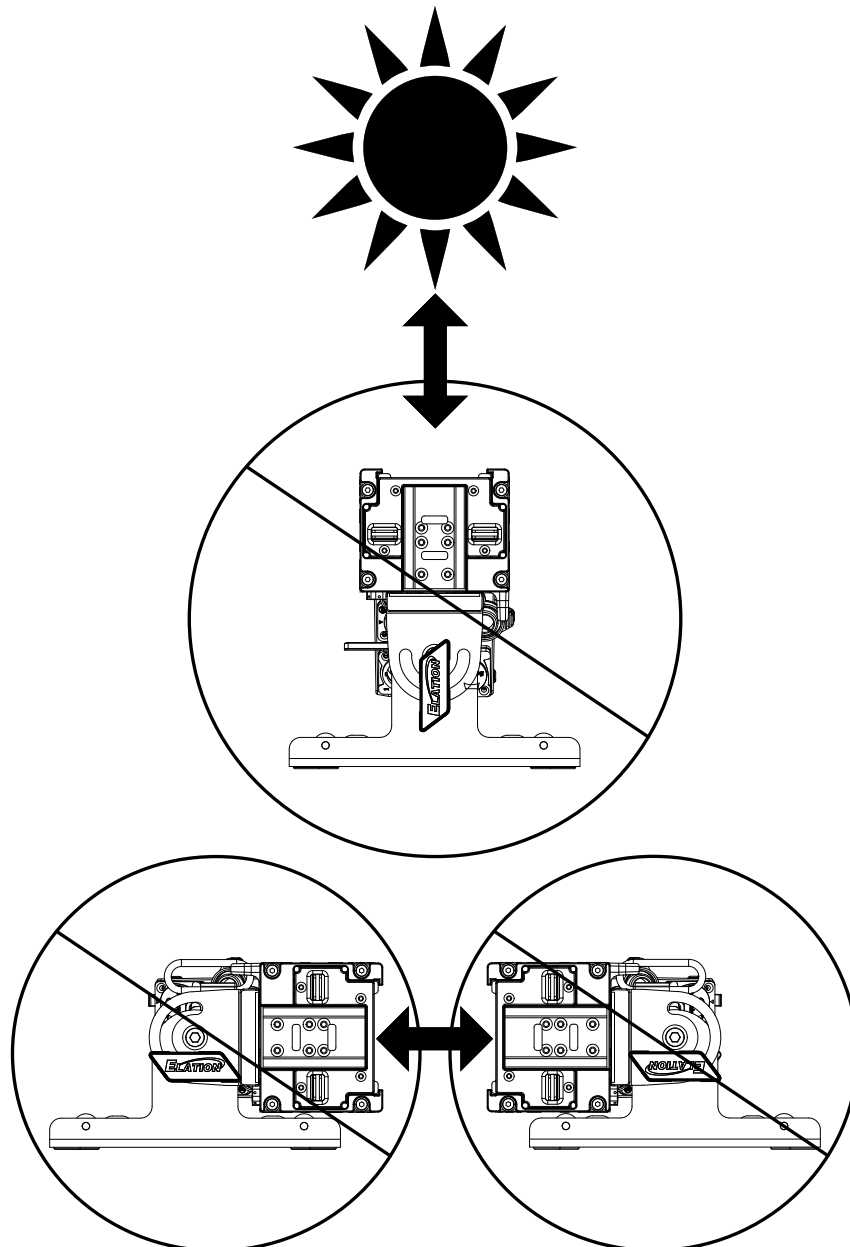


# ACCESSORY INSTALLATION - FROST LENS


1. Slide lock levers downward to retract the locking tabs.

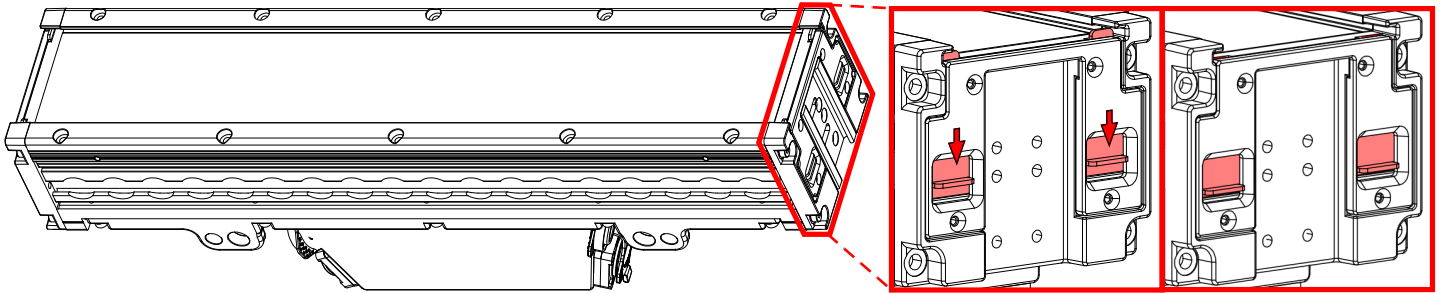

2. Install the Frost Lens by sliding it into the lens groove.

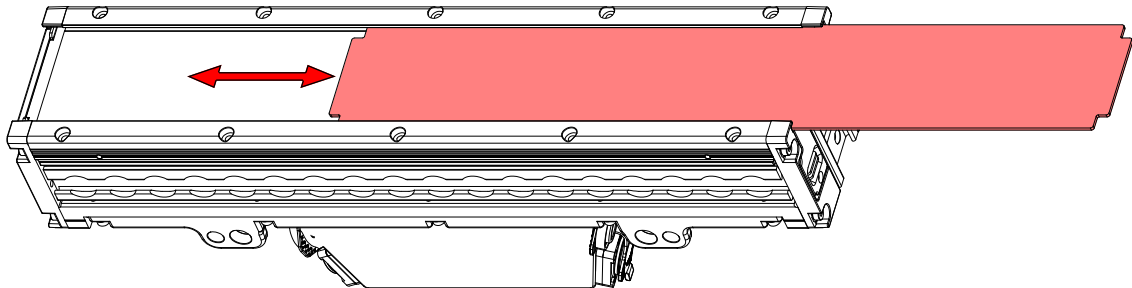


3. With the Frost Lens installed, slide levers upward to lock it in place.

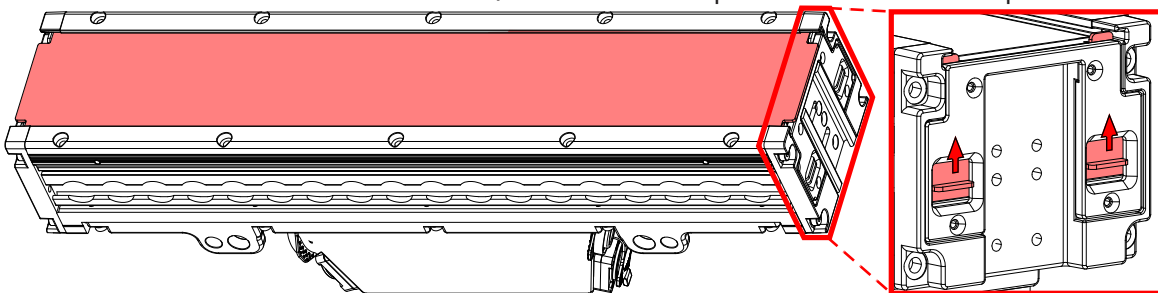


# ACCESSORY INSTALLATION - GLARE SHIELD


1. Locate two Glare Shield mounting screw holes on side of fixture.

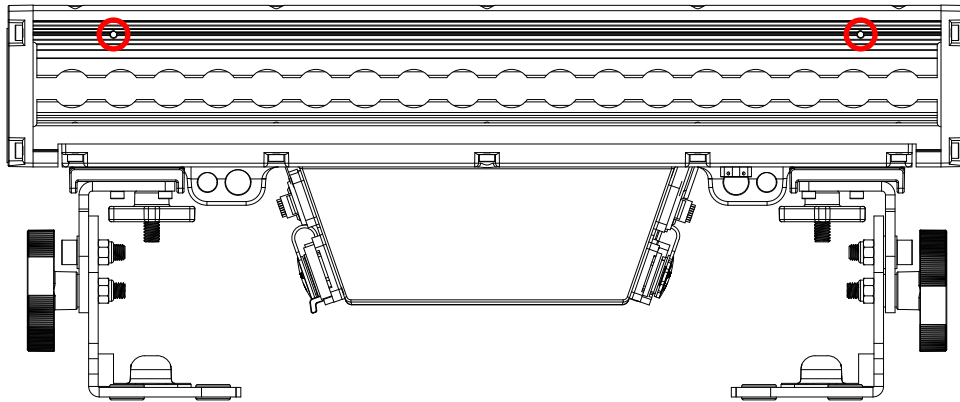

2. Align the thumbscrews of the Glare Shield with the mounting screw holes and insert them.

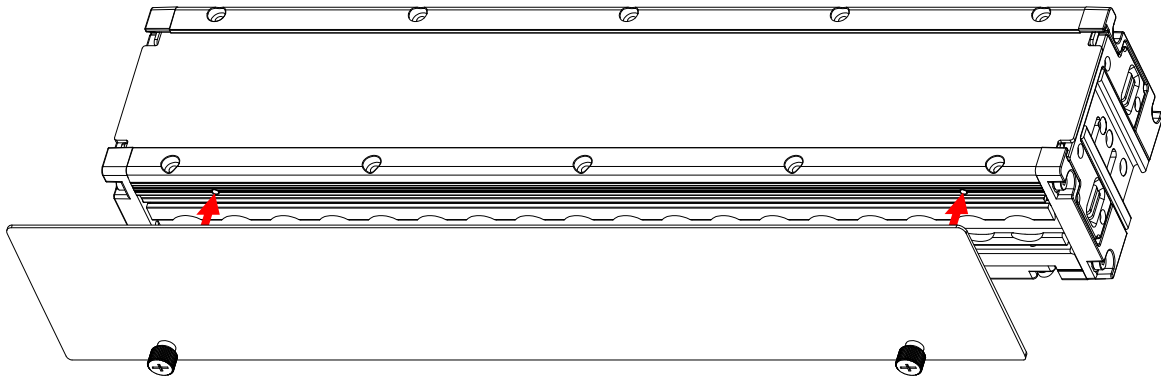

3. Tighten the two thumbscrews to secure Glare Shield. Thumbscrews can also be tightened with a Phillips screw driver.

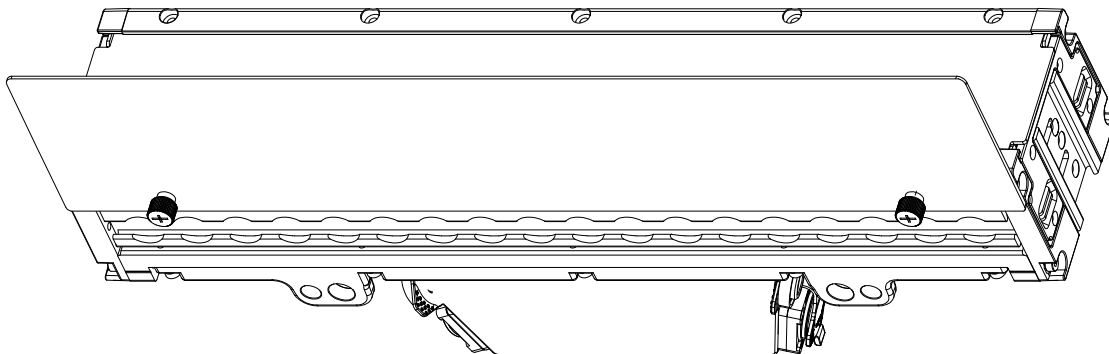

# REMOTE DEVICE MANAGEMENT (RDM)

**NOTE:** In order for RDM to work properly, RDM enabled equipment must be used throughout the entire system, including DMX data splitters and wireless systems.

Remote Device Management (RDM) is a protocol that sits on top of the DMX512 data standard for lighting, and allows the DMX systems of the fixtures to be modified and monitored remotely. This protocol is ideal for instances in which a unit is installed in a location that is not easily accessible.

With RDM, the DMX512 system becomes bi-directional, allowing a compatible RDM enabled controller to send out a signal to devices on the wire, as well as allowing the fixture to respond (known as a GET command). The controller can then use its SET command to modify settings that would typically have to be changed or viewed directly via the unit's display screen, including the DMX Address, DMX Channel Mode, and Temperature Sensors.

## FIXTURE RDM INFORMATION:

Device ID	Device Model ID	RDM Code	Personality ID
0x0049	0x0049 XXXX	22A6	Dimmer 1CH RGB 3CH Color 6CH Color & Dimmer 9CH CMY 13CH CMY Extended 16CH Standard 16CH Extended 22CH 2 Cell Standard 22CH 2 Cell Extended 34CH 6 Cell Standard 46CH 6 Cell Extended 82CH Raw 6 Cell 36CH

Please be aware that **not all RDM devices support all RDM features**, and therefore it is important to check beforehand to ensure that the equipment that you are considering includes all of the features that you require.

The following parameters are accessible in RDM on this device:

[0x0001]	Discovery Unique Branch
[0x0050]	Supported Parameters
[0x0060]	Device Info
[0x0070]	Product Detail ID List
[0x0080]	Device Model Description
[0x0081]	Manufacturer Label
[0x0082]	Device Label
[0x00C0]	Software Version Label
[0x00E0]	DMX Personality
[0x00E1]	DMX Personality Description
[0x00F0]	DMX Start Address
[0x0200]	Sensor Definition
[0x0201]	Sensor Value
[0x0400]	Device Hours
[0x1000]	Identify Device




# SYSTEM MENU

The fixture includes an easy to navigate system menu. The control panel display is located on the rear panel of the fixture (see image below) and provides access to the main system menu, where all necessary system adjustments are made to the fixture. During normal operation, pressing the MODE button once will access the fixture's main menu. Once in the main menu you can navigate through the different functions and access the sub-menus with the DOWN and UP buttons. Once you reach a field that requires adjusting, press the ENTER button to activate that field and use the DOWN and UP buttons to adjust the field. Pressing the ENTER button once more will confirm the setting. Exit the main menu at any time without making any adjustments by pressing the MODE button.

## PERMANENT INSTALLATION SETTING AND PHANTOM TOUCH

A phantom touch on an LCD screen is an unexpected, unprompted touch that seems to occur without any physical contact, like a raindrop. When installing any fixture in a permanent setting, we recommend setting your display to lock after 10-seconds and not the **OFF** setting. Units in a permanent setting are exposed to various conditions, if a unit is set to **OFF**, the display may interpret a raindrop as a command and change the fixture's setting through a phantom touch. Setting the display to lock after 10-seconds, and not setting a the display to **OFF**, prevents this scenario. To unlock the screen, press UP, DOWN, UP, DOWN, ENTER.

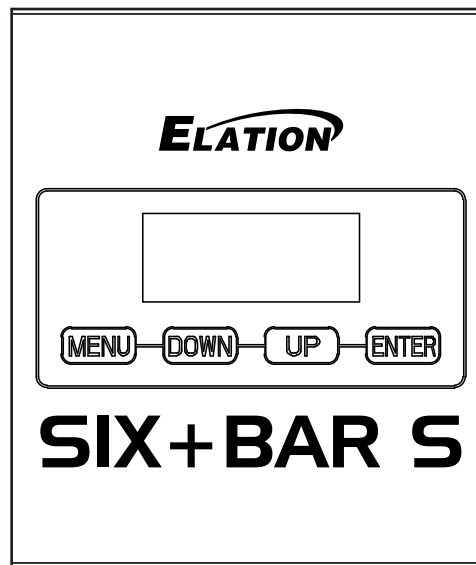

**AN ELATION C-LOADER II CAN ALSO BE USED TO UPDATE THE FIXTURE TO THE LATEST SOFTWARE.** To order this device, please contact Elation Support for further details.

Detailed instructions can be found online at [www.elationlighting.com](http://www.elationlighting.com).

**ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST**  
323-582-3322 | Fax 323-832-9142 | [support@elationlighting.com](mailto:support@elationlighting.com)

**ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET**  
+31 45 546 85 63 | Fax +31 45 546 85 96 | [support@elationlighting.eu](mailto:support@elationlighting.eu)

# SYSTEM MENU

MAIN MENU		OPTIONS / VALUES (Default Settings in <b>BOLD</b> )	
<b>DMX</b>	DMX Address	<b>001</b> - 512	
	DMX Mode	1CH Dimmer	
		3CH RGB	
		6CH Color	
		9CH Color & Dimmer	
		13CH CMY	
		16CH CMY Extended	
		<b>16CH Standard</b>	
		22CH Extended	
		22CH 2 Cell Standard	
		34CH 2 Cell Extended	
		46CH 6 Cell Standard	
		82CH 6 Cell Extended	
		36CH Raw 6 Cell	
		SixBar 500 Emulation (See Emulated DMX Traits on page 30)	6 Channel
			7 Channel
			11 Channel
			13 Channel
			36 Channel
	No DMX Status	<b>Hold Last</b> , Fade to Black, Standalone	
	Protocol	Select Signal	<b>DMX</b> / Art-Net / sACN / Klingnet /Aria In - DMX Out / DMX In - Aria Out
		Universe	0 - 32767 (Default = <b>1</b> )
		IP Address	2.x.x.x
		Subnet Mask	<b>255.0.0.0</b>
		Ethernet DMX Out	<b>Off</b> / On
	Aria	Aria Channel	<b>0</b> -14
<b>Control</b>	Manual Control	Dimmer	000% - <b>100%</b>
		Red	0 - <b>255</b>
		Green	0 - <b>255</b>
		Blue	0 - <b>255</b>
		Lime	0 - <b>255</b>
		Amber	0 - <b>255</b>
		UV	<b>0</b> - 255
		CCT	2400K - 8500K (Default = <b>6000K</b> ).
		Virtual Color	See <b>Color Macros</b>
	Primary	On / <b>Off</b>	
	Secondary	On / <b>Off</b>	
<b>Settings</b>	Dim Modes	<b>Standard</b> , Stage, TV, Architectural, Theatre, Stage 2	
		Dim Speed	0s - 10s (Default = <b>0.1s</b> )
		Dim to Warm	On / <b>Off</b>
	Dim Curves	Linear, Square, Square Inverse, <b>S-Curve</b>	
	LED Refresh Rate	900Hz - 1500Hz ( <b>1200 Hz</b> ), 2500Hz, 4000Hz, 5000Hz, 6000Hz, 10KHz, 15KHz, 20KHz, 25KHz	
	LED Power Limit	50%, 60%, 70%, 80%, 90%, <b>100%</b>	
	Pixel Flip	Yes / <b>No</b>	
	Display	Screen Delay	10s - 5min (Default = <b>1 min</b> )
		Screen Lock	<b>Off</b> , 10s - 5 min, Key Lock
		Rotate Display	Yes / <b>No</b> / Auto
	Reset Defaults	Yes / <b>No</b>	


# SYSTEM MENU



MAIN MENU		OPTIONS / VALUES (Default Settings in <b>BOLD</b> )	
Information	Time	Current Run Time	
		Total Run Time	
		Last Run Time	
	Temperature	Current	
		Max Resettable	
	Humidity	Current	
		Max Resettable	
	DMX Values	Red	
		Green	
		...	
Service (Passcode = 50)	Calibration	Product IDs	RDM UID
		Error Logs	Fixture Errors
		Software Version	Vx.x
		All Red 0 - 255	
		All Green 0 - 255	
		All Blue 0 - 255	
		All Lime 0 - 255	
		All Amber 0 - 255	
		All UV 0 - 255	
		Red 1 0 - 255	
		Green 1 0 - 255	
		Blue 1 0 - 255	
		Lime 1 0 - 255	
		Amber 1 0 - 255	
		UV 1 0 - 255	
		......	
		Red 6 0 - 255	
		Green 6 0 - 255	
		Blue 6 0 - 255	
		Lime 6 0 - 255	
		Amber 6 0 - 255	
		UV 6 0 - 255	
	Reset Last Run	Yes / No	
	Reset Error Logs	Yes / No	





## NOTE ON EMULATION DMX TRAITS (see page 30)

To ensure the SIX+ BAR S can be integrated seamlessly alongside original SixBar fixtures, great care has been taken to ensure that the new LED array colors match the original. A unique SixBar Emulation DMX mode has been developed, so that the new fixtures can be controlled with the same DMX mapping as the original. The color mixing has also been calibrated to virtually emulate the White LED included in the SixPar array and an output limit master setting has been added so your new lights don't overpower any older fixtures in the rig.

# DIMMER MODES & CURVES

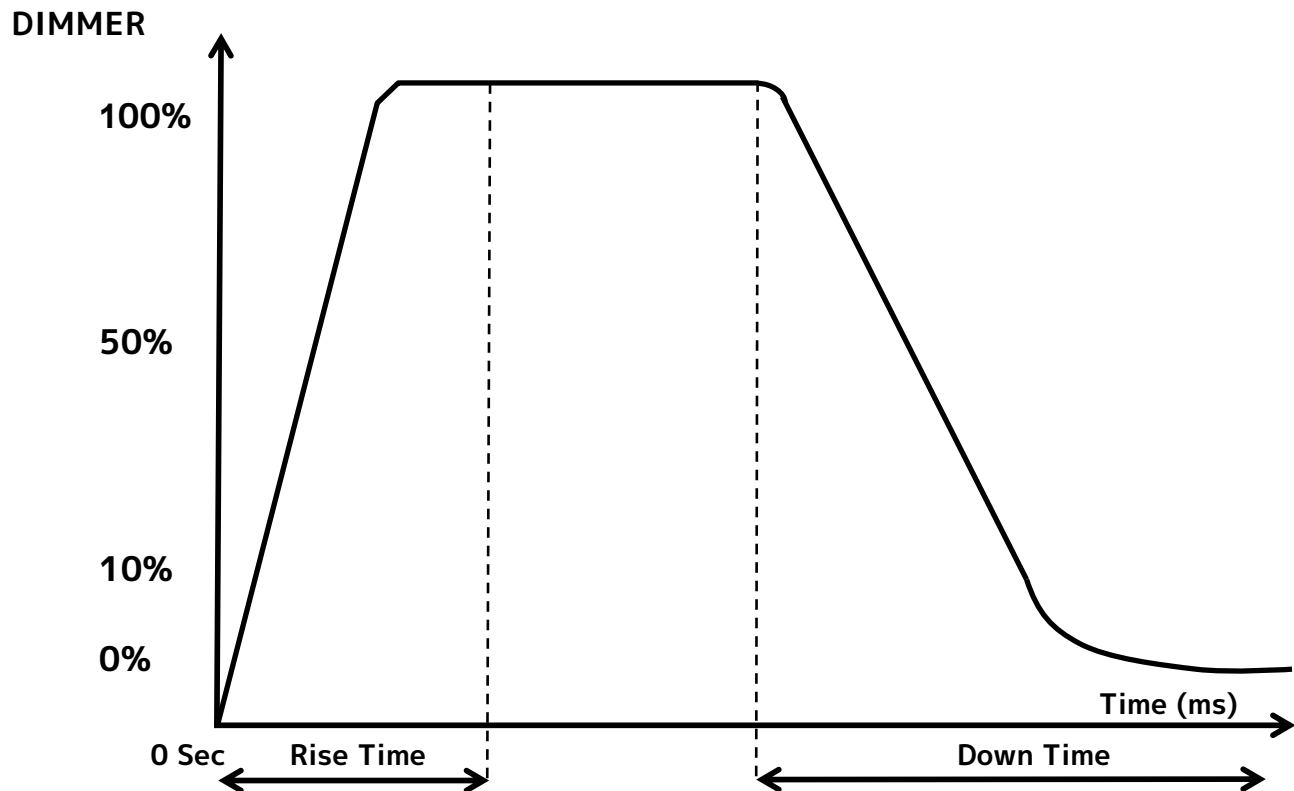

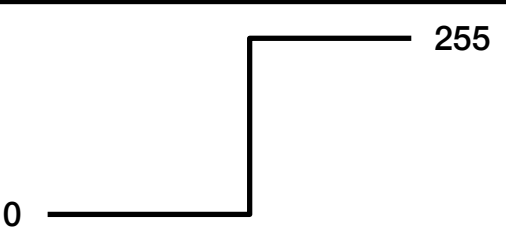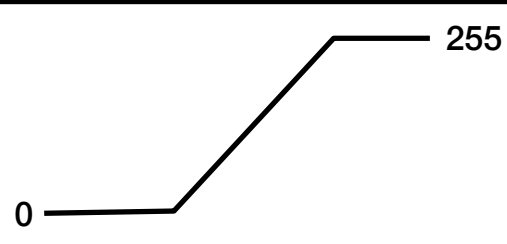Dimming Curve Ramp Effect	0 sec Fade Time		1 sec Fade Time	
				
	Rise Time (ms)	Down Time (ms)	Rise Time (ms)	Down Time (ms)
Standard (default)	0	0	0	0
Stage	780	1100	1540	1660
TV	1180	1520	1860	1940
Architectural	1380	1730	2040	2120
Theatre	1580	1940	2230	2280
Stage 2	0	1100	0	1660

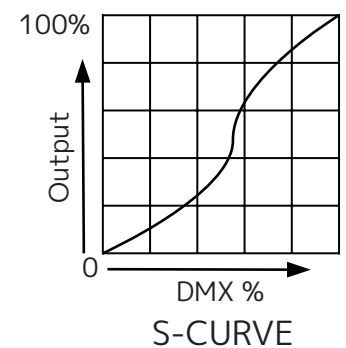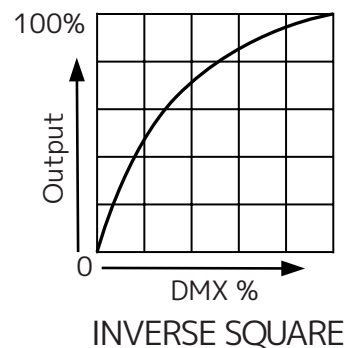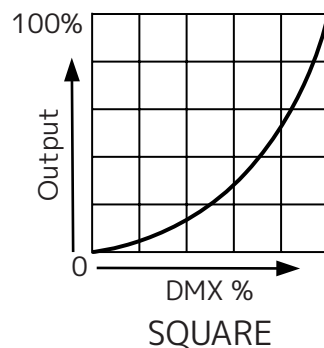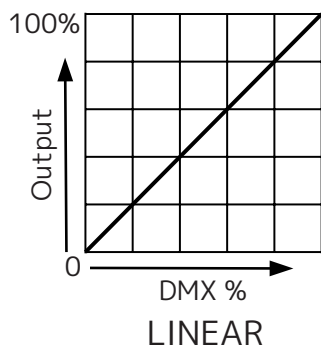

# DMX TRAITS

Dim. 1CH	RGB 3CH	Col 6CH	Col & Dim 9CH	CMY 13CH	CMY Ext 16CH	Std. 16CH	Ext. 22CH	2 Cell Std 22CH	2 Cell Ext 34CH	6 Cell Std 46CH	6 Cell Ext 82CH	Raw 6 Cell 36CH	DMX Values	Function	Snap	Default Value
1			1	1	1	1	1	1	1	1	1		0-255	<b>Dimmer</b> Intensity 0 → 100%		0
			2	2	2	2	2	2	2	2	2		0-255	<b>Dimmer Fine</b> Fine Intensity Control		0
			3	3	3	3	3	3	3	3	3			<b>Shutter/Strobe</b> 0-31 Shutter closed 32-63 No function (shutter open) 64-95 Strobe effect slow to fast 96-127 No function (shutter open) 128-159 Pulse-effect in sequences 160-191 No function (shutter open) 192-223 Random strobe effect slow to fast 224-255 No function (shutter open)	X	50
	1	1	4			4	4	4	4	4	4	1	0-255	<b>Red</b> Red Saturation 0 → 100%		0
							5		5		5		0-255	<b>Red Fine</b> Find Red Control		0
	2	2	5			5	6	5	6	5	6	2	0-255	<b>Green</b> Green Saturation 0 → 100%		0
							7		7		7		0-255	<b>Green Fine</b> Fine Green Control		0
	3	3	6			6	8	6	8	6	8	3	0-255	<b>Blue</b> Blue Saturation 0 → 100%		0
							9		9		9		0-255	<b>Blue Fine</b> Fine Blue Control		0
		4	7			7	10	7	10	7	10	4	0-255	<b>Lime</b> Lime Saturation 0 → 100%		0
							11		11		11		0-255	<b>Lime Fine</b> Fine Lime Control		0
		5	8			8	12	8	12	8	12	5	0-255	<b>Amber</b> Amber Saturation 0 → 100%		0
							13		13		13		0-255	<b>Amber Fine</b> Fine Amber Control		0
		6	9			9	14	9	14	9	14	6	0-255	<b>UV</b> UV Saturation 0 → 100%		0
							15		15		15		0-255	<b>UV Fine</b> Fine UV Control		0
								10	16	10	16	7	0-255	<b>Red 2</b> Red Saturation 0 → 100%		0
									17		17		0-255	<b>Red Fine 2</b> Fine Red Control		0
								11	18	11	18	8	0-255	<b>Green 2</b> Green Saturation 0 → 100%		0
									19		19		0-255	<b>Green Fine 2</b> Fine Green Control		0
								12	20	12	20	9	0-255	<b>Blue 2</b> Blue Saturation 0 → 100%		0
									21		21		0-255	<b>Blue Fine 2</b> Fine Blue Control		0
								13	22	13	22	10	0-255	<b>Lime 2</b> Lime Saturation 0 → 100%		0
									23		23		0-255	<b>Lime Fine 2</b> Fine Lime Control		0
								14	24	14	24	11	0-255	<b>Amber 2</b> Amber Saturation 0 → 100%		0
									25		25		0-255	<b>Amber Fine 2</b> Fine Amber Control		0
								15	26	15	26	12	0-255	<b>UV 2</b> UV Saturation 0 → 100%		0
									27		27		0-255	<b>UV Fine 2</b> Fine UV Control		0

# DMX TRAITS

Dim. 1CH	RGB 3CH	Col 6CH	Col & Dim 9CH	CMY 13CH	CMY Ext 16CH	Std. 16CH	Ext. 22CH	2 Cell Std 22CH	2 Cell Ext 34CH	6 Cell Std 46CH	6 Cell Ext 82CH	Raw 6 Cell 36CH	DMX Values	Function	Snap	Default Value
										16	28	13	0-255	<b>Red 3</b>		0
														Red Saturation 0 → 100%		
											29		0-255	<b>Red Fine 3</b>		0
														Fine Red Control		
										17	30	14	0-255	<b>Green 3</b>		0
														Green Saturation 0 → 100%		
											31		0-255	<b>Green Fine 3</b>		0
														Fine Green Control		
										18	32	15	0-255	<b>Blue 3</b>		0
														Blue Saturation 0 → 100%		
											33		0-255	<b>Blue Fine 3</b>		0
														Fine Blue Control		
										19	34	16	0-255	<b>Lime 3</b>		0
														Lime Saturation 0 → 100%		
											35		0-255	<b>Lime Fine 3</b>		0
														Fine Lime Control		
										20	36	17	0-255	<b>Amber 3</b>		0
														Amber Saturation 0 → 100%		
											37		0-255	<b>Amber Fine 3</b>		0
														Fine Amber Control		
										21	38	18	0-255	<b>UV 3</b>		0
														UV Saturation 0 → 100%		
											39		0-255	<b>UV Fine 3</b>		0
														Fine UV Control		
										22	40	19	0-255	<b>Red 4</b>		0
														Red Saturation 0 → 100%		
											41		0-255	<b>Red Fine 4</b>		0
														Fine Red Control		
										23	42	20	0-255	<b>Green 4</b>		0
														Green Saturation 0 → 100%		
											43		0-255	<b>Green Fine 4</b>		0
														Fine Green Control		
										24	44	21	0-255	<b>Blue 4</b>		0
														Blue Saturation 0 → 100%		
											45		0-255	<b>Blue Fine 4</b>		0
														Fine Blue Control		
										25	46	22	0-255	<b>Lime 4</b>		0
														Lime Saturation 0 → 100%		
											47		0-255	<b>Lime Fine 4</b>		0
														Fine Lime Control		
										26	48	23	0-255	<b>Amber 4</b>		0
														Amber Saturation 0 → 100%		
											49		0-255	<b>Amber Fine 4</b>		0
														Fine Amber Control		
										27	50	24	0-255	<b>UV 4</b>		0
														UV Saturation 0 → 100%		
											51		0-255	<b>UV Fine 4</b>		0
														Fine UV Control		

# DMX TRAITS

Dim. 1CH	RGB 3CH	Col 6CH	Col & Dim 9CH	CMY 13CH	CMY Ext 16CH	Std. 16CH	Ext. 22CH	2 Cell Std 22CH	2 Cell Ext 34CH	6 Cell Std 46CH	6 Cell Ext 82CH	Raw 6 Cell 36CH	DMX Values	Function	Snap	Default Value
										28	52	25	0-255	Red 5		0
														Red Saturation 0 → 100%		
											53		0-255	Red Fine 5		0
														Fine Red Control		
										29	54	26	0-255	Green 5		0
														Green Saturation 0 → 100%		
											55		0-255	Green Fine 5		0
														Fine Green Control		
										30	56	27	0-255	Blue 5		0
														Blue Saturation 0 → 100%		
											57		0-255	Blue Fine 5		0
														Fine Blue Control		
										31	58	28	0-255	Lime 5		0
														Lime Saturation 0 → 100%		
											59		0-255	Lime Fine 5		0
														Fine Lime Control		
										32	60	29	0-255	Amber 5		0
														Amber Saturation 0 → 100%		
											61		0-255	Amber Fine 5		0
														Fine Amber Control		
										33	62	0	0-255	UV 5		0
														UV Saturation 0 → 100%		
											63		0-255	UV Fine 5		0
														Fine UV Control		
										34	64	31	0-255	Red 6		0
														Red Saturation 0 → 100%		
											65		0-255	Red Fine 6		0
														Fine Red Control		
										35	66	32	0-255	Green 6		0
														Green Saturation 0 → 100%		
											67		0-255	Green Fine 6		0
														Fine Green Control		
										36	68	33	0-255	Blue 6		0
														Blue Saturation 0 → 100%		
											69		0-255	Blue Fine 6		0
														Fine Blue Control		
										37	70	34	0-255	Lime 6		0
														Lime Saturation 0 → 100%		
											71		0-255	Lime Fine 6		0
														Fine Lime Control		
										38	72	35	0-255	Amber 6		0
														Amber Saturation 0 → 100%		
											73		0-255	Amber Fine 6		0
														Fine Amber Control		
										39	74	36	0-255	UV 6		0
														UV Saturation 0 → 100%		
											75		0-255	UV Fine 6		0
														Fine UV Control		



# DMX TRAITS

Dim. 1CH	RGB 3CH	Col 6CH	Col & Dim 9CH	CMY 13CH	CMY Ext 16CH	Std. 16CH	Ext. 22CH	2 Cell Std 22CH	2 Cell Ext 34CH	6 Cell Std 46CH	6 Cell Ext 82CH	Raw 6 Cell 36CH	DMX Values	Function	Snap	Default Value
				4	4								0-255	<b>Cyan</b> Cyan Saturation 0 → 100%		0
					5								0-255	<b>Cyan Fine</b> Fine Cyan Control		0
				5	6								0-255	<b>Magenta</b> Magenta Saturation 0 → 100%		0
					7								0-255	<b>Magenta Fine</b> Fine Magenta Control		0
				6	8								0-255	<b>Yellow</b> Yellow Saturation 0 → 100%		0
					9								0-255	<b>Yellow Fine</b> Fine Yellow Control		0
				7	10	10	16	16	28	40	76			<b>Variable CCT</b> 0-23 Open 24-85 2400K → 8500K (See Sheet) 86-255 8500K		0
				8	11	11	17	17	29	41	77			<b>Color Wheel</b> 0 Open 1-179 Virtual Swatch Book (See Table) <b>Color Scroll</b> 180-201 Clockwise Fast → Slow 202-207 Stop 208-229 Counter-clockwise Slow → Fast 230-234 Open <b>Random Slots</b> 235-239 Fast 240-244 Medium 245-249 Slow 250-255 Open		0
				9	12	12	18	18	30	42	78		0-255	<b>Effect Selection</b> FX Selection 1 → 255	X	0
				10	13	13	19	19	31	43	79			<b>Effect Speed</b> 0-126 Slow → Fast 127-128 Stop 129-255 Rev Fast → Slow		0
				11	14	14	20	20	32	44	80			<b>Effect Offset</b> 0 Idle 1 Fixture Offset 10 Degrees 2 Fixture Offset 20 Degrees 3-34 Fixture Offset... 35 Fixture Offset 350 Degrees 36 Synchronized 37-49 Random Fixture Offset 50-59 Random Pixel Order 60-69 Random Steps 70-79 Idle <b>Effect Fade</b> 80-89 Sinewave- Cross 90-99 Sinewave- Full 100-109 Sawtooth- Cross 110-119 Sawtooth- Full 120-129 Ramp Up 130-139 Ramp Down 140-149 Steps 150-255 Idle	X	0

# DMX TRAITS

Dim. 1CH	RGB 3CH	Col 6CH	Col & Dim 9CH	CMY 13CH	CMY Ext 16CH	Std. 16CH	Ext. 22CH	2 Cell Std 22CH	2 Cell Ext 34CH	6 Cell Std 46CH	6 Cell Ext 82CH	Raw 6 Cell 36CH	DMX Values	Function	Snap	Default Value
				12	15	15	21	21	33	45	81			<b>Dim Modes</b>	X	0
													0-20	Standard		
													21-40	Stage		
													41-60	TV		
													61-80	Architectural		
													81-100	Theatre		
													101-120	Stage 2		
														<b>Dimmer Delay Time</b>		
													121	0s		
													122	0.1s		
													123	0.2s		
													124	0.3s		
													125	0.4s		
													126	0.5s		
													127	0.6s		
													128	0.7s		
													129	0.8s		
													130	0.9s		
													131	1.0s		
													132	1.5s		
													133	2.0s		
													134	3.0s		
													135	4.0s		
													136	5.0s		
													137	6.0s		
													138	7.0s		
													139	8.0s		
													140	9.0s		
													141	10s		
													142-149	Idle		
														<b>Dim to Warm</b>		
													150-154	DTW On		
													155-159	DTW Off		
													160-255	Idle		
				13	16	16	22	22	34	46	82			<b>Control</b>	X	0
													0-59	Idle		
													60-69	Flip Pixel Order		
													70-79	Default Pixel Order		
													80-99	Idle		
														<b>Refresh Rate (Hz)</b>		
													100	900		
													101	910		
													102	920		
													103	930		
													104	940		
													105	950		
													106	960		
													107	970		
													108	980		
													109	990		
													110	1000		
													111	1010		
													112	1020		
													113	1030		
													114	1040		
													115	1050		

# DMX TRAITS

Dim. 1CH	RGB 3CH	Col 6CH	Col & Dim 9CH	CMY 13CH	CMY Ext 16CH	Std. 16CH	Ext. 22CH	2 Cell Std 22CH	2 Cell Ext 34CH	6 Cell Std 46CH	6 Cell Ext 82CH	Raw 6 Cell 36CH	DMX Values	Function	Snap	Default Value
													116	1060		
													117	1070		
													118	1080		
													119	1090		
													120	1100		
													121	1110		
													122	1120		
													123	1130		
													124	1140		
													125	1150		
													126	1160		
													127	1170		
													128	1180		
													129	1190		
													130	1200		
													131	1210		
													132	1220		
													133	1230		
													134	1240		
													135	1250		
													136	1260		
													137	1270		
													138	1280		
													139	1290		
													140	1300		
													141	1310		
													142	1320		
													143	1330		
													144	1340		
				13	16	16	22	22	34	46	82		145	1350	X	0
													146	1360		
													147	1370		
													148	1380		
													149	1390		
													150	1400		
													151	1410		
													152	1420		
													153	1430		
													154	1440		
													155	1450		
													156	1460		
													157	1470		
													158	1480		
													159	1490		
													160	1500		
													161	2500		
													162	4000		
													163	5000		
													164	6000		
													165	10000		
													166	15000		
													167	20000		
													168	25000		
													169-200	Idle		
														<b>Dimmer Curves</b>		
													201-210	Dimmer Curve: Linear (Default)		
													211-220	Dimmer Curve: Square		
													221-230	Dimmer Curve: Inverse Square		
													231-240	Dimmer Curve: S-Curve		
													241-255	Idle		

# EMULATION DMX TRAITS FOR SIXBAR 500

6CH	7CH	11CH	13CH	36CH	DMX Values	Function	Snap	Default Value
1	1	1	1	1	0-255	<b>Red</b> Red Saturation 0 → 100%		0
2	2	2	2	2	0-255	<b>Green</b> Green Saturation 0 → 100%		0
3	3	3	3	3	0-255	<b>Blue</b> Blue Saturation 0 → 100%		0
4	4	4	4	4	0-255	<b>White</b> White Saturation 0 → 100%		0
5	5	5	5	5	0-255	<b>Amber</b> Amber Saturation 0 → 100%		0
6	6	6	6	6	0-255	<b>UV</b> UV Saturation 0 → 100%		0
				7	0-255	<b>Red 2</b> Red Saturation 0 → 100%		0
				8	0-255	<b>Green 2</b> Green Saturation 0 → 100%		0
				9	0-255	<b>Blue 2</b> Blue Saturation 0 → 100%		0
				10	0-255	<b>White 2</b> White Saturation 0 → 100%		0
				11	0-255	<b>Amber 2</b> Amber Saturation 0 → 100%		0
				12	0-255	<b>UV 2</b> UV Saturation 0 → 100%		0
				13	0-255	<b>Red 3</b> Red Saturation 0 → 100%		0
				14	0-255	<b>Green 3</b> Green Saturation 0 → 100%		0
				15	0-255	<b>Blue 3</b> Blue Saturation 0 → 100%		0
				16	0-255	<b>White 3</b> White Saturation 0 → 100%		0
				17	0-255	<b>Amber 3</b> Amber Saturation 0 → 100%		0
				18	0-255	<b>UV 3</b> UV Saturation 0 → 100%		0
				19	0-255	<b>Red 4</b> Red Saturation 0 → 100%		0
				20	0-255	<b>Green 4</b> Green Saturation 0 → 100%		0
				21	0-255	<b>Blue 4</b> Blue Saturation 0 → 100%		0
				22	0-255	<b>White 4</b> White Saturation 0 → 100%		0
				23	0-255	<b>Amber 4</b> Amber Saturation 0 → 100%		0
				24	0-255	<b>UV 4</b> UV Saturation 0 → 100%		0

# EMULATION DMX TRAITS FOR SIXBAR 500

6CH	7CH	11CH	13CH	36CH	DMX Values	Function	Snap	Default Value
				25	0-255	<b>Red 5</b> Red Saturation 0 → 100%		0
				26	0-255	<b>Green 5</b> Green Saturation 0 → 100%		0
				27	0-255	<b>Blue 5</b> Blue Saturation 0 → 100%		0
				28	0-255	<b>White 5</b> White Saturation 0 → 100%		0
				29	0-255	<b>Amber 5</b> Amber Saturation 0 → 100%		0
				30	0-255	<b>UV 5</b> UV Saturation 0 → 100%		0
				31	0-255	<b>Red 6</b> Red Saturation 0 → 100%		0
				32	0-255	<b>Green 6</b> Green Saturation 0 → 100%		0
				33	0-255	<b>Blue 6</b> Blue Saturation 0 → 100%		0
				34	0-255	<b>White 6</b> White Saturation 0 → 100%		0
				35	0-255	<b>Amber 6</b> Amber Saturation 0 → 100%		0
				36	0-255	<b>UV 6</b> UV Saturation 0 → 100%		0
	7	7	7		0-255	<b>Dimmer</b> Intensity 0 → 100%		0
		8	8			<b>Shutter/Strobe</b> 0-31 Shutter closed 32-63 No function (shutter open) 64-95 Strobe effect slow to fast 96-127 No function (shutter open) 128-159 Pulse-effect in sequences 160-191 No function (shutter open) 192-223 Random strobe effect slow to fast 224-255 No function (shutter open)	X	50
			9			<b>Color Macros</b> 0-3 OFF 4-7 RED 8-11 GREEN 12-15 BLUE 16-19 WHITE 20-23 AMBER 24-27 UV 28-31 RED + GREEN 32-35 RED + BLUE 36-39 RED + WHITE 40-43 RED + AMBER 44-47 RED + UV 48-51 GREEN + BLUE 52-55 GREEN + WHITE 56-59 GREEN + AMBER 60-63 GREEN + UV 64-67 BLUE + WHITE 68-71 BLUE + AMBER 72-75 BLUE + UV 76-79 WHITE + AMBER 80-83 WHITE + UV 84-87 AMBER + UV 88-91 RED + GREEN + BLUE 92-95 RED + GREEN + WHITE 96-99 RED + GREEN + AMBER 100-103 RED + GREEN + UV 104-107 RED + BLUE + WHITE 108-111 RED + BLUE + AMBER 112-115 RED + BLUE + UV 116-119 RED + WHITE + AMBER 120-123 RED + WHITE + UV	X	0

# EMULATION DMX TRAITS FOR SIXBAR 500

6CH	7CH	11CH	13CH	36CH	DMX Values	Function	Snap	Default Value
			9			<b>Color Macros</b>	X	0
					124-127	RED + AMBER + UV		
					128-131	GREEN + BLUE + WHITE		
					132-135	GREEN + BLUE + AMBER		
					136-139	GREEN + BLUE + UV		
					140-143	GREEN + WHITE + AMBER		
					144-147	GREEN + WHITE + UV		
					148-151	GREEN + AMBER + UV		
					152-155	BLUE + WHITE + AMBER		
					156-159	BLUE + WHITE + UV		
					160-163	BLUE + AMBER + UV		
					164-167	WHITE + AMBER + UV		
					168-171	RED + GREEN + BLUE + WHITE		
					172-175	RED + GREEN + BLUE + AMBER		
					176-179	RED + GREEN + BLUE + UV		
					180-183	RED + GREEN + WHITE + AMBER		
					184-187	RED + GREEN + WHITE + UV		
					188-191	RED + GREEN + AMBER + UV		
					192-195	RED + BLUE + WHITE + AMBER		
					196-199	RED + BLUE + WHITE + UV		
					200-203	RED + BLUE + AMBER + UV		
					204-207	RED + WHITE + AMBER + UV		
					208-211	GREEN + BLUE + WHITE + AMBER		
					212-215	GREEN + BLUE + WHITE + UV		
					216-219	GREEN + BLUE + AMBER + UV		
					220-223	GREEN + WHITE + AMBER + UV		
					224-227	BLUE + WHITE + AMBER + UV		
					228-231	RED + GREEN + BLUE + WHITE + AMBER		
					232-235	RED + GREEN + BLUE + WHITE + UV		
					236-239	RED + GREEN + BLUE + AMBER + UV		
					240-243	RED + GREEN + WHITE + AMBER + UV		
					244-247	RED + BLUE + WHITE + AMBER + UV		
					248-251	GREEN + BLUE + WHITE + AMBER + UV		
					252-255	RED + GREEN + BLUE + WHITE + AMBER + UV		
		9	10			<b>Program Macros</b>	X	0
					0-10	No Function		
					11-26	Program 01 - Dream		
					27-43	Program 02 - Meteor		
					44-60	Program 03 - Fade		
					61-76	Program 04 - Change		
					77-93	Program 05 - Flow 1		
					94-110	Program 06 - Flow 2		
					111-126	Program 07 - Flow 3		
					127-143	Program 08 - Flow 4		
					144-160	Program 09 - Flow 5		
					161-176	Program 10 - Flow 6		
					177-193	Program 11 - Flow 7		
					194-210	Program 12 - Flow 8		
					211-226	Program 13 - Flow 9		
					227-255	No Function		
		10	11		0-255	<b>Program Speed</b>		0
						Slow → Fast		
		11	12		0-255	<b>Program Fade</b>		0
						Slow → Fast		
			13			<b>Dimming Modes</b>	X	0
					0-20	Standard		
					21-40	Stage		
					41-60	TV		
					61-80	Architectural		
					81-100	Theatre		
					101-255	No Function		

# PIXEL GROUPING & FLIP DIAGRAM

## Pixel Grouping

1	2	3	4	5	6
---	---	---	---	---	---

## Flip Diagram

6	5	4	3	2	1
---	---	---	---	---	---



# COLOR TEMPERATURE

DMX VALUE	COLOR TEMPERATURE (K)	DMX VALUE	COLOR TEMPERATURE (K)
24	2400	63	6300
25	2500	64	6400
26	2600	65	6500
27	2700	66	6600
28	2800	67	6700
29	2900	68	6800
30	3000	69	6900
31	3100	70	7000
32	3200	71	7100
33	3300	72	7200
34	3400	73	7300
35	3500	74	7400
36	3600	75	7500
37	3700	76	7600
38	3800	77	7700
39	3900	78	7800
40	4000	79	7900
41	4100	80	8000
42	4200	81	8100
43	4300	82	8200
44	4400	83	8300
45	4500	84	8400
46	4600	85	8500
47	4700		
48	4800		
49	4900		
50	5000		
51	5100		
52	5200		
53	5300		
54	5400		
55	5500		
56	5600		
57	5700		
58	5800		
59	5900		
60	6000		
61	6100		
62	6200		

# VIRTUAL COLORS

VALUE	FILTER #	COLOR	VALUE	FILTER #	COLOR
1	7	Pale Yellow	31	126	Mauve
2	103	Straw	32	49	Medium Purple
3	151	Gold Tint	33	58	Lavender
4	100	Spring Yellow	34	199	Palace Blue
5	10	Medium Yellow	35	119	Dark Blue
6	101	Yellow	36	132	Medium Blue
7	104	Deep Amber	37	120	Deep Blue
8	15	Deep Straw	38	165	Daylight Blue
9	179	Loving Amber	39	161	Slate Blue
10	21	Gold Amber	40	118	Light Blue
11	105	Orange	41	68	Sky Blue
12	158	Deep Orange	42	143	Pale Navy Blue
13	22	Dark Amber	43	131	Marine Blue
14	778	Millennium Gold	44	115	Peacock Blue
15	135	Deep Golden Amber	45	172	Lagoon Blue
16	24	Scarlet	46	116	Medium Blue Green
17	106	Primary Red	47	90	Dark Yellow Green
18	26	Bright Red	48	139	Primary Green
19	27	Medium Red	49	122	Fern Green
20	19	Fire	50	89	Moss Green
21	157	Pink	51	124	Dark Green
22	36	Medium Pink	52	88	Lime Green
23	111	Dark Pink	53	138	Pale Green
24	128	Bright Pink	54	203	Quarter CT Blue
25	148	Bright Rose	55	202	Half CT Blue
26	332	Special Rose Pink	56	201	FULL CT Blue
27	793	Vanity Fair	57	200	Double CT Blue
28	113	Magenta	58	206	Quarter CT Orange
29	46	Dark Magenta	59	205	Half CT Orange
30	48	Rose Purple	60	204	FULL CT Orange

## ERROR CODES

Error Codes subject to change without notice	
ERROR CODES	DESCRIPTION
<b>Temp Error</b>	This message appears when there is a heating error.

# MAINTENANCE GUIDELINES



**DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!**

## CLEANING

Frequent cleaning is recommended to ensure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean periodically with a soft cloth to avoid dirt/debris accumulation.

**NEVER** use alcohol, solvents, or ammonia-based cleaners.

## MAINTENANCE

Regular inspections are recommended to insure proper function and extended life. There are no user serviceable parts inside this fixture. Please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from an authorized Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments.

# SPECIFICATIONS

## SOURCE

(6) x 20W RGBLA+ UV LEDs  
30,000 Hour Average LED Life\*  
\*May vary depending on several factors including but not limited to:  
Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control and Dimming.

## PHOTOMETRIC DATA

Total Lumen Output:  
4,435 (Goniometer)  
CRI- 90.9  
TLCI- 80

## No Lens

Beam Angle: 20°  
Field Angle: 33°

## Included Frost

Beam Angle: 30°  
Field Angle: 60°

## EFFECTS

Full Pixel Control  
Electronic Dimmer and Strobe  
Variable 16-bit Dimming Modes and Curves

## COLOR

RGBLA+ UV Color Array  
CMY Emulation  
Variable CCT 2400K - 8500K  
Dim-to-Warm Fade  
Virtual Gel Swatch Book

## CONTROL / CONNECTIONS

13 DMX Channel Modes (1ch, 3ch, 6ch, 9ch, 13ch, 16ch, 16ch, 22ch, 22ch, 34ch, 46ch, 82ch, 36ch)  
5 Six Bar 500 Emulation DMX Channel Modes (6ch, 7ch, 11ch, 13ch, 36ch)  
4 Button Control Panel, LED Display  
Aria x2 Wireless Device Management  
RDM (Remote Device Management)  
IP65 5pin XLR DMX In/Out  
IP65 RJ45 Ethernet In/Out (Art-Net, sACN, KlingNet)  
IP65 Locking Power Cable In/Out

## SIZE / WEIGHT

Length: 19.7" (500mm)  
Width: 6.9" (176mm)  
Vertical Height: 8.1" (206mm)  
Weight: 14.88 lbs / 6.75kg

## ELECTRICAL / THERMAL

AC 100-240V - 50/60Hz  
110W Max Power Consumption  
Power Thru Capacity: 10A (10 units @110V:  
21 Units; @240V)  
5°F to 113°F (-15°C to 45°C)  
BTU/hr (+/- 10%) 375.1

## INCLUDED ITEMS

Safety Cable  
IP65 Locking Power Cable  
Frost Filter  
Glare Shield  
Fixture Interconnect Splice

## OPTIONAL ITEMS


BAR S NSP Lens (BLS021)  
BAR S WFL Lens (BLS061)  
BAR S XFL Lens (BLS101)  
BAR S L140 Lens (BLS141)  
BAR S L1060 Lens (BLS161)  
# 8050000053 - Omega Bracket (Qty.2)  
Fixture Interconnect Splice Package (FISP06)  
L-Track to M10 Adapter, 70mm (LTR001)  
L-Track to M10 Adapter, 44.5mm (LTR008)  
L Track C-Clamp & Adapter Assembly, 70mm (LTR100)  
L Track C-Clamp & Adapter Assembly, 44.5mm (LTR112)  
Interconnect Clamp Adapter (FICA01)

## APPROVALS / RATINGS

CE | cETLus | IP65 | FCC | UKCA

# DIMENSION DRAWINGS

Drawings not to scale

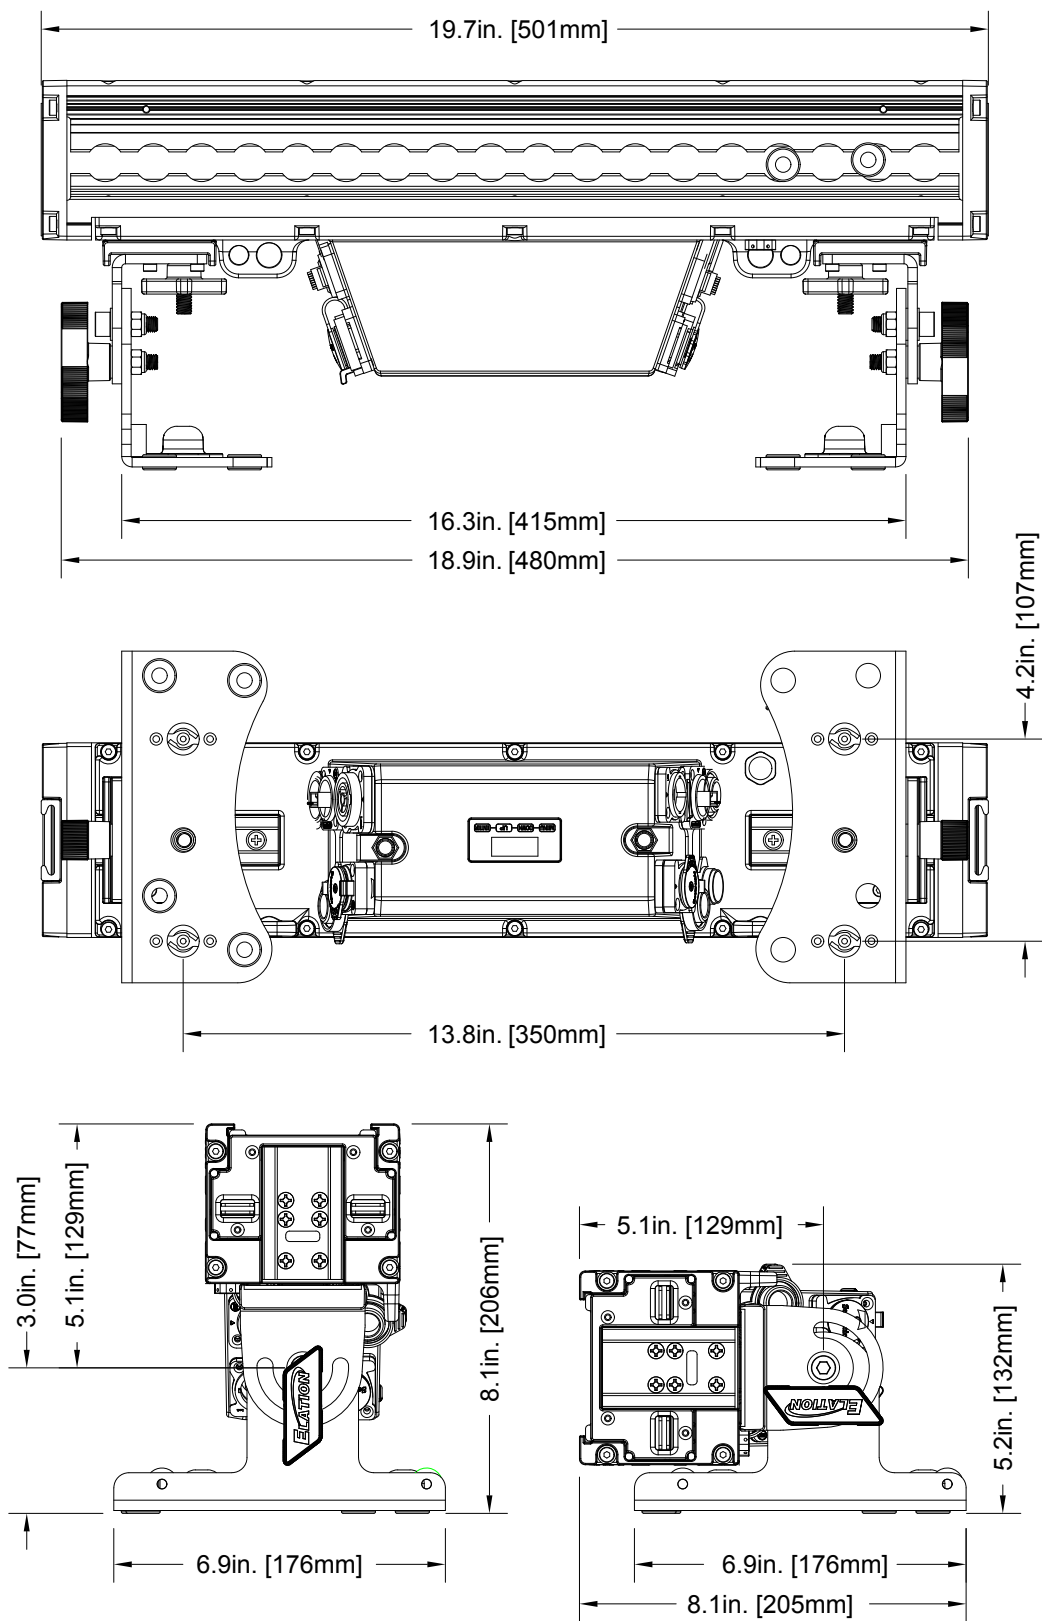

# ORDERING INFORMATION

SKU US/EU		ITEM DESCRIPTION
SIX226	1237000341	SIX+ BAR S
BLS061	1223200108	BAR S WFL
BLS021	1223200117	BAR S NSP
BLS101	1223200116	BAR S XFL
BLS141	1223200115	BAR S L140
BLS161	1223200114	BAR S L1060
SPHDY	1236300112	SÖL/PULSE HD YOKE
FISP06	1236300110	Fixture Interconnect Splice Package
LTR001		L-Track to M10 Adapter, 70mm
LTR008		L-Track to M10 Adapter, 44.5mm
LTR100		L-Track C-Clamp & Adapter Assembly, 70mm
LTR112		L-Track C-Clamp & Adapter Assembly, 44.5mm
TRIGGER CLAMP	N/A	Heavy Duty Wrap Around Hook Style Clamp
STR527	N/A	5 ft. (1.5m) IP65 5pin XLR Cable



## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## FCC RADIO FREQUENCY INTERFERENCE WARNINGS & INSTRUCTIONS

This product has been tested and found to comply with the limits as per Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device uses and can radiate radio frequency energy and, if not installed and used in accordance with the included instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the device.
- Increase the separation between the device and the receiver.
- Connect the device to an electrical outlet on a circuit different from which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

